



YAMAHA®

SRB20A Reset Procedure



Initializing the sound bar

Reset the settings of the sound bar to the factory presets.

1

Make sure the sound bar is turned off via the power button on the top of the unit.

2

While holding down VOLUME UP on the sound bar, press the POWER button on the bar and keep doing this until all indicators flash.

Once all the indicator lights on the bar flash, initialization has been performed.

When the initialization is complete, the indicators for “TV, Optical, Bluetooth, Stereo and Surround” will flash.