



## MusicCast 200 Reset Procedure



### Option settings

Various settings can be configured using the option menu. See "Option menu list" on the next page for available options.

1: Press 'OPTION' on the remote control – the menu below will show on the front display.



2: Use arrow keys to select 'System' and press Enter.

3: Use arrow keys to select 'System', then press Enter.

4: Scroll down to 'FACTORY SETTING', then press Enter on the remote.

5: Press OPTION to exit the settings