



# YAMAHA®

## TTN503 Reset Procedure



Press 'STANDBY / ON' to put the turntable into standby.

While holding down 'SOURCE', also press the 'STANDBY / ON' button to turn on the unit.

This will reset the network chip of the turntable.