



# YAMAHA®

## TW-EF3A Reset Procedure

This will restore all of the earbud settings to their factory defaults. The information for devices registered (paired) will be deleted.


### **1 Remove earbuds (L) and (R) from the charging case.**

The indicators light up for about one second.




### **2 Hold down the function keys on earbuds (L) and (R) for about seven seconds to turn off the earbuds.**

Make sure that the indicator lights up as shown below.

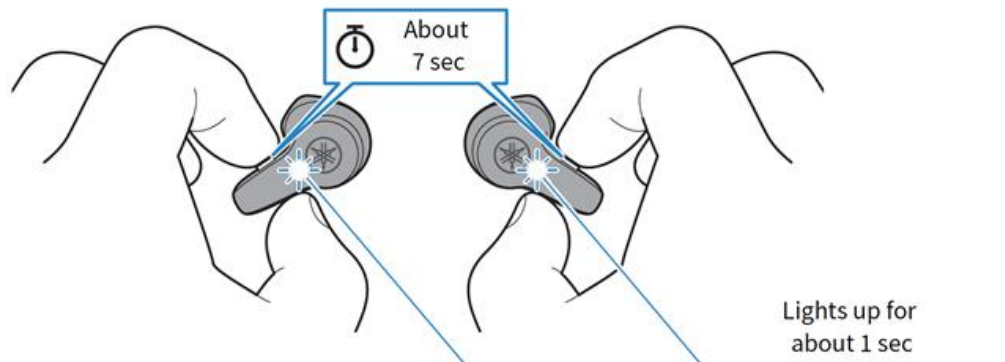

**3 After the earbuds have been turned off, hold down the function keys on earbuds (L) and (R) for about 10 seconds.**

Make sure that the indicator lights up as shown below.

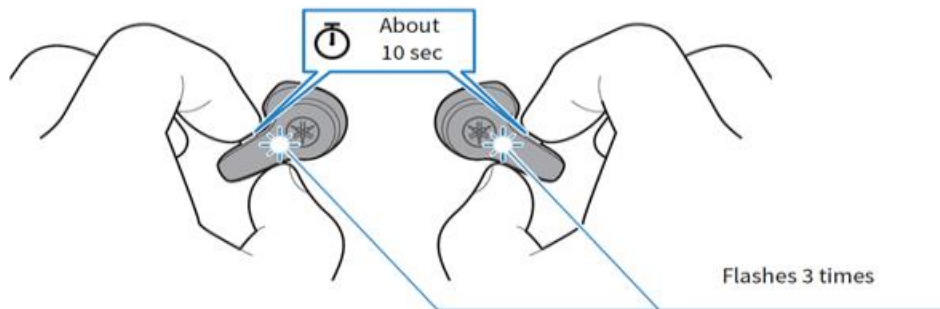

**4 Place earbuds (L) and (R) in the charging case.**

The earbuds are now initialized (factory reset).

**NOTE**

Initializing the earbuds (performing a factory reset) restores all of the earbud settings to their factory defaults. As this deletes all information for devices registered (paired), you must register (pair) the devices again.