



# YAMAHA®

## WX030 Reset Procedure



Put unit into standby, hold 'VOLUME UP and VOLUME DOWN' for 5 seconds.

This puts the unit into 'Options Settings' mode.

Touch and hold 'POWER / CONNECT' for 3 seconds

Secondary method:

Depress the reset button on the bottom of the unit with a paperclip.

Then unplug the unit from the wall socket for 30 seconds and restart.