



WXAD10 Reset Procedure



While pressing and holding down the 'CONNECT' button on the bottom panel, insert the AC adaptor into the wall outlet, and then keep holding down the 'CONNECT' button for three seconds.

Three indicators on the front panel will flash simultaneously and network settings will be reset. Do not operate the unit until the indicators turn off.