



# YAMAHA®

## WXC50 Reset Procedure



Put the unit into standby.

Hold down 'INPUT' and 'CONNECT' on the front panel simultaneously for 5 seconds.