



## XDAQS5400RK Reset Procedure



Set all Zones to standby and then hold down the 'CONNECT' and 'CONNECT2' keys simultaneously for 5 seconds or longer.

When it becomes initialized, the power of ZONE1 will turn on.







