



# YAMAHA®

## YAS-209 Reset Procedure



Turn the unit to Standby.

Hold 'volume up' and 'power' buttons on the unit until all indicator lights flash EXCEPT for the 'Alexa indicator'.