



# YAMAHA®

## YAS408 Reset Procedure



Turn the unit off.

Touch and hold 'MUTE' and 'POWER / CONNECT' until all indicators flash.