

QUICK START GUIDE

WELCOME

Congratulations on purchasing your **SPEED//SEEKA**.

Your support as a customer is hugely appreciated.

SPEED//SEEKA has been

developed for the specific demands of riding in an aerodynamic position. We hope it brings you many happy, fast safe miles.

In the box you will find:

- SPEED//SEEKA
- MOUNTING BAND
- USB CHARGING CABLE
- 5 & 10mm SPACERS inc. BOLTS
- CABLE TIES

Follow the steps in this user manual to get you set up. If you have any questions about setup or usage of your product, please contact us on support@seekasport.com

1 - CHARGING

Before using your **SPEED//SEEKA**, please charge your device fully. You will notice that when plugged in via USB there is a light illuminated. This light will go out when charging level is 100%.

You can use any standard USB wall socket, or computer USB connection.

A full charge from a flat battery will take in the region of 4 hours.

You can expect a minimum of 10 hours riding time from your battery.

To access the USB charging socket, simply disconnect the main housing from the mount as show in the image below.

You can check the battery level through the **SPEED//SEEKA** app.

2 - MOUNTING

SPEED//SEEKA has a patent pending 3 axis adjustable mount that allows you to perfect your aerodynamic position and still see your data.

Simply adjust the spacing of the **SPEED//SEEKA** until it is in the perfect position using the spacers provided.

Adjust the angle using the spherical washer and bolt, and tighten. Then simply stretch the O-ring around any standard aero extension.

For added security, the slimline mount can be cable tied in position using the supplied cable ties.

For customised mount options, contact us for information.



3 - OPERATION

When you receive your **SPEED**// **SEEKA** it is in a dormant state, and is woken through either plugging in the device via USB or a short press of the RESET button (by the USB). You will notice when the device wakes, a dim red light will show on the 1st LED.

When **SPEED//SEEKA** is woken for the first time, it will attempt to pair with the nearest Power Meter (this can be changed later in the app).

TURNING OFF YOUR SPEED//SEEKA

This is a simple process of pressing the RESET button for 5 seconds. The RESET button is found by the USB charging plug. It's recommended that you use this function for travel, or long periods without use. To wake, simply press RESET again.

STANDBY MODE

SPEED//SEEKA will enter standby mode after 2 minutes of no data transmission, or detection of motion.

WAKING FROM STANDBY

SPEED//SEEKA will awake upon detection of motion, and will remember all previous settings set in the app by the user upon waking. For day to day riding, letting the product go into standby and coming back the next day is the most convenient method.

4 - PROGRAM

SPEED//SEEKA is controlled through the iOS or Android app.

To download the app, go to the App Store (iOS) or Play Store (Android) and search "SPEED//SEEKA".

Upon opening the app, you will scan for available SEEKA devices. select your **SPEED//SEEKA.**



The next step is to connect to your power meter. The **SPEED//SEEKA** will automatically pair to the nearest power meter, but if you need to change the power meter, start by scanning, a list of available devices will appear.



Select your power meter by clicking the ID you recognise. Most power meters have the ID on their casing if you need to check what yours is.

5 - PROGRAM

To program your target power, simply select "target power" and use the slider to change the target.



The light display is determined as a percentage of your target, shown below. Use the lights to guide your efforts through the course of your ride:



Calibration of your power meter is conducted by simply pressing "Calibration // Zero". This is important for SRM users.

CARE

When leaving your bike unattended , disconnect the **SPEED//SEEKA** body and keep it safe.

WATER RESISTANCE

SPEED//SEEKA will resist rain and spray from general riding but will not cope with being submerged. This is generally referred to as IP65. You must remove your SPEED//SEEKA when washing your bike.

WARRANTY

SPEED//SEEKA as standard comes with a 1 year warranty from date of purchase from the original owner. Proof of purchase must be presented. We will ask you for the product ID which is indicated on the inside of the packaging. The warranty covers materials and manufacturing defects on the device, charging cable and mount.

The warranty does not cover normal wear and tear, improper installation, attempts to access or modify the electronics, damage or failure due to accident, misuse, abuse or neglect. **SEEKA SPORT** does not accept any liability for injuries or other damages resulting from use of **SPEED//SEEKA**.

PRECAUTIONS

- Handle SPEED//SEEKA with care. Don't use SPEED//SEEKA for any purpose other than designed
- Only use SPEED//SEEKA when correctly mounted
- Do not allow children to use the SPEED//SEEKA without adult supervision
- Do not attempt to carry out repairs, contact support@seekasports.com if you have an issue
- Accessing or opening the internal components will void your warranty
- Store SPEED//SEEKA in a cool and dry location. To aid battery life, ensure the battery is charged for 30minutes every 6 months.
- We recommend using at least a 500mA micro USB battery charger.
- Avoid charging outside of the temperature ranges 5-40degC and out of direct sunlight.
- Once charging is complete, unplug the charging cable.
- Charging and battery life times are estimates and will change with environmental conditions and product life.

CONTACT

Thank for being a valued customer. If you have any questions or need support, we are happy to help.

Our support email is support@seekasport.com

SUPPORT SUPPORT@SEEKASPORT.COM