
# caddytek

CaddyLite Auto+360

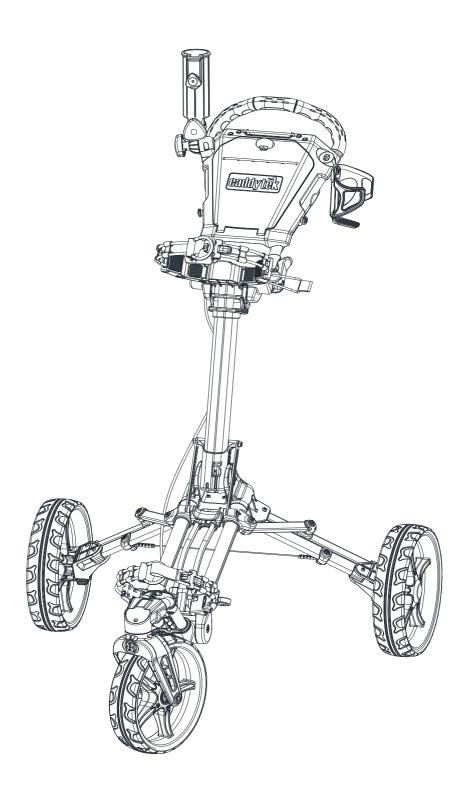

**User's Manual** 

CaddyTek Inc. 2075 S. Atlantic Blvd., # C Monterey Park, CA 91754, USA www.caddytek.com

#### **WARNING:**

FOR YOUR OWN SAFETY, PLEASE REVIEW THESE WARNINGS AND KEEP THIS USER GUIDE FOR FUTURE REFERENCE.

- Before using this golf cart, please read and understand the important instructions and warnings in this user guide.
- AVOID INJURY by always following the instructions carefully.
- AVOID INJURY by keeping clear of moving parts while adjusting, folding or unfolding this cart.
- ALWAYS make sure the cart is fully extended and locked before use.
- ALWAYS make sure the cart is folded and locked properly before lifting or transporting.
- ALWAYS use the brake when parking the cart.
- DO NOT run while using this cart.
- DO NOT use accessories other than those designed specifically for this cart.
- Keep hands and fingers away from moving parts or sliding sections of the cart!


#### **Package contents:**

- 1. Main frame with one front wheel (10.5")
- 2. Two rear wheels (11.5")
- 3. Umbrella holder
- 4. Drink holder
- 5. User's manual
- 6. Tools for adjustment


In case any of the above items are missing or damaged, contact your local Caddytek service dept.: service-usa@caddytek.com, service-canada@caddytek.com, service-uk@caddytek.com, service-au@caddytek.com.

#### Parts identification:

- A Umbrella holder
- B Handle grip
- C Umbrella holder base
- D Handle frame
- E Upper bag holder bracket
- F Main frame
- G Sliding rod
- H Leg bracket
- Control cable for front wheel
- J1 Leg frame left (Back)
- J2 Leg frame left (Front)
- J3 Leg frame right (Back)
- J4 Leg frame right (Front)
- K1 Left wheel locking mechanism
- K2 Right wheel locking mechanism
- L Rear wheel
- M Lower bag holder bracket
- N Front wheel
- O Scorecard holder assembly
- P Drink holder
- Q Adjustable handle mechanism
- R Side connecting rod
- S Anti-splay wire
- T Lower frame
- **U** Lower joint
- V Foot brake
- W Front wheel mode switching lever
- x Rotation base for front wheel

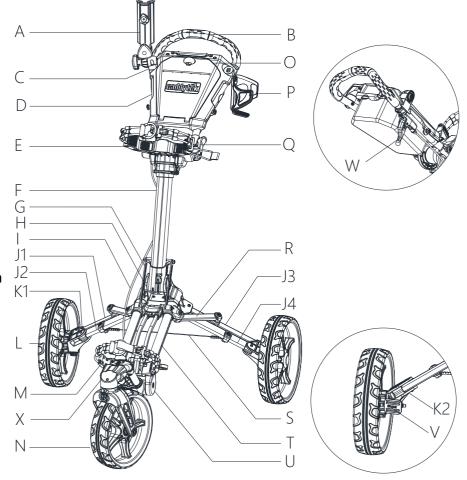


#### Assemble the cart from the box

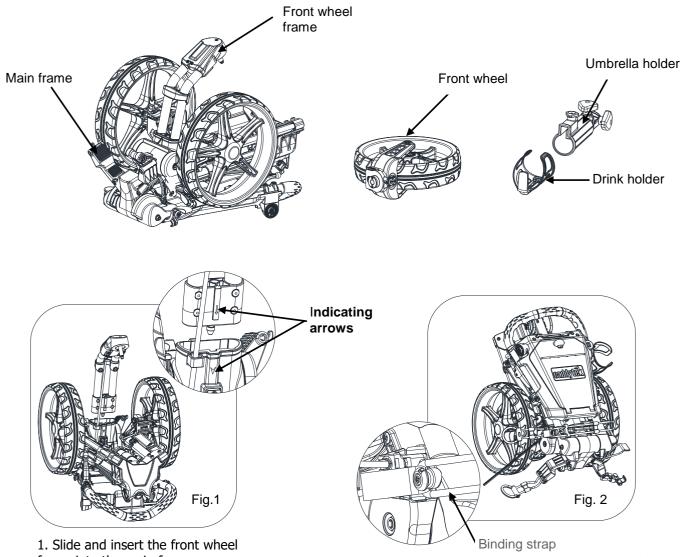

1. Slide and insert the front whee frame into the main frame as shown in Fig. 1. Make sure the 2 arrow marks are aligned.

2. Release the upper bag strap from the folded cart locking position.

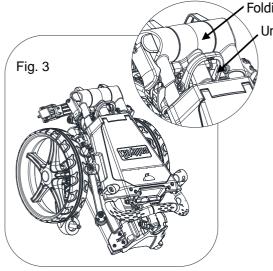


Folding/unfolding joint


Unfolding lock

3. Place the main frame with the front wheel frame inserted, as mentioned in step 1. Please make sure the Unfolding lock is facing 45 degrees upward as shown in Fig. 3.

Standing by the folded cart, place one of your hands (palm down) on top of the Folding/unfolding Joint and hold the frame securely. Then press the Unfolding Lock to let the cart unfold automatically, as shown in Fig. 4.

**Warning:** Please keep enough distance from others when opening the frame, to avoid injury to others when the frame pops open.

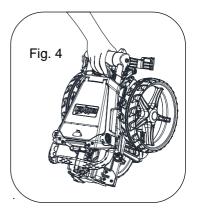

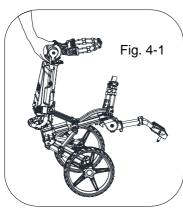




Place 4 fingers on the Unfolding Lock and the thumb on the folding/unfolding joint. Press the Unfolding lock slightly inward and the cart will unfold automatically as shown in Fig. 4, Fig. 4-1 and Fig. 5.




4. Insert the front wheel as shown in the drawing in Fig. 6, and the cart assembly will be completed.

# **Unfolding the cart**

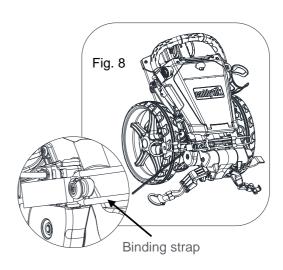



1.Release the upper bag strap from the folded cart locking position as show above.

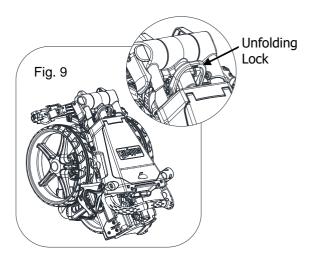

2. Place the main frame on the ground and make sure the "folding lock" is facing 45 degrees upward as shown in Fig. 9. Standing by the folded cart, place one of your hands (palm down) on top of the "Folding/unfolding Joint" and hold the frame securely. Then press the "Unfolding Lock" to let the cart unfold automatically, as shown in Fig. 4.


**Warning:** Please keep enough distance from others when opening the frame to avoid injury to others when the frame pops open.

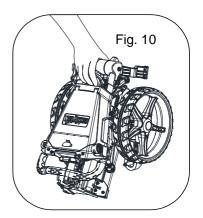

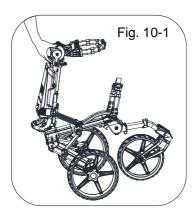




Place 4 fingers on the Unfolding Lock and the thumb on the folding/unfolding joint. Press the Unfolding lock slightly inward and the cart will unfold automatically as shown in Fig. 10, Fig. 10-1 and Fig. 11.

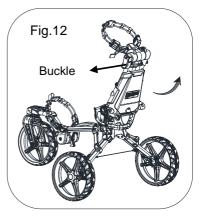




3. Release the handle height adjustment buckle and lift the handle to adjust it to the desired height. Then tighten the buckle. The cart is now fully extended, as shown in Fig. 12 and Fig. 13.


# Folding the cart

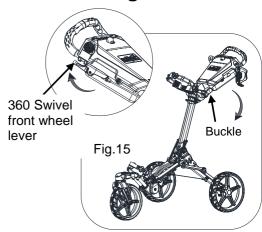

1. Pull the front wheel swivel lever backward to the front wheel locked position. Then release the buckle to fold the handle all the way down to the position that is flat with the upper main frame. Tighten the buckle to secure the handle in the folding position. Please refer to Fig. 15 and Fig. 16.

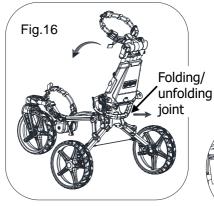

2. Hold the handle with one hand and hold the top of the folding/unfolding joint with the other hand. While pushing the main frame downward and pulling the handle upward, the cart will automatically fold and lock into the folded position with a crisp sound. Please refer to Fig. 16 and Fig. 17.

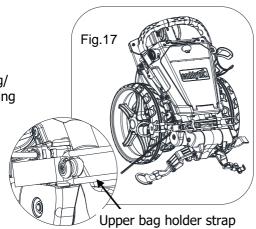

3. Use the upper bag holder strap to wrap around the folded cart and place it on the small hook, as shown above in Fig. 17. This will secure the folded cart, preventing it from unfolding accidentally.

#### Install the Drink Holder


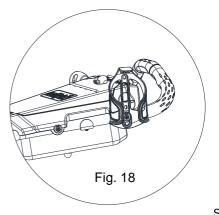


Fig. 19


Slot on holder Fixed block on base notch

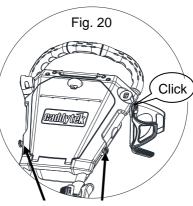

Please install the drink holder on this side of the cart, as shown above, to prevent it from interfering with the automatic cart folding mechanism.


Align the smallest part of the slot on the holder with the fixed blocks. Then pull horizontally to fit the holder on the base to complete the installation. Please refer to above figures.

### **Install the Umbrella Holder**

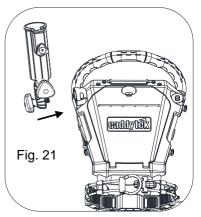

To put in use: Simply attach the umbrella holder onto the cart and tighten the knob as in Fig. 21.


# **Bag Holder Strap Length Adjustment**

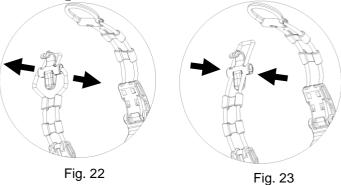

#### Refer to Fig. 22 and 23:

- 1. Pull the elastic strap out of the strap buckle as shown in Fig. 22.
- 2. Adjust the strap to the desired length.
- 3. Push the elastic strap back into the strap buckle as shown in Fig. 23.

# Lock and unlock the Swivel front wheel

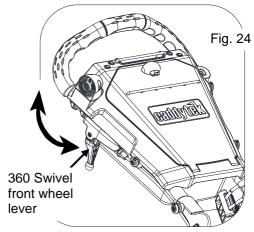


Push the lever downward to engage the swivel front wheel mode. Pull the lever upward to lock the front wheel.

# Use the brake



Press to brake. Press again to release the brake as in Fig. 25.

# Fixing the umbrella

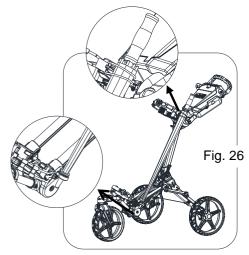

First insert the umbrella cap into the fixing groove of the lower bracket wing, and then fix the umbrella on the hook of the upper bracket wing with the elastic rope as in Fig. 26.


# **Steel Pad for magnet devices**



You can attach your device/accessory with a magnet such as the Magnet Towel and Rangefinder to this "Steel Pad".

**Warning:** Please make sure the magnet on your device/accessory is strong enough so it will not fall off.

# Front Wheel Alignment in lock mode

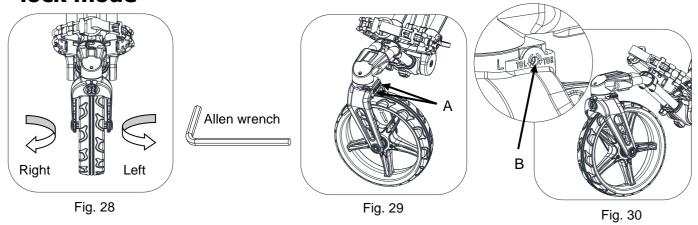

#### When facing the cart:

If the cart veers to the RIGHT: use the Allen wrench (as shown in Fig. 28.) to loosen the 2 screws (A) on the backside of the front wheel frame, as shown in Fig. 29. Then adjust the front wheel to the center position by turning the screw (B) counterclockwise as shown in Fig. 30. Tighten the 2 screws (A) after the front wheel alignment is done.

If the cart veers to the LEFT: use the Allen wrench (as shown in Fig. 28) to loosen the 2 screws (A) on the backside of the front wheel frame, as shown in Fig. 29. Then adjust the front wheel to the center position by turning the screw (B) clockwise as shown in Fig. 30. Tighten the 2 screws (A) after the front wheel alignment is done.

#### WARRANTY

CaddyTek Inc. warrants its products to be free of defects and workmanship for one year from the date of purchase. We will either repair or replace defective products at our option.

Normal wear and fading of products are not considered a manufacturer's defect. This warranty does not apply to claim of damage to items used in connection with CaddyTek Inc. products. In the case of deterioration due to normal use, we will repair the item for a nominal charge. CaddyTek Inc. is the sole judge of any claim or warranty.

For customers in North America, please contact CaddyTek Inc. for the service. For customers outside of North America, please contact your dealer for warranty service, or you are welcome to contact CaddyTek Inc. directly.

#### REGISTER YOUR PRODUCT

Please register your golf cart and purchase on line at www.caddytek.com. Failure to do so may results in a delayed response to your warranty claim.