



SILVERONYX




SO-670

Wireless Speaker

User Manual


Version 1.0

PRODUCT OVERVIEW

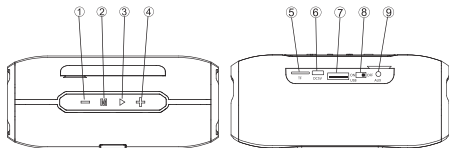

- ① Previous Track/Volume Down
- ② Switch Modes
- ③ Play/Pause/Telephone
- ④ Next Track/Volume Up
- ⑤ microSD Card Slot
- ⑥ Micro USB Charging Port
- ⑦ USB Audio Input
- ⑧ ON/OFF Switch
- ⑨ 3.5mm AUX Audio Input

CONNECTION OPTIONS

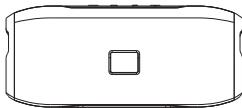

① Turn on the speaker

Slide ON/OFF switch at the back to turn on. The speaker will automatically enter Bluetooth mode.

② Connect to mobile devices

Enable the bluetooth setting on your mobile device, then locate and select 'SilverOnyx670' in the list of devices. You will hear a soft beep once the connection has been established (in the future, the speaker will connect automatically).

③ Connect to a different mobile device

If the speaker is already connected to another device, you will need to disconnect that device first before pairing to a new device.

OPERATING INSTRUCTIONS

ON/OFF Switch

- Toggle the switch to turn on/off the speaker.

► Play/Pause/Phone/FM Search

- When playing in Bluetooth or microSD card mode, a quick tap will pause - press again to resume.
- When in FM mode, a quick tap will perform a radio search function to learn available stations. Once it cycles back to the first FM station, a quick tap will stop the search. Use the + and - buttons to navigate memorized stations.
- Mobile Phone (Bluetooth Mode Only): A quick tap will answer the call - press again to hang up. A long press will reject the call. While NOT on a call, a long press will call the last number dialed.

+ Next Track/Volume Up Button

- When playing in Bluetooth or microSD card mode, a quick tap will move to the next track.
- When in FM mode, a quick tap will switch to the next radio station.
- In any mode, a long press will increase the volume (a beep will sound when the maximum volume has been reached).

— Previous Track/Volume Down Button

- When playing in Bluetooth or microSD card mode, a quick tap will move to the previous track.
- When in FM mode, a quick tap will switch to the previous radio station.
- In any mode, a long press will reduce the volume (a beep will sound when the minimum volume has been reached).

M Mode Button

- Press this button to toggle between Bluetooth, microSD Card, FM Radio, and Line-In modes.

NOTE: During Line-In mode incoming calls cannot be picked up by the speaker.

- Without a microSD card or 3.5mm audio input line, only Bluetooth and FM Radio modes are available.

TECHNICAL SPECIFICATIONS

Speaker Output:	4Ω5W*2 (4ohm, THD <1%)
Speaker:	45mm*2
Bluetooth Version:	V5.0
Frequency Reponse Range:	90Hz-20KHz
Signal Noise Rate:	>80dB
Battery Capacity/Voltage:	1800mAh/3.7V
Battery Charge Time:	Approx. 2 Hours
Working Time:	4-6 Hours
USB Power Input:	5V 2A
Speaker Size:	172 x 76 x 76mm