


PANEL FUNCTIONS

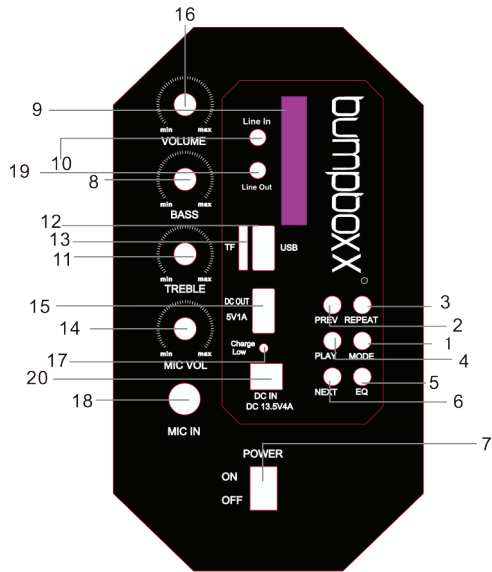

1. Mode Switch
2. Previous Track / Channel
3. Repeat
4. Play / Pause
5. EQ
6. Next Track / Channel
7. Power Switch
8. Bass
9. Mode Display
10. Line in
11. Treble
12. USB Slot
13. TF Card Slot
14. Microphone Volume
15. 5V1A Charging Port
16. Volume
17. Charge Low Indicator
18. Handheld Microphone Input
19. Audio Out
20. DC IN DC 13.5V 4A

SPECIFICATIONS

Speaker Unit	6.5" X2+1"	Recharge Voltage	DC 13.5V4A
Power	150 W	Recharge Battery	12V 6Ah

ACCESSORIES

Adapter	x1	Remote Control	x1
Shoulder Strap	x1	User Manual	x1

bumpboxx®



Flare G
OPERATION MANUAL

FUNCTION DESCRIPTION

BATTERY AND POWER

1. Speaker features rechargeable battery.
2. Charge your battery using the included 15V3A charger.
3. LED light will glow red once charging. Fully charged, LED will turn blue.
4. Full recharge takes 3 to 4 hours.
5. Full battery could be used for up to 12 hours.
6. Please charge the battery for 4 to 5 hours before using for the first time.

BLUETOOTH CONNECTION

1. Press the "MODE" button to display "BLUE" on the screen to start connection.
2. The speaker is ready for pairing with a mobile device.
3. Scan for the speaker's name "Bumpboxx - Flare6"
4. Pair via bluetooth.
5. Once paired, the volume and tracks can be controlled by both speaker's control panel and by the paired mobile device.

MODE CONTROL

1. Insert USB into USB slot. (Unit automatically changes to USB mode)
2. Insert TF into TF slot. (Unit automatically changes to TF mode)
3. Press select previous or next track, press to play or pause.

FM RADIO

1. Change mode to FM. Station numbers will pop up in digital display.
2. Press Play to start automatic scan,
3. The unit will automatically pick up the strongest available stations.
4. To stop scan, press "Next" button


AUDIO INPUT & OUTPUT

1. Disconnect USB & TF
2. Insert the audio cable into AUX input to connect external audio resource, will automatically change to AUX input mode.

DC 5V 1A OUTPUT

1. Connect your mobile device via USB cable to the 5V1A charging slot to charge the device.

REMOTE CONTROL

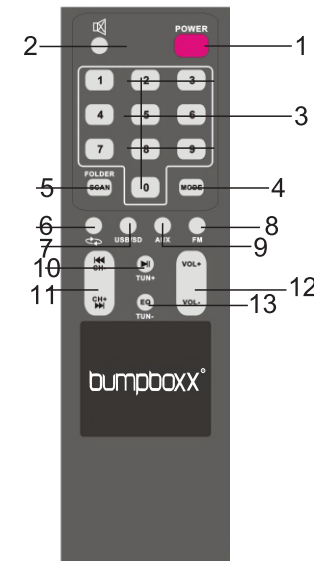

1. Power
2. Mute
3. 0-9
4. Mode
5. Scan
6. Repeat
7. USB/SD
8. FM
9. AUX
10. TUN +
11. CH+ / CH-
12. VOLUME +/-
13. TUN-