

GOODSON

Tools and Supplies for Engine Builders

156 Galewski Drive • P.O. Box 847 • Winona, MN 55987-0847
Toll-Free 1-800-533-8010 • Local 507-452-1830 • www.goodson.com

ASI / ASR Super-Stud™ Stud Installers & Removers Instructions

ASI-375, ASI-375C, ASI-437

INSTALLATION INSTRUCTIONS

1. Insert the stud into the correct size installer.
2. Hand set the stud into the cylinder head.
3. Use a standard 3/4" wrench or socket to tighten the stud into place. Each installer is fitted with a steel ball inside to prevent over-tightening of the installer on the stud.
4. Turn the tool counter-clockwise to release it from the stud.




CAUTION: Do not use impact wrench with this tool

ASR-375, ASR-375C, ASR-437

REMOVAL INSTRUCTIONS

1. Place the remover over the stud to be removed. Thread onto the stud at least 3/4 of the way into the remover.
2. Then lock the jam nut down onto the stud. Now the stud can be removed.
3. Removers can be used in virtually any position. Removers have a 3/4" OD Hex Body with a 5/8" Hex Jam Nut on top.

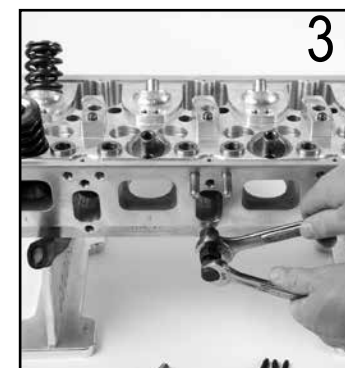

CAUTION: Do not use impact wrench with this tool