

**candy
coat**

ACCESSORIES

CANDY DRILL

User Manual



**Stylish
Electronic Tool**

Candy Drill System



1 Speed Knob

5 Hand/Foot Control

2 Power On

6 Bits Holder

3 Power Off

4 Forward/Reversed
Rotation



Packing List

- ♥ Candy Drill Machine x 1 pc
- ♥ Handpiece x 1 pc
- ♥ Handpiece Holder x 1 pc
- ♥ Foot Pedal x 1 pc
- ♥ Drill Bits Box x 1 pc

Precaution

1. DO NOT disassemble the handpiece.
2. DO NOT drop the handpiece.
3. DO NOT work in a humid environment.
4. Operation Environment Humidity: 30-75%
5. Operating Environment Temperature: +10°C to +40°C
6. Turn off power when changing bits.
7. Make sure the power switch is off before plugging in the power cord to avoid an unexpected injury due to sudden start.

Specifications

♥ Model	:	Candy0025
♥ Working Voltage	:	110v-220v
♥ Input Power	:	35W
♥ Speed	:	0-35,000RPM

♥ Low Noise

♥ Smooth Vibration


♥ Forward + Reverse Operation

Set and Operation

1. CHOOSE THE 3/32" DRILL BITS




2. SET DRILL BITS

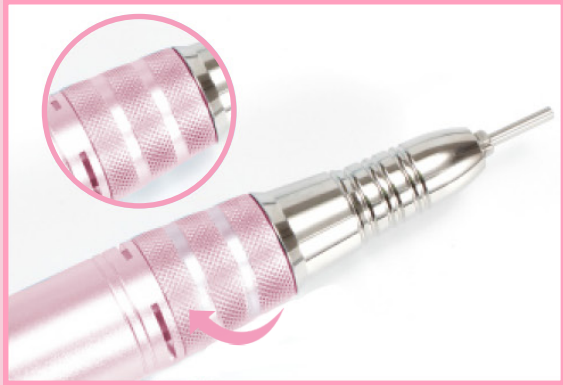

1 Turn side clockwise until you hear it click into the place.

Take out the original bit. 2

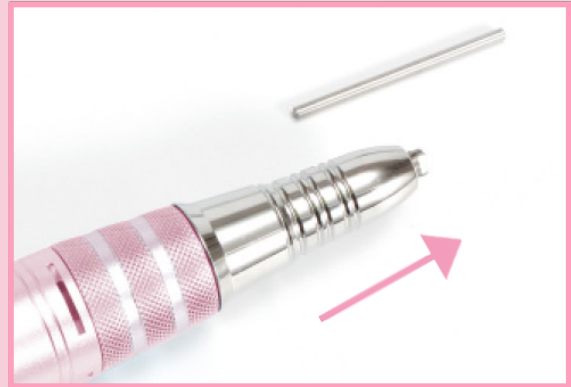

3 Insert the 3/32" size bit.

Turn side anti-clockwise to lock the bit tightly. 4



3. HOW TO OPERATE CANDY DRILL

- 3.1 Double confirm the voltage indicator on the back of the machine. When it shows 110V, it means the machine is in 110V condition and can be connected to 110V power; when it shows 220V, it means the machine is in 220V condition and can be connected to 220V power.
- 3.2 Plug the handpiece cord into the handpiece Jack on the machine.
- 3.3 Plug the power cord into the power socket.
- 3.4 Push the power switch to ON.
- 3.5 Hand: To control the machine by hand, push the Hand/Foot switch to "H".

Foot: To control the machine by foot, push Hand/Foot switch to "F" and insert the plug for the foot pedal.
- 3.6 Set the FWD/REV switch to adjust the direction of spinning.
- 3.7 Turn the speed control knob to adjust the speed.