

Quick Start Guide
HANDHELD RADIO SCANNER
 400 Channels

START HERE!

Package Contents:



Scanner

Antenna

AC Adapter

Rechargeable Battery Holder

Battery Holder

Belt Clip


See the User Guide for complete instructions

Still need help?
 visit our FAQs on our website at
www.whistlergroup.com



INSTALL BATTERIES

1

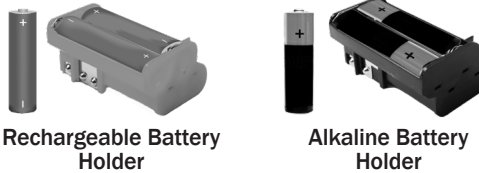

Rechargeable Battery Holder

Alkaline Battery Holder

- Slide open the battery compartment.
- Place 4 AA batteries into the correct battery holder matching polarity symbols (+ / -):
 - Black** – Alkaline (non-rechargeable)
 - Yellow** – Rechargeable Ni-MH or Ni-Cd
- Place the battery holder into the battery compartment. The battery holder fits only one way. Do not force it.
- Replace the cover.

CONNECT ANTENNA

2

- Align the antenna slots with the tabs on the antenna jack.
- Press the antenna over the jack and turn the base of the antenna clockwise.



PROGRAM FREQUENCIES

3



Find Frequencies:

Go to www.radioreference.com/db/browse. Select your state/country and county/region to locate a list of frequencies in your area.

Program Frequencies:

- Preset squelch between 10 and 12 o'clock position
- Press PGM to enter the program mode. Enter the channel number (1-400) where you want to store a frequency, then press PGM again.
- Use the number keys and the period(.) key to enter the frequency.
- Press ENT to store the frequency into the channel.
- Press PGM to go to the next channel.
- Press SCAN to begin scanning.