

START HERE!

Package Contents:



Scanner AC Adapter Antenna
 See the User Guide for complete instructions



CONNECTING POWER

1



AC Power


1. Connect the supplied adapter to the scanner's DC 9V jack.
2. Plug the adapter into a standard household power socket.
3. To disconnect, unplug the adapter from the power source first.

CONNECT ANTENNA

2

To attach the supplied telescopic antenna:

1. Insert the antenna in the hole on the top of the scanner.
2. Turn the antenna clockwise to tighten.

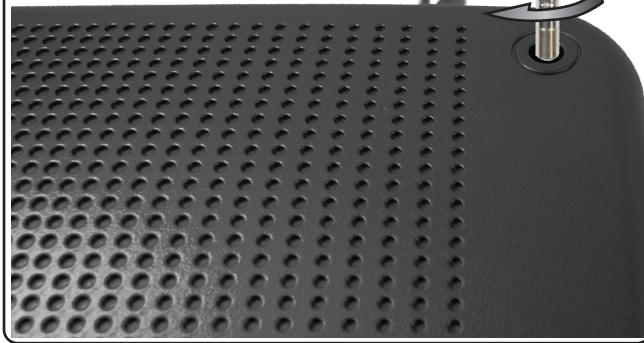

PROGRAM FREQUENCIES

3



Find Frequencies:

Go to www.radioreference.com/db/browse. Select your state/country and county/region to locate a list of frequencies in your area.

Program Frequencies:

1. Preset squelch between 10 and 12 o'clock position
2. Press PGM to enter the program mode. Enter the channel number (1-300) where you want to store a frequency, then press PGM again.
3. Use the number keys and the period(.) key to enter the frequency.
4. Press ENT to store the frequency into the channel.
5. Press PGM to go to the next channel.
6. Press SCAN to begin scanning.