 


WIC-1249C Inspection Camera

Owner's Manual

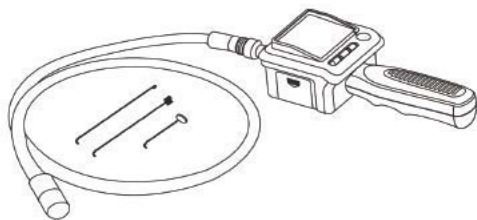

The Whistler Group Headquarters
3604 NW Frontage Rd.
Bentonville, AR 72712

www.whistlergroup.com

1


WHISTLER

Welcome

Congratulations on your purchase of our model WIC-2517C inspection video camera with color LCD monitor. Please read the user manual carefully before using this product. This product is designed as a remote inspection device, appropriate for use in surveying pipes or other hard-to-reach places, equipment or furnishing installation, car repair, etc.

Packing List



9mm Waterproof
Camera Assembly



2.4" LCD
Color Monitor



Magnet Accessory
Clip

 


Mirror Accessory
Clip



Hook Accessory
Clip




Feature Callouts

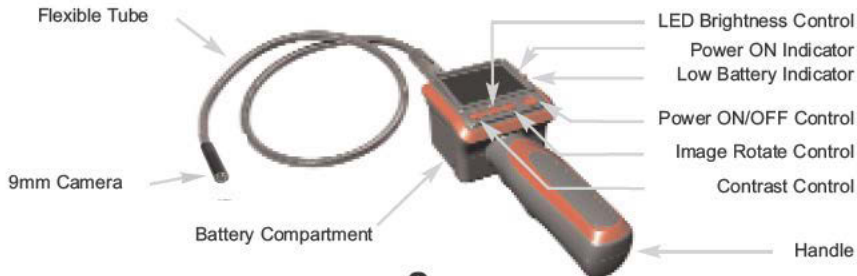

Installation


Install Batteries

   1. Remove the cover (a); slide out the battery compartment from the housing (b).
2. Insert four (4) new AA batteries into the appropriate slots. Proper battery orientation is indicated on the battery compartment.
3. Reinstall battery compartment and replace battery cover.

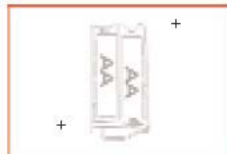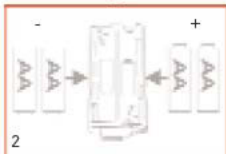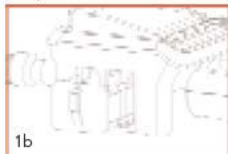



Install the Camera with Flexible Tube

 When connecting the camera tube to the handheld unit, make sure that the keyed ends are properly aligned. Once they are lined up, finger tighten the knob to hold the connector in place.

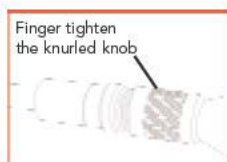

Install the Accessories

  To prepare accessory for installation, push down on stem-side of black interface while pulling away from adjacent side. This will open the base of the accessory.

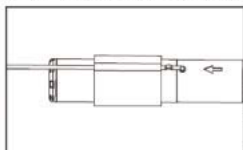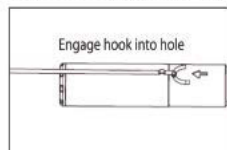


Next, place the accessory at the base of camera head as shown. All 3 accessories attach in the same manner.

3

Operation

 1. Press the power switch to turn the camera on (refer to Fig-1). The power indicator will illuminate and the LCD will become viewable.
2. If the image on the LCD is unclear, try adjusting either the brightness, contrast or mirror controls on the monitor.
LEDs Brightness Control: The 6 levels of LED brightness can be adjusted by pressing the LEDs Brightness Control button (refer to Fig-2).
LCD Contrast Control: The 8 levels of LCD contrast may be adjusted by pressing the LCD Contrast Control button.
3. To rotate the orientation of the image displayed on the LCD by 90 degrees, press the Mirror button. There are four (4) possible image orientations that you can toggle through by pressing this button.
4. When in use, the tube should easily maneuver itself into position. Do not apply excessive force (refer to Fig-3).
5. The accessories included with the unit can be used to retrieve small items like dropped rings or screws (refer to Fig-4).

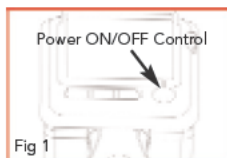

TIP! The flexible tube can be bent to accommodate exploration in a variety of locations.

IMPORTANT! Do not immerse the monitor in water. Store in a dry place. Such measures reduce the risk of electric shock and damage. Only the lens and tube are water resistant when the unit is fully assembled.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference;
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specifications

Imaging Sensor:	CMOS
Total Pixels:	712 x 486 (NTSC)
Horizontal Viewing Angle:	50 Degrees
Minimum Illumination:	0 Lux
Night Vision Range:	1.5m/4.92ft
Power Supply:	4 x AA batteries
Tube Diameter:	9mm
Waterproof Capacity:	IP67 (for lens/tube only)
LCD Screen Type:	2.36" TFT-LCD
Effective Pixels:	480 x 234
Video System:	NTSC
Consumption Current (Max.):	150mA
Dimensions (H x W x D):	243.8 x 83.3 x 61 (mm)/9.5 x 3.28 x 2.4 (inches)
Approx. Weight:	473g/16.6 oz
Operating Temperature:	-10 C~50 C/14 F~122 F
Operating Humidity (Max.):	15~85%RH

All specifications are subject to minor change without prior notice.

Warnings

- Turn off the system if it is not in use.
- This product can only be completely disconnected from its power source by removing the battery compartment.
- Attention should be given to the environmental aspects of battery disposal.
- Remove the batteries when cleaning the unit.
- Remove the batteries before storing the unit for a long time.
- When necessary, REPLACE ALL FOUR (4) BATTERIES in this unit with new ones, not one (1) or two (2) batteries at a time.
- Use only the size and type of battery specified.
- Be sure to install the battery with the correct polarity as indicated in the battery compartment.
- Properly dispose of the batteries. Exposure to high temperatures can cause the batteries to explode, so do not dispose of in a fire. Place tape over the terminals to prevent direct contact with other objects. Some countries have regulations concerning battery disposal. Please follow all applicable regulations.
- Do not immerse the camera and tube into any oils.

Consumer Warranty

This Whistler Inspection Camera is warranted to the original purchaser for a period of one year from the date of original purchase against all defects in materials and workmanship. This limited warranty is void if the unit is abused, modified, installed improperly, or if the housing and/or serial number have been removed. There are no express warranties covering this product other than those set forth in this warranty. All express or implied warranties for this product are limited to the above time. Whistler is not liable for damages arising from the use, misuse, or operation of this product.

During the warranty period, defective units will be repaired without charge to the purchaser when returned with a dated store receipt to the address below. Units returned without a dated store receipt will be handled as described in section "Service Out of Warranty."

Note: Damage caused by incorrect battery placement or battery leakage is not covered under this warranty.

When returning a unit for service, please follow these instructions:

1. Ship the unit in the original carton or in a suitable sturdy equivalent, fully insured, with return receipt requested to:

Whistler Repair Dept.
551 N. 13th St.
Rogers, AR. 72756

Please allow 3 weeks turnaround time.

Important: Whistler will not assume responsibility for loss or damage incurred in shipping. Therefore, please ship your unit insured with return receipt requested. **CODs will not be accepted!**

2. Include with your unit the following clearly printed information:

- Your name and street address (for shipping via UPS), a daytime telephone number and an email address, if applicable.
- A detailed description of the problem (e.g., "Cannot adjust brightness on the monitor").
- A copy of your dated store receipt or bill of sale.

3. Be certain your unit is returned with its serial number. For reference, please write your unit's serial number in the following space: s/n _____

Units without serial numbers are not covered under warranty.

Consumer Warranty - Continued

IMPORTANT: To validate that your unit is within the warranty period, make sure you keep a copy of your dated store receipt. You may register your unit online at www.whistlergroup.com, however, for warranty verification purposes, a copy of your dated store receipt must accompany any unit sent in for warranty work.

Service Out of Warranty

Units will be repaired at "out of warranty" service rates when:

- The unit's original warranty has expired.
- A dated store receipt is not supplied.
- The unit has been returned without its serial number.
- The unit has been abused, modified, installed improperly, or had its housing removed.

The minimum out of warranty service fee for your Whistler Inspection Camera is \$35.00 (U.S.). If you require out of warranty service, please return your unit as outlined in Step 1 along with a certified check or money order for \$35.00. Payment may also be made by MasterCard, VISA, Discover or American Express; personal checks are not accepted. In the event repairs cannot be covered by the minimum service fee, you will be contacted by a Whistler technical service specialist who will outline options available to you. If you elect not to have your unit repaired, it will be returned to you along with your certified check or money order. Important: When returning your unit for service, be certain to include a daytime telephone number and an email address (if applicable).

Customer Service

If you have questions concerning the operation of your inspection camera, or require service during or after the warranty period, please call Customer Service at:

1-800-531-0004

Representatives are available to answer your questions Monday - Friday from 8:00 a.m. to 5:00 p.m. (CT) or visit the F.A.Q.'s at www.whistlergroup.com.

EU Environmental Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

