



4. For best calibration, keep your circle radius close to 5 meters and speed less than 3km/h. 1-3.

- 2 circles
- speed<10km/h counterclockwise

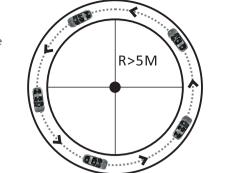

5. Press (SELVRE) to select the "CALIBRATION", press (UP) (SELVRE) select the "OFF" 1-4

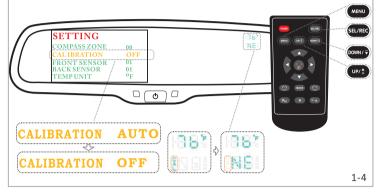

#### 2 Caution

- 1. Move rear view mirror to the right place where the driver can see the rearwindow before the calibration.
- 2. Ensure there's no large container truck or large truck around when you do the
- 3. Make sure that you drive in a perfect circle when calibration. Driving the car for 2 circles before calibration. The steering wheel needs to deviate to a certain angle to guarrant the right circle.
- 4. When doing the calibration, drive the car at one third of normal adult walking speed. The diameter of driving circle should be 5-10 meters. Do not drive too fast. Drive 2-3 circles to finish the calibration.

5. The compass needs to calibrate afresh when you install a new car audio, for the magnetic field had been changed in your car.


### 3 Q&A

- Q: Why does the compass rearview mirror need to be calibrated? A: A car is mainly a magnet whose magnetic intensity is 2 to 5 times of the Earth's. In order to adapt to the internal magnetic field conditions of the car, it needs to reset the magnetic. Otherwise the weak magnetic of the earth will be disturbed by car's.
- Q: why should we reset the magnetic-declination?
- A: Different places locate in different magnetic field lines. So you need to set the declination first. E-compass has low accuracy in the places close to the South Pole and North Pole.
- Q: Why is the direction not so accurate in some areas?
- A: In some special areas, iron mines or other high-intensity magnetic fields cause the change of earth magnetic field. That is why compass is not accurate in some areas.
- Q: Why are old cars more difficult to calibrate than new cars?
- A: The longer the car you use, the more magnetized your car will be, It is hard to calibrate. Or it still has a deviation even after you had completed the calibration.

# 4 Temperature setting (option)

4.1 How switch the unit of temperature

Press the enter into "SETTING" menu, and press button to choose the "TEMP UNIT". press you can switch of to oc 4-1.

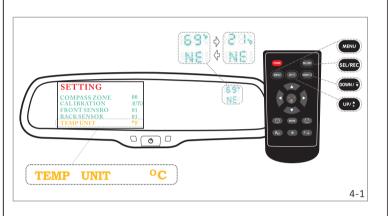

## **4.2 Temperature sensor installation**

to complete one circle.

Locate the temperature sensor between the front of the radiator and the front bumper. Locate edge of sheet metal or plastic shield, and slide metal clip over edge until secure.

3. Drive your vehicle in at least 2 circles' counterclockwise, allowing 90 seconds


Sensor should be in the flowing of fresh air. Do not locate it next to a heated engine part.



#### 5 The distribution of magnetic fluxline

We do not recommend to use compass in the area where the magnetic lines of flux is intensive. For example, the north of Canada.

New York: -13	Beijing: -7
Ottawa:-15	New Delhi:1
Los angeles: 4	DuBai:2
Sao Paulo:-20	Paris:0
Moscow: 10	Berlin: 4
Capetown: 16	Canberra: 12

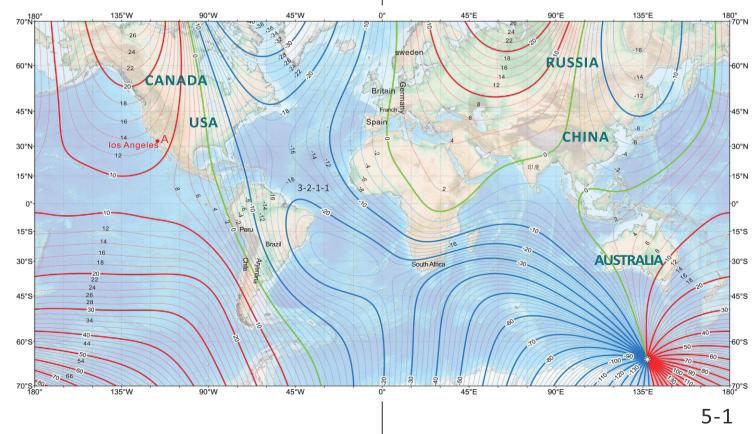



— User Manual





