This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference,

(2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.
- To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.



Entertainment video is not permitted when driving except for the navigation and backup camera display!

 $\divideontimes$  This manual is only for your reference.



# 4.3 inch Rear View Mirror Monitor with Parking Sensor

## **USER MANUAL**



Model: MR-43-P2


🔕 ແ 🞽 F(( 🗈 🕱


## **1 CONTENTS**


The package contains the following:

01 Rear view mirror monitor 02 Wire harness 03 Parking sensor 04 Extension cable 1 05 Extension cable 2 06 Parking sensor accessories 07 Drill 08 User manual

09 Wire cover 10 Remote control

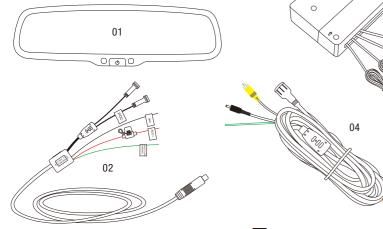

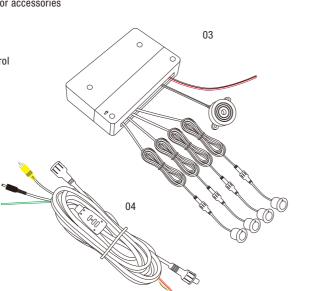

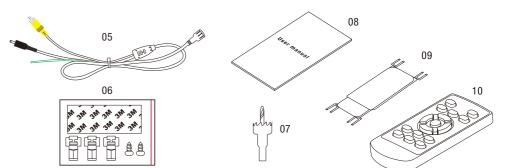

## 2 FEATURES

- 4.3 inch ultra high brightness display screen
- Automatic brightness adjustment
- Adjustable back up guide line

• Parking sensor

## **3 SPECIFICATIONS**

 
- Display Type: TFT-LCD
- Compatiable Systems: PAL / Auto / NTSC
- Working Voltage: 12V DC

- Back up camera display
- 4.0 mm glass and car factory OEM bracket
- 2-way video inputs

- Screen Size: 4.3 inch
- Resolution: 480(H) X 272(V)

## **4 HOW TO INSTALL MIRROR MONITOR**

#### Remove the original mirror




Car factory original mirror

The plate on the windshield


#### Install mirror monitor on the plate



 Take down your original mirror, and make the mirror monitor ready



 Contrarotate the fixed rear view mirror Torque is about 0.8-1.3 N.m




the bracket.

the mirror.

 Install rear view mirror along this direction






Different cars have different brackets. It depends on your vehicle maker and manufacturer. There are many methods to remove the original rear view mirror, however, please don't force the mirror off


Master Tailgaters is not responsible for damage caused to your car by faulty installation of

Please make sure to install the mirror to the end of the bottom without any loose


NOTE: Always use caution, DO NOT force the mount. Master Tailgaters not be responsible for broken windshields. If you are not sure how to remove or re-install the mirror seek trained, professional help.

### CAUTION!

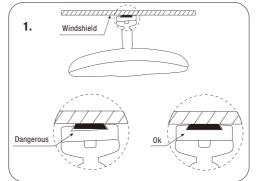

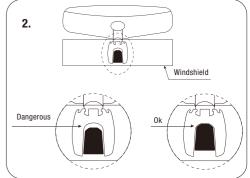


## 5 HOW TO WIRE

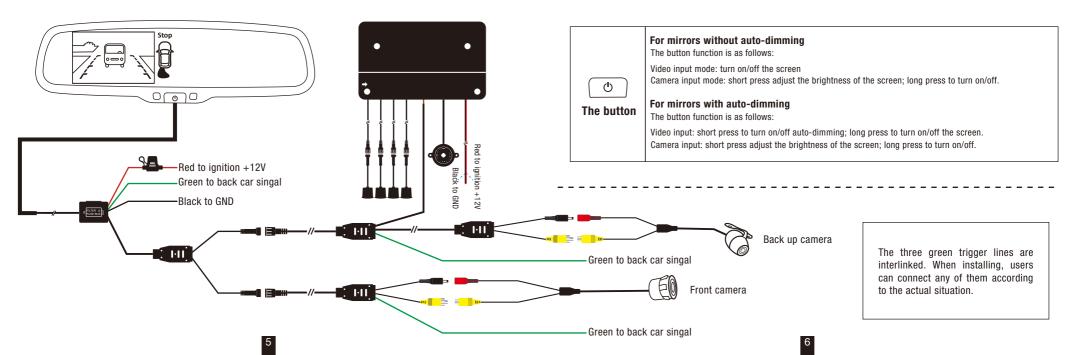


**6 FUNCTION OF BUTTON** 

## **7 BACK UP CAMERA DISPLAY**

 When the car is in reverse, the monitor will automatically display back up camera.

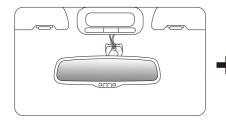



## **8 AUTOMATIC BRIGHTNESS ADJUSTMENT**


Monitor brightness will change with the ambient light.

LOW LIGHT When ambient light is low, the screen will automatically reduce the brightness.

BRIGHT LIGHT When ambient light is bright, the screen will automatically increase the brightness.

#### 9 MENU SETTING

#### The menu can only be set by remote control.

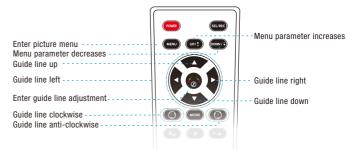

When the car is in reverse, short press " (MRO) ", then you can switch among "PICTURE", "SYSTEM", or enter out. When you enter "PICTURE", press " (SEL/REC) " to switch among the items.



" () and " () Are for changing the figure of each setting. "SYSTEM" setting is same as explanation above.






#### 10 ADJUSTABLE GUIDE LINE


#### About guide lines

To help drivers estimate the distance from obstacles, there are three lines for reference: red, yellow, and green. The lines are displayed on the monitor when reversing. The green line is 3 meters away from the back of the car and the yellow is 2 meters. The distant red line is 1 meter away from the backside of the car and the close red line is 0.4 meters away. Both reference lines on the left and right should leave 0.2 meters away from the car.

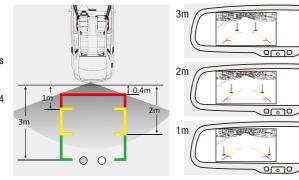

#### What the regular guide line is

Regular guide line is fixed. But installation sites of cameras are different as well as car size. The fixed guide line is not accurate enough for drivers. There is a great difference among regular and fixed guide lines and car's real guide lines, especially when camera is mounted on the left or right side of car backside.

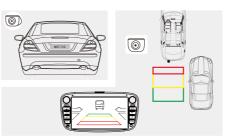

#### How to adjust the guide lines

According to the site of standard reference line, we can put references such as desks in the back side of the car. Compared with the marked references, we can adjust the sites and angles of two guide lines displayed on the monitor. You will get the accurate and safety guide lines once it coincides with the references.

Press setting button 👩 to enter "guide line adjustment" mode. The system is defaulted to adjust left guide line first. Press the button again to switch to adjust the right guide line.

The up (), left and right buttons are to adjust the corresponding location of guide lines. The clockwise rotation () and contra rotating () buttons are to adjust the angles of guide lines. It is easy to operate and calibrate. calibration finished, switch the reverse gear to save the information.

Caution: keep the remote control 0.5m-1.0m from rearview mirror when you use the remote to adjust the parking lines.

