

SIZE:280X210MM

How to Pair Your Tow Lights

- 1. Plug the 4 pin transmitter to the 12v vehicle side. Please make sure the transmitter has a good connection. You may use a wire brush or some electrical lubricant such as WD40 for all contacts to have a strong connection from male to female.
- 2. Turn on the Tow Lights power by pressing the silver button at the top of the device. The LED battery indicator lights should be on.
- 3. Press the pairing silver button located on the back of each device. If the pairing is successful, the light should flash once.

Note: if you have any issues pairing, please contact us at info@mastertailgaters.com



LEFT WIRELESS

RIGHT WIRELESS

Master  
Tailgaters

Owner's Manual & Safety Instructions

LED WIRELESS MAGNETIC  
RECTANGULAR TOWING LIGHT KIT

Model:MT-WT08



WARNING

Read this material before using this product.  
Failure to do so can result in serious injury.  
SAVE THIS MANUAL.

Read the entire manual before using this product!

LED Wireless Magnetic Rectangular Towing Light Kit  
for Vehicle Under 80” in width

This product is intended for temporary use to provide tail lamp function as well as stop and turn indication when towing a vehicle less than 80" wide.

A special note about battery

This lamp can be charged with car cigarette lighter. When first time using this light, please charge it for 4-6 hours, the battery can be used about 24 hours after fully charged.

Using the wireless towing light

It is important that you read the entire manual to become familiar with the product BEFORE you assemble and use this product. Before operating this product be sure that you have all parts described in the Parts List, if you do not have experience doing this type of electrical work, the job should be done by an automotive service technician.

Installation


- 1. Clean the mounting surface and light's magnetic base then stick the lamp on the rear of vehicle.
- 2. Check that the magnetic light bases are clear of any debris that may scratch the mounting surface, the entire magnet must be touching a steel surface for optimal holding performance. Place the lamp to allow following vehicles optimal visibility at all times.
- 3. Connect the wireless remote transmitter with the vehicle's 4-way plug.
- 4. Turn on the switch located on the top of the lights (DRIVER—left light and PASSENGER—right light), each light will show 18 LEDs on, now the lamp can be controlled by the wireless remote transmitter.
- 5. Verify the operation of tail light, stop light and both left turn and right turn signals. Do not drive your vehicle unless all lights function!
- 6. Switch off the lights after using and return the lights, wireless remote transmitter and car cigarette lighter to the original package. If packaging is unavailable, place the lights inside a bag when not in use and keep the magnets clear of debris. If lights are stores for a long time, please observe the battery indicator on the top of lights and make sure the lights are fully charged before the next using.

Important Considerations

- 1. The LED Wireless Magnetic Rectangular Towing Light Kit is designed to be used with standard 12 volt vehicle systems.
- 2. Make sure that your brake, turn signal and running lights are operated correctly before driving. Do not attempt to use the towing light kit if the towing vehicle has faulty wiring, or if some, or all of the towing vehicle's lights are not functional.
- 3. Always keep the car cigarette lighter charger in the car, if the lamp lack of enough power, you can charge it timely.

Transmitter & Vehicle Plug Wiring Scheme

White: Ground(smaller hole than others)  
Red: Left Brake / Left Turn Signal  
Green: Right Brake / Right Turn Signal  
Brown: Inapplicable (The running light controlled by switch)

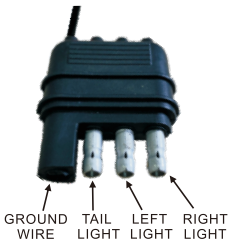

Warning: The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

Parts List

Part#	Description	Quantity
1	Left & Right Lights	2
2	Wireless Remote Transmitter	1
3	Car Cigarette Lighter Charger	1

