



AND PLAY HD WEBCAM

QUICKSTART GUIDE


CAMERA SET UP

Place camera facing the desired direction, ensuring a sturdy place is available to place mounting bracket.





- Once the camera is in place, gently press the 2 adjustable arm down against the mounting surface to secure the camera in place.
- Insert the USB end of the camera's cable into the computer or device's USB port. Then connect the AUX end to the audio port of your device to enable sound. No software is necessary your computer or device will recognize the camera.

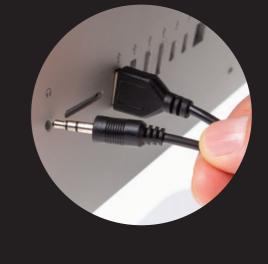



- Once mounting and installation is complete, and the camera is transmitting an image adjust the focus if needed by twisting the lens manually to the left or right.
- on the adjustable arm. Alternatively, if no available object is present for mounting, you can rest the camera on the arm and use it as a stand.

The camera can be mounted on a tripod using the tripod socket

TWIST.

TO FOCUS

4

1. 720P, Manual Focus Lens

FUNCTIONS AND SPECIFICATIONS

- 2. Built-in, Noise Reduction Mic
- 3. Attached USB and Aux Cable
- **4.** 180° Adjustable Arm 5. Tripod Socket
- **INCLUDES**

CYLO HD-720P CAMERA with

attached 4FT, 3.5mm Aux splitter cable **User Manual**

DEVICE DRIVER No driver necessary FRAME RATE 30fps (Frames Per Second) **FOCUS RANGE 20mm-Extreme RESOLUTION** 720p

VIEW ANGLE 100° SENSOR TYPE cmos

PHOTO FORMAT bmp, jpg

MICROPHONE Built-in, Noise Reduction **INTERFACE TYPE USB 2.0, 3.5mm Aux**

CABLE LENGTH 4ff

CONFERENCING SUPPORT

Zoom App, Microsoft Teams App, Facebook App Skype App, WeChat App, Facetime App,

Windows Camera App, Mac Photo Booth App **OS SUPPORT** Windows /7/8/10 and Mac OS

HD720P Webcam Problem Solution No video transmitting from camera In application select "USB 2.0 Camera"

Troubleshooting: Below are some basic trouble shooting scenarios for the

