

SPEAKER POWER BANK FLASHLIGHT





Good call on picking up the Outdoor Tech® Buckshot Pro Ultra speaker/powerbank/ flashlight combo. Your experience of the universe will soon be enhanced powerfully. This manual exists to help make sure that you use them correctly, so you're definitely going to want to relax for a hot second and look through this.


Kisses,






natomy1	
lashlight Function5	
ower Up6	
ower Bank Features7	
airing Mode8	
Music Function9	
hone Function10	
pecs11	
are & Maintenance 12	

ANATOMY

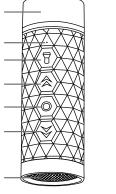

- A. Flashlight
- B. Microphone
- C. Flashlight Button
- D. Volume Up
- E. Multifunction Button (MFB)
- F. Volume Down
- G. Speaker

ANATOMY (CONTINUED)

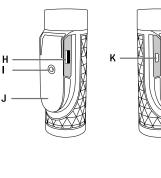


H. USB Out port (5V/1A) I. 1/4"-20 Thread Mount

J. Mounting Clip

K. Micro USB Charging Port

ANATOMY (CONTINUED)

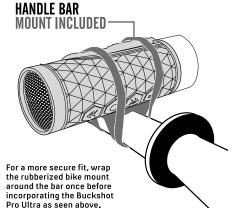

The included rubber bike mount can be used in different ways to accomodate your outdoor lifestyle. Whether its a bike handlebar or your backpack strap, you can be creative in the ways you wrap your

Buckshot Pro Ultra to any space.


*The speaker side should be facing

you with the flashlight facing the

other direction.


(super)

ANATOMY (CONTINUED)

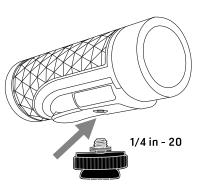

For mounting: Twist the Buckshot Pro Ultra onto a 1/4 in - 20 threaded bolt


■ FLASHLIGHT FUNCTION

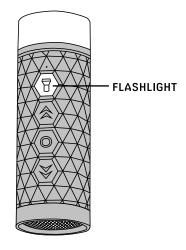

On/Off - Press & Hold 3 sec Lantern: High - press 1x

Lantern: Low - short press 1x

Bike Light: Solid Beam - short press 1x Bike Light: Strobe - short press 1x

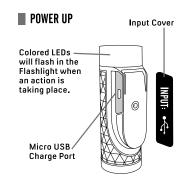


TO CHARGE UP

- 1. Connect the included Micro USB cord to a power source and the charging port on the Buckshot Pro Ultra. When charging, the red LED light will stay activated. ***Full charge time is about 3 hours
- 2. When the Buckshot Pro Ultra is fully charged. the RED light will turn off.

The displayed battery meter is supported for Apple products.


*The Buckshot Pro Ultra's Bluetooth and music functions can still operate while charging.

POWER BANK FEATURES

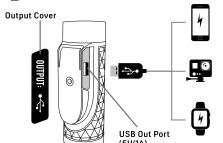

TO CHARGE YOUR DEVICES

Ultra's output port.

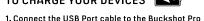

- 2. Connect the other port to your device.
- 3. Your device should automatically start charging.
- 4. When the your device is fully charged, disconnect the Buckshot Pro Ultra

Remember, the Buckshot Pro Ultra shares its 2600 mAh battery with three functions; speaker, powerbank, and flashlight accessory. The amount of charge, music time, light time will vary based on the use of any of the three functions.

■ PAIRING MODE

Power On / Off ON: Hold the MFB for 3 seconds or until the LED light flashes blue and the voice prompt states

OFF: Hold the MFB for 3 seconds or until the LED light flashes red and the voice prompt states

Enter Pairing Mode

When powered on the speaker will enter into pairing mode automatically. The voice prompts states power on, battery level, pairing as the LED lights begin to flash red and blue alternately.

Pairing Buckshot Pro Ultra to Device Open the Bluetooth settings on your device. If you have put your Buckshot Pro Ultra into pairing mode, it should be listed as "ODT Buckshot Pro Ultra" as an available device to pair. Connect with the Buckshot Pro Ultra. The voice prompt will state "Paired" if the Buckshot Pro Ultra and your device connected. The red and blue flashing LED's shut off when connected.

MUSIC FUNCTION Music/Device Controls Skip forward Volume up Multi Function Button - MFB Skip backward Volume down

*The Volume up button is closest to the


Top/Flashlight end of the Buckshot Pro Ultra

FUNCTION

Power on O Press & hold 3 sec Power off O Press & hold 3 sec Pairing mode O When powered on, it will enter into pairing mode automatically (hi-jack mode) A Press & hold for 3 sec Play / Pause O Short press once Volume up A Short press once Volume down Short press once Skip forward Press & hold for 2 sec Skip backward Press & hold for 2 sec	FUNCTION	BUITON	ACTION
Pairing mode O When powered on, it will enter into pairing mode automatically (hi-jack mode) A Press & hold for 3 sec Play / Pause O Short press once Volume up A Short press once Volume down Short press once Skip forward Press & hold for 2 sec	Power on	0	Press & hold 3 sec
Pairing mode Will enter into pairing mode automatically (hi-jack mode) Press & hold for 3 sec Play / Pause O Short press once Volume up Short press once Volume down Short press once Skip forward Press & hold for 2 sec	Power off	0	Press & hold 3 sec
Manual pairing for 3 sec Play / Pause O Short press once Volume up Short press once Volume down Short press once Skip forward Press & hold for 2 sec	Pairing mode	0	will enter into pairing
Volume up Short press once Volume down Short press once Skip forward Press & hold for 2 sec		* *	
Volume down Short press once Skip forward Press & hold for 2 sec	Play / Pause	0	Short press once
Skip forward Press & hold for 2 sec	Volume up	^	Short press once
\$ 1	Volume down	>>	Short press once
Skip backward Press & hold for 2 sec	Skip forward	^	Press & hold for 2 sec
	Skip backward	¥	Press & hold for 2 sec

DUTTON

ACTION

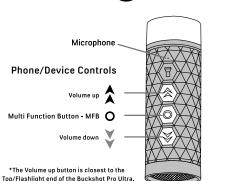

FUNCTION	BUTTON	ACTION
Answer call	0	Short press once
End call	0	Short press once
Reject an incoming call	0	Press & hold for 2 sec
Siri/Voice activation	0 ¥	Short press 1x simultaneously
Last number redial	☆ ○	Short press 1x simultaneously

SPECS



Rating: IP6 Bluetooth v 4.2

Bluetooth profiles: HFP. A2DP

Operating range: 32 ft

Device name: ODT Buckshot Pro Ultra

Pairing code: 0000 (if needed)

Power source: Lithium ion rechargeable

batteru cell

Battery capacity: 2600 mAh Charging in: micro-USB 5V/1A

Charging out: 5V/1A

Playing Time: 10 hrs Standby Time: 3 months

Flashlight: 100 Lumens

Operating Temperature: -20~60° C Storage Temperature: -20~60° C RoHS: Fully RoHS compliant

■ CARE & MAINTENANCE

- Do not access the input/output simultaneously. It may affect the product's performance and not charge properly.
- Use a soft, dry cloth to wipe the surface. Do not use intensive chemical products or detergen to clean the product.
- Charge the product at least once every three months to prevent the batteries from druing out
- It is normal for the battery to heat up during its charge. The temperature should be below 45° & does not affect the Buckshot Pro Ultra's performance.
- For best performance, fully charge the Buckshot Pro Ultra before charging other devices.
- All products have passed the strict quality inspection. Do not use the battery/device if it gives off an odor, generates heat, becomes deformed, abrasion, damaged or appears abnormal in any way.
- Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The use of apparatus in moderate climates.
- The Marking plate is located at the bottom of the device

DON'T BE SO ANTISOCIAL







Facebook.com/outdoortechnologu Twitter & Instagram: Coutdoortech

Questions, comments, complaints, secret desires, or just to say what's up: email info@outdoortech.com

K bye.

www.outdoortech.com