



OUTDOOR TECH.

CHIPS®

**UNIVERSAL
WIRELESS**

**HELMET
AUDIO**

Hi.



 
Good call on picking up the Outdoor Tech® CHIPS®, universal wireless helmet audio. Your experience of the universe will soon be enhanced wirelessly. This manual exists to help make sure that you use them correctly, so you're definitely going to want to relax for a hot second and look through this.

Kisses,



OUTDOOR TECH.

ANATOMY

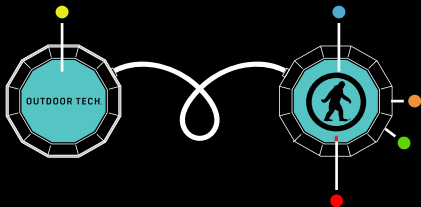

● Right ear button

● Left ear button

● Charge port/3.5 mm

● LED light

● Microphone

ANATOMY (CONTINUED)



FUNCTION

EARPIECE

ACTION


| | | |
|-------------------------|------------------|--|
| Power On | RIGHT ■ | Press for 3 sec |
| Power Off | RIGHT ■ | Press for 3-5 sec |
| Enter Pairing Mode | RIGHT ■ | Press for 5-7 sec |
| Answer | RIGHT ■ | Short press once |
| Reject | RIGHT ■ | Press for 2 sec |
| Hang Up | RIGHT ■ | Short press once |
| Mute | RIGHT ■ | Short press twice |
| Play | RIGHT ■ | Short press once |
| Pause | RIGHT ■ | Short press once |
| Skip Forward | ● LEFT | Press till song skips |
| Skip Back | ● LEFT | Press for 3 sec |
| Raise Volume | ● LEFT | Short press twice |
| Lower Volume | ● LEFT | Short press once |
| Mute | RIGHT ■ | Short press twice |
| Siri / Voice Activation | ● LEFT + RIGHT ■ | Press & hold until you hear voice prompt |

FUNCTION

VOICE PROMPT

| | |
|--------------------|-------------------|
| Power On | "Power On" |
| Power Off | "Power Off" |
| Enter Pairing Mode | "Pairing" |
| Successful Pairing | "Connected" |
| Answer | "Answer" |
| Reject | "Reject" |
| Hang Up | "Call Terminated" |

 POWER UP

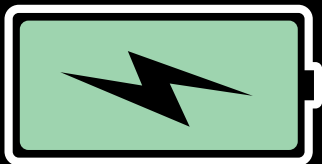

For best results, fully charge your CHIPS[®] using the supplied 3.5 mm to USB charging cable before use.

 
You can manage/check your CHIPS[®] batter by the fuel gage that appears on your smartphone,

The indicator light located on the right ear piece will flash red to indicate a low battery.

Once the CHIPS[®] are plugged into the micro-USB, the indicator light will turn red. It will turn off once the CHIPS are completely charged.

NOTE: It takes 2.5 hours to give your CHIPS[®] a full charge.

PAIRING

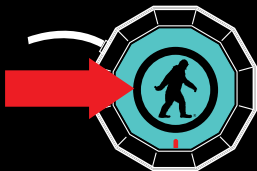

To pair the CHIPS[®] with a Bluetooth-enabled device:

Prior to using the OT CHIPS[®] for the first time, you will have to pair them with a Bluetooth-enabled device. The pairing procedure may vary for different devices. Please refer to your device's user manual for further information. The general pairing procedure is as follows:

- 1.) Place the OT CHIPS[®] and Bluetooth-enabled device no more than 3 feet apart.
- 2.) Hold the right ear button down until the LED flashes red and blue alternately. The voice prompt will state "Pairing"
- 3.) Activate your device's Bluetooth function and set your device search for Bluetooth devices within range. Select "ODT CHIPS" from the list of devices shown.
- 4.) According to the indication, enter password or Use pairing code: 00007.
- 5.) If prompted by your device to connect, select "Yes" (this will vary among devices)
- 6.) After successfully connecting, the blue LED will flash twice or three times every 4 seconds. The voice prompt will state "Connected."

If your Bluetooth device disconnects from the CHIPS the voice prompt will state "Your headset is disconnected."

TALK




The built-in microphone means that the CHIPS[®] can be used wirelessly.

***NOTE:** The built-in microphone only works when connected via Bluetooth.

The following are tips on how to use your CHIPS[®] to speak on the telephone:

- | | |
|---|---|
| Answer a call..... | Press right ear button |
| End a call..... | Press right ear button |
| Decline a call..... | Press and hold the right ear button for two seconds |
| Make a call..... | Use your phone to dial as usual Listen & talk through the CHIPS [®] . |
| Mute/cancel mute during a call..... | Press the right ear button twice |
| Transfer conversation to mobile phone or headset during call.. | Press and hold right ear button for 2 seconds |
| Volume up during a call..... | Double press the left ear button |
| Volume down during a call..... | Press left ear button |
| Voice Activation..... | Press and hold both left and right ear buttons simultaneously. Release and speak when you hear the voice prompt. |

 SPECS

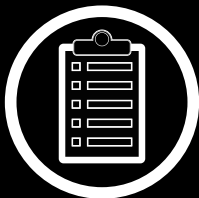

Battery life..... 10 hours of play time / 200 hours of standby

*Battery life varies subject to different playing circumstances, such as music type and volume.

Bluetooth Version.... V4.0
Bluetooth Profiles.... A2DP, AVRCP
Operating distance.. 32 feet
Charging input..... DC5.0V/90~130mA
Dimensions..... 51x14.5mm
Weight..... 60g
Battery capacity..... 240mAH

FAQ



Why is the red LED flashing twice every 20 seconds?

The battery is low. Recharge it.

Why is the red LED off when charging?

- A. Make sure the connection between the charging cable and the CHIPS_® is tight.
- B. If the CHIPS_® haven't been used in awhile, the light may not come on immediately. Charge the battery for at least 30 minutes.

Why can't I pair my CHIPS_®?

- A. Your Bluetooth device and the CHIPS_® must both be in pairing mode.
- B. Your CHIPS_® should not be paired to any other devices.

Why do I have Bluetooth signal loss/dropout/unclear conversations?

- A. Move your device closer to your CHIPS_®.
- B. Make sure your CHIPS_® are charged up.
- C. Turn off your CHIPS_® and device, then power up and reconnect.

Why can't the CHIPS_® hear my voice during a call?

 
- A. Make sure the CHIPS_® are on.
- B. Make sure the volume is not too low or muted.
- C. Make sure the CHIPS_® are properly connected with your device.
- D. Make sure the CHIPS_® are within range of your device.

CARE & MAINTENANCE




- Keep the CHIPS[®] dry
- Keep the CHIPS[®] away from direct sunlight or hot places. High temperatures will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Do not try to disassemble the CHIPS[®].
- Do not let the CHIPS[®] fall onto the floor or other hard surfaces. The internal circuit board may get damaged.
- Do not use intensive chemical products or detergent to clean the product.
- Do not scratch the surface with sharp things.

PUT THE CHIPS IN YOUR HELMET

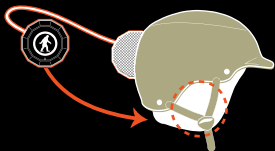

 
1. Drop the CHIPS[®] into the slots inside your helmet liner.

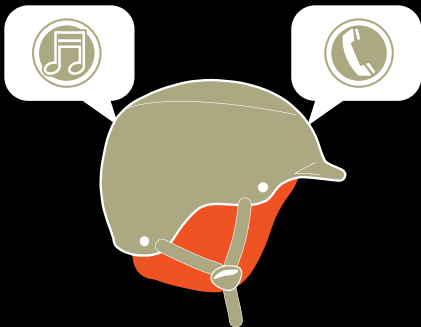

2. Rock out, make calls, and, you know, ski and snowboard and whatnot.

JACK IT IN

 The included 3.5mm cord allows you to rock out when the CHIPS[®] are out of power.

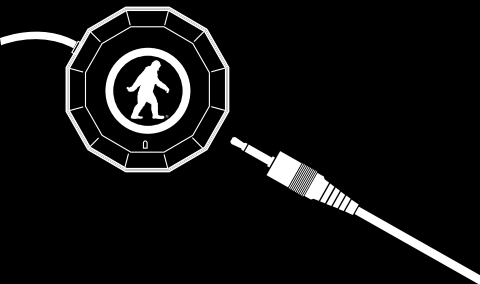

Plug the end with the microphone and control wheel into the CHIPS[®], and into your preferred music playing robotic device. Then proceed to rock out.

*The microphone on the CHIPS[®] will not function when you're playing music through the 3.5 mm jack. Instead, you'll be able to use the inline mic on the 3.5mm cord.

DON'T BE SO ANTISOCIAL



Facebook.com/outdoortech
Twitter & Instagram: @outdoortech

Questions, comments, complaints, secret desires,
or just to say what's up: email info@outdoortech.com

K bye.



outdoortech.com

U.S. Des. Pat. No. D704,676 S.