



OUTDOOR TECH.

DJ SLIMS

**RUGGED
WIRELESS**

**HEAD-
PHONES**

Hi.



Good call on picking up the Outdoor Tech® DJ Slims wireless headphones. Your experience of the universe will soon be enhanced wirelessly. This manual exists to help make sure that you use them correctly, so you're definitely going to want to relax for a hot second and look through this.

Kisses,




OUTDOOR TECH.

ANATOMY

● Multi-Function Button: Music/Calls/Pairing

Press once to Play/Pause OR Answer/Hang up
Hold down for 6 seconds to enter pairing mode

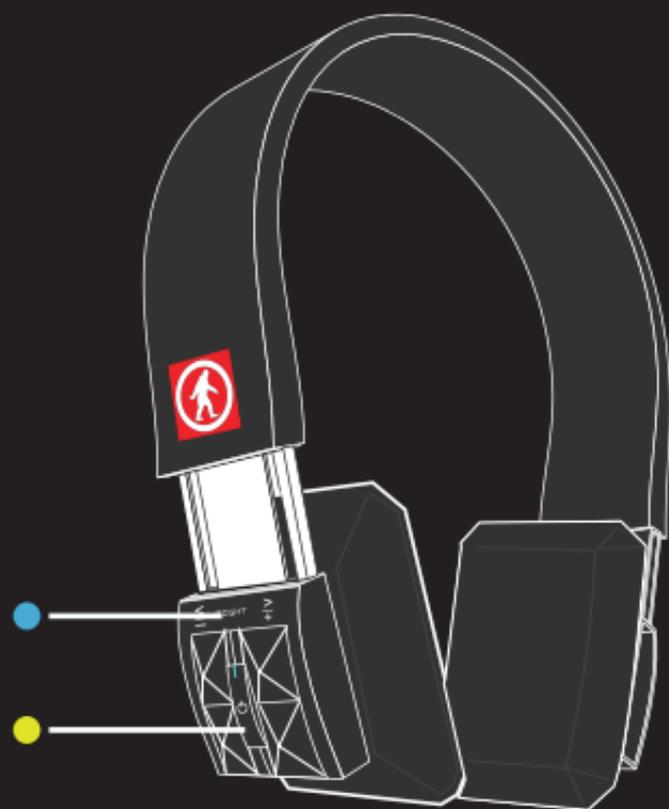


● Volume / Track Control

Raise Volume by pressing >

Lower volume by pressing <

Skip forward by holding > for 1-2 seconds

ANATOMY (CONTINUED)

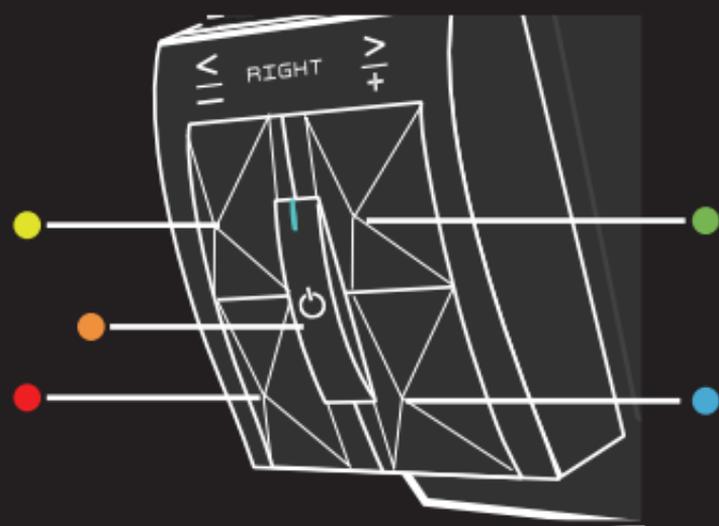

Track Control

- Skip forward by holding > for 1-2 seconds
- Skip backward by holding < for 1-2 seconds


Volume Control

- Raise Volume by pressing >
- Lower volume by pressing <

Multi-Function Button: Music / Calls / Pairing

- Press once to Play / Pause OR Answer / Hang up
- Hold down for 6 seconds to enter pairing mode

POWER UP

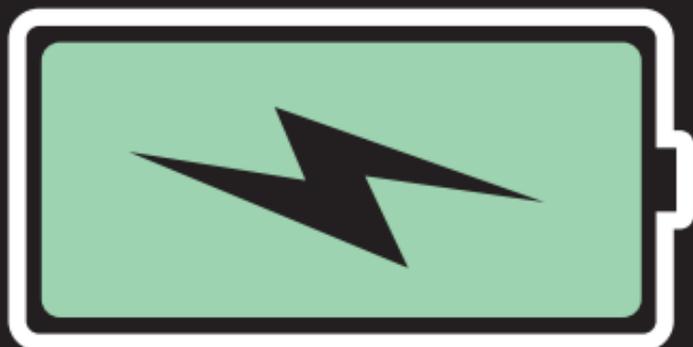


For best results, fully charge your DJ Slims before use.

The indicator light located on the Multi-Function Button will flash red to indicate a low battery.

NOTE: It takes 2 hours to give your DJ Slims an 80% charge. A full charge take 2.5 hours.

PAIRING

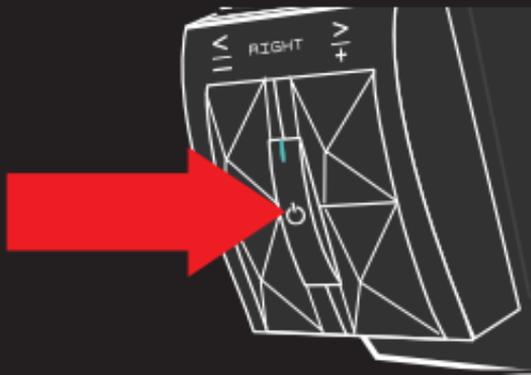

To pair the headset with a Bluetooth-enabled device:

Prior to using the DJ Slims for the first time, you will have to pair them with a Bluetooth-enabled device. The pairing procedure may be different for different models of devices. Please refer to your device's user manual for further information. The general pairing procedure is as follows:

- 1.) Place the DJ Slims and Bluetooth-enabled device no more than 3 feet apart.
- 2.) Hold the multi-function button down for 6-7 seconds or until the LED flashes red and blue alternately.
- 3.) Activate your device's Bluetooth function and set your device search for Bluetooth devices within range. Select "OT DJ Slims" from the list of devices shown.
- 4.) According to the indication, enter password or PIN No. "0000".
- 5.) If prompted by your device to connect, select "Yes" (this will vary among devices)
- 6.) After successfully connecting, the blue LED will flash twice or three times every 4 seconds.

You should now be able to play music & make/receive calls using the headset. Hooray.

TALK



The built-in microphone means that the DJ Slims can be used as a wireless headset.

***NOTE:** The built-in microphone only works when connected via Bluetooth.

The following are tips on how to use your DJ Slims to speak on the telephone:

- Answer a call.....**Press the multifunction button.
- End a call.....**Press the multifunction button.
- Decline a call.....**Press and hold the multifunction button for two seconds.
- Make a call.....**Use your phone to dial as usual. Listen and talk through the DJ Slims.
- Redial last number...**Press the multifunction button twice.
- Mute.....**Hold the >> and << buttons for 2 seconds, or until you hear a beep.
- Simultaneous calls..**To answer another call, press the multifunction button.

SPECS



Battery life.....Music playing/8 hours, talk time/30 hours, standby time 700 hours

*Battery life varies subject to different playing circumstances, such as music type and volume.

Speaker.....2W x 2 < 0.1% THD

Average Output.....85dB@0.5m

Frequency.....60Hz - 20kHz

Input power.....100 - 240V 50/60Hz
800mA

Dimensions.....143 x 100 x 55 mm

Weight.....350g

Bluetooth range.....Up to 30 feet from device

FAQ



What if I experience hearing distortion?

- A. Lower the volume on your DJ Slims and/or phone/device
- B. Make sure your Slims are charged up. Check for low battery, then charge as necessary.

Why aren't my headphones louder?

- A. Turn up the volume on your device and/or your DJ Slims
- B. Make sure your Slims are charged up.

Why can't I pair my headphones?

- A. Confirm that your device is Bluetooth compatible.
- B. Re-pair: follow pairing instructions in this guide

Why do I have Bluetooth signal loss/drop-out?

- A. Move your Slims closer to your device.
- B. Make sure your Slims are charged up.
- C. Turn off your Slims and device, then power up and reconnect.

K, bye.



outdoortech.com