

**apuro**

# Portable Sous Vide Instruction Manual



Pan not included

**Model**  
**DM868-A**

## Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
  - Health and Safety at Work Legislation
  - BS EN Codes of Practice
  - Fire Precautions
  - IEE Wiring Regulations
  - Building Regulations
- DO NOT immerse the appliance in water above the Max Fill line, or use jet/pressure washers to clean the appliance
- Do not immerse the appliance below the Max Fill line
- Do not use the appliance for anything other than its intended use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Not suitable for outdoor use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an APURO agent or a recommended qualified technician in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- DO NOT use if damaged

## Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your APURO product.

## Pack Contents

The following is included:

 
- APURO Portable Sous Vide Water Circulator
- Instruction Manual

APURO prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your APURO dealer immediately

## Function

### LCD Display

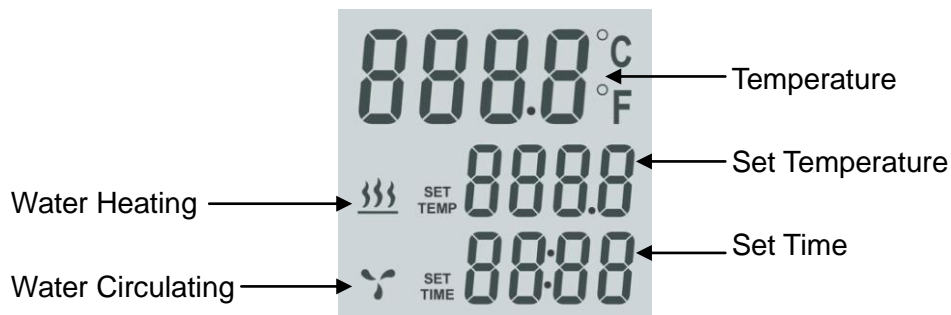

**Water Heating:** When displayed water is being heated.

**Water Circulating:** When displayed water is being stirred.



**Temperature:** Displays actual temperature of water.

**Set Temperature:** Temperature set point.

**Set Time:** Under setting mode displays the time set point. In working mode display shows the time left.

## Operation

  1. Choose a suitable water container. Container should be suitable for food use, resistant to temperatures of 100°C and have a depth of at least 200mm.
2. Fit the circulator securely to your water container using the adjustable fixing clamp. The clamp is adjustable for varying thicknesses of container using the thickness adjusting knob. The height of the circulator can also be adjusted for different container depths by pressing the height adjustment button.

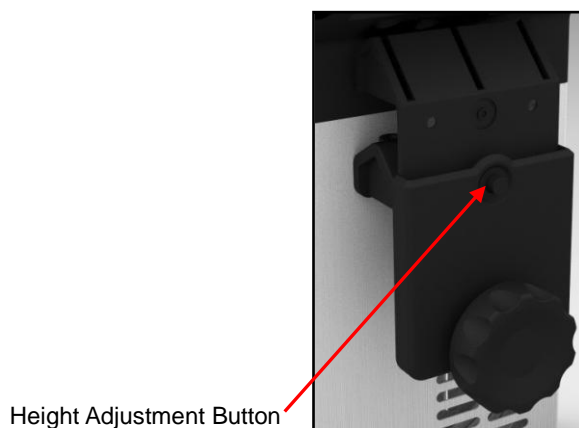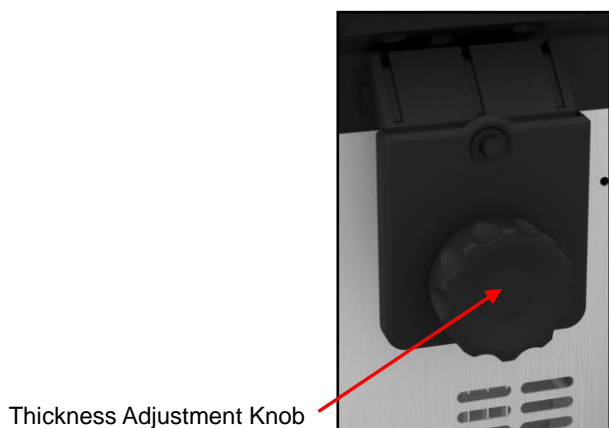


3. Add water to the water bath.

**Note:** the water level (after the food is put in) should be higher than the MIN but lower than the MAX marked on the machine.

4. Turn the circulator on by pressing the On/Off button at the back of the machine.



 5. Press the Temperature Display button to set the unit to display °C or °F



**Note:** Default setting is °C. After choosing °C or °F, the unit will remember your setting for future use.

6. Press  and  to set working time and temperature.

7. After setting time and temperature, press  to start the unit heating. Pressing  will stop the unit heating.

10. When the water reaches the desired temperature place the food to be cooked into the water bath.


**Note:** before Sous Vide cooking, the food should be vacuum packed first.

11. When set time has expired the circulator will beep. Press  to stop the machine heating.

**Note:** the machine will go on beeping for 20 seconds. If there is no action by the operator the water temperature will be held at the preset temperature.


## Thermal Protection Reset Button

 The Apuro Sous Vide is fitted with thermal protection device to protect the unit from damage due to overheating, low water etc. The button is located on the front of the unit under the plastic cover. If unit overheats, allow to cool then reset by removing the cover and pressing the button.

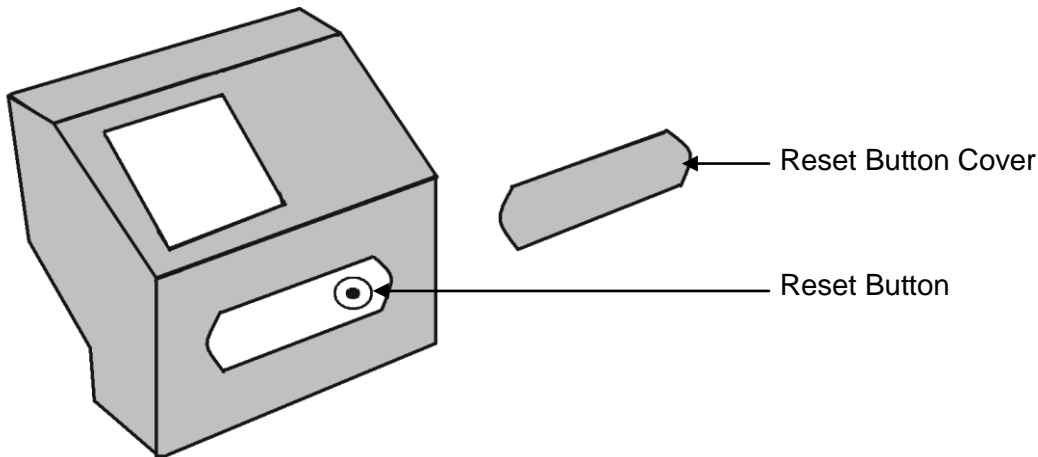


## Cleaning, Care & Maintenance

 - Disconnect from power by removing the plug, allow to cool before wiping exterior surfaces and removing any loose debris.
- The unit is fitted with a detachable filter. Clean the filter after each use.

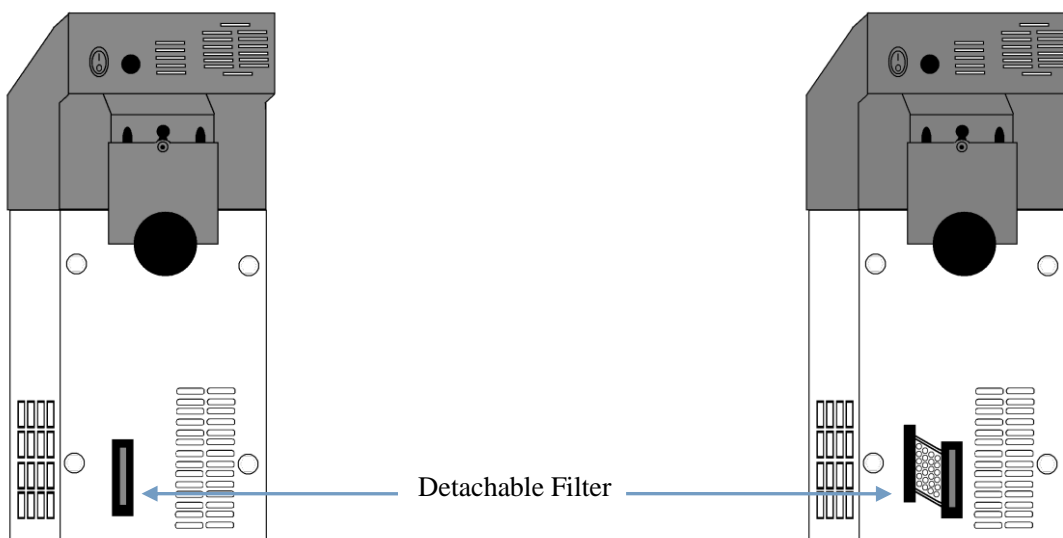

 - The metal cover protecting the heating element and the water circulating device can be removed for cleaning using the Hex key supplied. Remove the 4 Hex headed screws positioned on the back of the unit and the 4 hex headed screws underneath the bottom of the unit. Clean using a wet cloth.
- Reattach the back cover after cleaning.

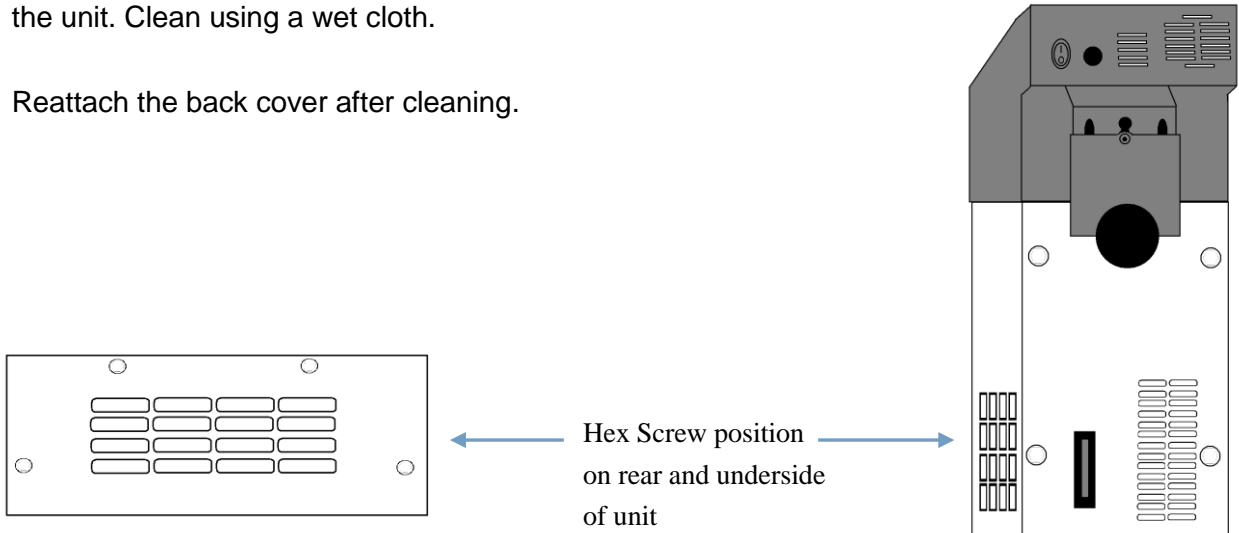

**Note: DO NOT use the Sous Vide without the back cover in place**

- Unit should be regularly descaled using a food safe descaler

## Trouble Shooting

Fault	Probable Cause	Action
Does not heat	No power	Make sure the machine is plugged in correctly
	Power switch is set to OFF	Set the power switch to ON
	Thermal Protector has activated	Reset Thermal Protector
Slow to Heat	Unit needs Descaling	Descal unit
Error message E01 is displayed	Unit is not sitting in the water	Make sure the unit is sitting in the water and that the water level is between the MIN and MAX line.
	Water level is too low.	Add water, make sure the water level is between the MIN and MAX line.
LCD Display does not switch on	Power switch is set to OFF	Set the power switch to ON
	Thermal Protector has activated	Reset Thermal Protector

## Technical Specification

Model	Voltage	Power	Current	Dimensions h x w x d mm	Weight (kg)
DM868-A	230v 50hz	1500w	6.5A	320 x 145 x 130	2.35kg

## Electrical Wiring

This appliance is supplied with a 3 pin, moulded, BS1363 plug and lead, with a 13 amp fuse as standard.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

## Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

APURO parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

APURO products have been approved to carry the following symbol:



**All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of APURO. Every effort is made to ensure all details are correct at the time of going to press, however, APURO reserve the right to change specifications without notice**


# DECLARATION OF CONFORMITY

---

<b>Equipment Type</b>	<b>Sous Vide Cooking Machine</b>
<b>Model</b>	<b>DM868-A</b>
<b>Legislation</b>	<b>RCM Part 2 Electrical Safety RCM Part 3 Electromagnetic Compatibility</b>
<b>Registered Supplier Number</b>	<b>E3011</b>
<b>Supplier Code</b>	<b>N30870</b>
<b>Producer Name</b>	<b>Apuro</b>
<b>Producer Address</b>	<b>15 Badgally Road, Campbelltown, NSW 2560</b>

---

I, the undersigned, hereby declare that the equipment specified above conforms to the above Legislation and Standard(s).
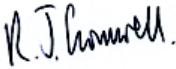
<b>Date</b>	<b>02/07/2015</b>
<b>Signature</b>	
<b>Full Name</b>	<b>Richard Cromwell</b>
<b>Position</b>	<b>Commercial Director</b>









