

Pro-Line Pack 3 Canisters VS-CAN3

Storing food in a Vacuum Sealer Cannister

Ideal for vacuum sealing crushable foods such as chips, soft fruits and liquid-base foods which are unsuitable for packing in vacuum bags.

Set comes with 3 different storage container capacities:

Small 700ml, Medium 1.4L and Large 2L

Please note these instructions are for use with the VS-C1 Commercial Vacuum Sealer by Proline.

- 1. Ensure canisters are clean and dry.
 - Note: Do not immerse canister lids in water, clean with a damp cloth only.
- Fill canister with the item to be stored and secure lid onto the canister.
 Note: Leave at least 2cm from canister cover rim, and make sure upper lid is securely on before vacuuming.
- 3. Turn canister lid dial arrow to SEAL.
- 4. Connect one end of the Vacuum Seal Hose to the Vacuum Seal Hose Port on your Vacuum Sealer and the other end to the canister lid. Ensure both connections are pushed in tightly.
- Check that the pressure setting is on "normal'. Press the Canister Button on the control panel to begin process. Vacuum action will stop automatically when all air has been drawn out from canister.
- 6. Remove Vacuum Seal Hose connection to the canister.
- 7. To open canister after vacuum packaging, turn the canister lid dial arrow to OPEN. Wait several seconds for the lid to be released before removing.

Note:

- At the beginning, slightly press down the cover or on the hose adaptor to ensure no loose connections and to avoid air leaking through the gap between the cover and the canister top rim.
- Do not press any other button during operation.
- Canister lids are not to be used in microwave, freezer or oven.

Pro-line Australia

PO Box 4187 Norwood South LPO SA 5067

info@prolineaustralia.com.au www.prolineaustralia.com.au