

Essentials CO2 Inflator

ridepdw.com | 503-234-7257 3625 SE 21st Ave Portland, OR 97202



 
1. Close control knob.



 If using a Presta Valve, open it and tap the valve to release a burst of air and unstick the valve.



2. Thread CO2 cartridge onto inflator until it punctures.



4. Push nozzle onto valve.



- Open control knob slightly to release a small amount of CO2 into tube. Verify CO2 is going into the tube before proceeding to fill tube completely.
- 6. When finished, twist control knob to close the flow of CO2 and pull nozzle from tire valve.