



## **Camber/Toe Adjustment Tool Instructions**



(Toe Adjustment - Horizontal)

---

By extending our adjustment tool a width just wider than your tires, using the knob on the tool, you can adjust the camber and toe of your cart.

**\*\* Where applicable, always adjust camber first \*\***

---

Camber is the vertical alignment of the tire/wheel.

Toe is the horizontal alignment of the tire/wheel.



(Toe Adjustment - Horizontal)



(Camber Adjustment - Vertical)

---

When aligning both camber and toe, you will need to extend the tool around the tires and adjust the alignment so that both sides of the tires are touching and flush with the tool or have a 1/16"-1/8" gap on the inside end of the adjustment tool.

---

To adjust the camber, you will use the ball joints.

To adjust the toe, you will use the tie rods.