LPR-01 LOOPER

HOW TO RECORD/OVERDUBBING

- press foot button once to record mode (LED at full brightness)
- press foot button once again to playback mode (LED is half bright until end of recording. LED will flash once and then repeat recording)
- press foot button once again at playback mode to overdubbing mode (LED at full brightness)
- press foot button once again to playback mode (LED is half bright until end of recording. LED will flash once and then repeat recording)

HOW TO DELETE RECORDING

- press the foot button at playback mode for 2 seconds until LED flashes few times to delete the last overdubbed record

HOW TO RESTORE THE RECORDING

- press the foot button at playback mode for 2 seconds again until LED flashes few times to restore the deleted overdubbed record

HOW TO STOP THE LOOPS / TURN OFF THE PEDAL

- press the foot button twice quickly to stop the playback (LED flashes slowly)
- press the foot button at stop mode for 2 seconds until LED goes off to turn pedal off

