

Triple Press Wheel Instruction Manual



Parts Included

1 x Triple Press Wheel Includes:

3 x Wheel

1 x Main Frame

1 x Axle

2 x M24 Nyloc Nut

6 x Inner Spacers

2 x Width Spacers


2 x Tall Spacers

2 x U-Bolt

Step 1:


Insert the axle through the left hole (its easier to assemble on a raised surface).

Put one 60mm spacing followed by one bushing on the axle before putting on the wheel

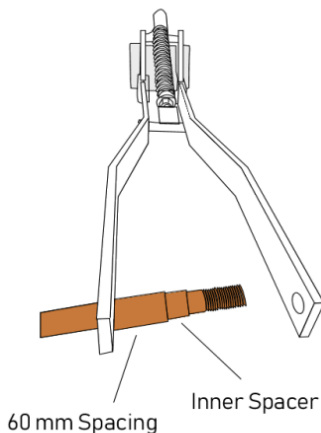


Step 2:

Next add the wheel to the axle. After adding the wheel add another inner spacer followed by a second 60mm spacer and push the axle through the hole on the right

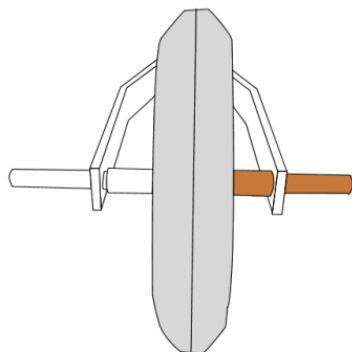


Step 3:

On one side of the frame put one width spacer and one spacer onto the axle and put on the wheel. Then add a spacer next to the wheel and **loosely put on the nut.** Repeat on the other side.

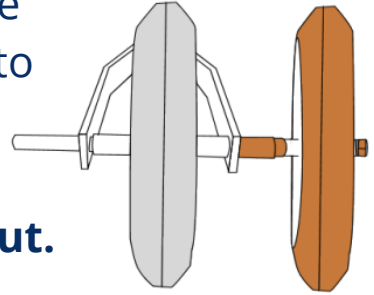


Step 4:

Tighten both nuts and then fasten the gang to the bar using supplied U-bolts.

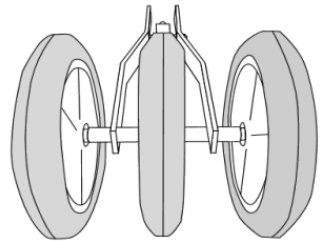

Our heavy duty swivel extension bolts to rear of triple system allowing wheels to track more accurately through turns

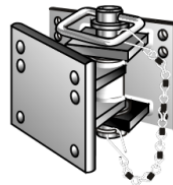

If you have any questions about installing your Triple Press Wheel please do not hesitate to give us a call on **08 9354 1111**

Reorder Part No.

Axle	TS-0350
M24 Nyloc Nut	FA-0405
Inner Spacers	FA-0871
60cm Spacers	TS-0355
Width Spacers	TS-0356
M12 102 x 140mm	FA-0705

We love seeing our products ready for action!

Text a photo to **0499 225 219**
along with your name and
postage address and we will
send you a FREE Maxipoint hot
sauce!

