



# Calibration

---


Display shows:



1. Press and hold any key while powering **ON**.

CAL

2. Press and hold **F** key first and then  key,  
then release **F** key first then  key.

C. 2.2.2.

3. Press  key for **Capacity** selection.


4. Press and hold **F** key first and then  key, then release  
**F** key first then  key to make sure **Capacity** selected,  
and display shows **Offset value to be 2000 ~ 6000**.

42.2.2.

If it's not in this range **SW2** to be adjust.

5. Press  key goes to **Span** mode.

2.2.2.2.



6. Press  key to zero display.

0

7. Put on the **calibrating weight in lb**.

( **Span value to be 20000 ~ 30000 at full capacity** )

22.2.2.2.

8. Press  key to cycle through a list of permissible weights.  
When the weight on the scale is displayed, press  key.