
 








Calibration

Display shows:

1. Please have the jumper JP5 switch OFF before you start to calibrate weight.
2. Press and hold any key while powering ON.
The system goes to Calibration mode.
3. Press  key goes to DIVISION scrolling list.
Press  key to select Division.
4. Press  key goes to CAPACITY scrolling list.
Press  key to select Maximum Capacity.
5. Press  key goes to SPAN mode.
(Offset value to be displayed around 5000 ~ 50000)
6. Press  key to make display to zero.
7. Put on the calibrating weight in kg.
(Span value to be 50000 ~ 150000 at full capacity)
8. Press  key to cycle through a list of permissible weights.
When the weight on the scale is displayed, press  key the weight calibrating to be done.
9. After finish the weight calibration, make the JP5 switch ON.
Now you are ready to weigh.

CAL

- 50000
- 12000

30000
60

12222

0

122222

30
1