

SA121 CALIBRATION

AUTO CALIBRATION

1) WHEN THE DISPLAYS ARE 0, PRESS  KEY, THEN  KEY AT THE SAME TIME. DON'T RELEASE YOUR FINGERS FROM THE KEYS UNTIL THE WEIGHT DISPLAY IS "-----"



FULL CAPACITY OF THE SCALE IS SHOWN IN THE FIRST DISPLAY WINDOW. THIS ENTRY CAN BE CHANGED BY INPUTTING THE WEIGHT YOU ARE USING.

2) PUT FULL CAPACITY ON THE PLATFORM. THE SCALE WILL CALIBRATE AUTOMATICALLY. **WHILE THE SCALE IS COUNTING DOWN, REMOVE WEIGHT FROM THE PLATFORM.**

PRESS  TO TAKE YOU OUT OF THE CALIBRATION MODE.

