




 
 
---

## ADVANCE FUNCTIONS

### EXTERNAL WEIGHT CALIBRATION

(This function is NOT available on OIML and Brazil approved models or the none-approved model without external calibration function)

1. After the indicator resets back to zero, press and hold the  + "ENTER" ( ex:  ) keys together until the weight display shows "- - -", then release them. The full capacity of the scale is show on the Weight display and **CAL.** is shown on the Unit Weight display.

WEIGHT	UNIT WEIGHT	QUANTITY
		
Full capacity value of the scale		

2. Based on the capacity value displayed, place full load capacity, on the scale. When the weight is stable, the indicator will calibrate automatically. When the indicator counts down remove the weights from the scale, before the count reaches zero.

#### NOTE:

- It is also possible to calibrate the scale with less than full load. Key in the weight value to be used followed by placing that weight on the scale.
- The weight value can NOT be less than 10 % of full capacity and over 1/2 of full capacity is highly recommended.
- Refer to APPENDIX: CAPACITY SETTING VALUES TABLE for the detail calibration value and calibration weight.