 




rockymounts
Ouray Crossbar

 
1

CONFIRM THAT YOUR VEHICLE HAS RAISED SIDE RAILS

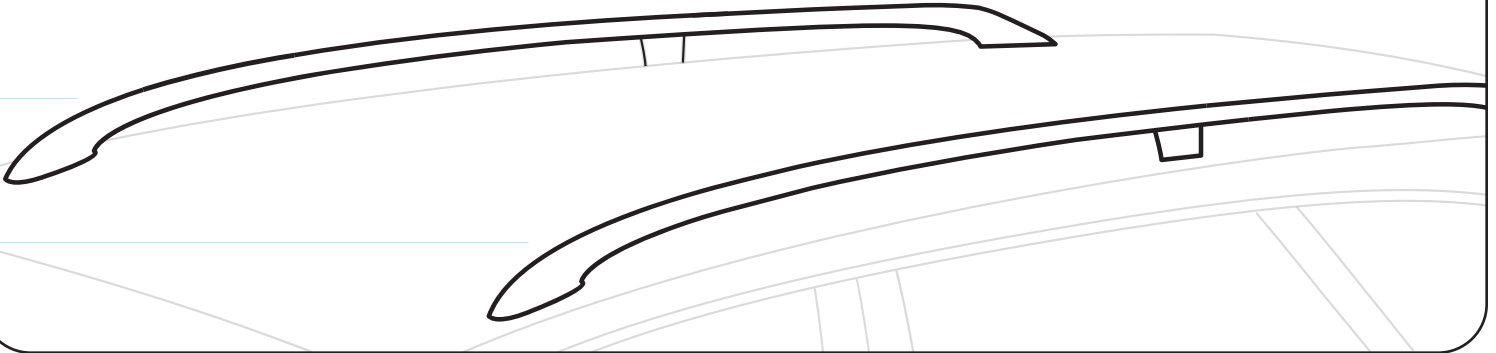

2

MEASURE OUTSIDE TO OUTSIDE OF YOUR RAISED SIDE RAILS

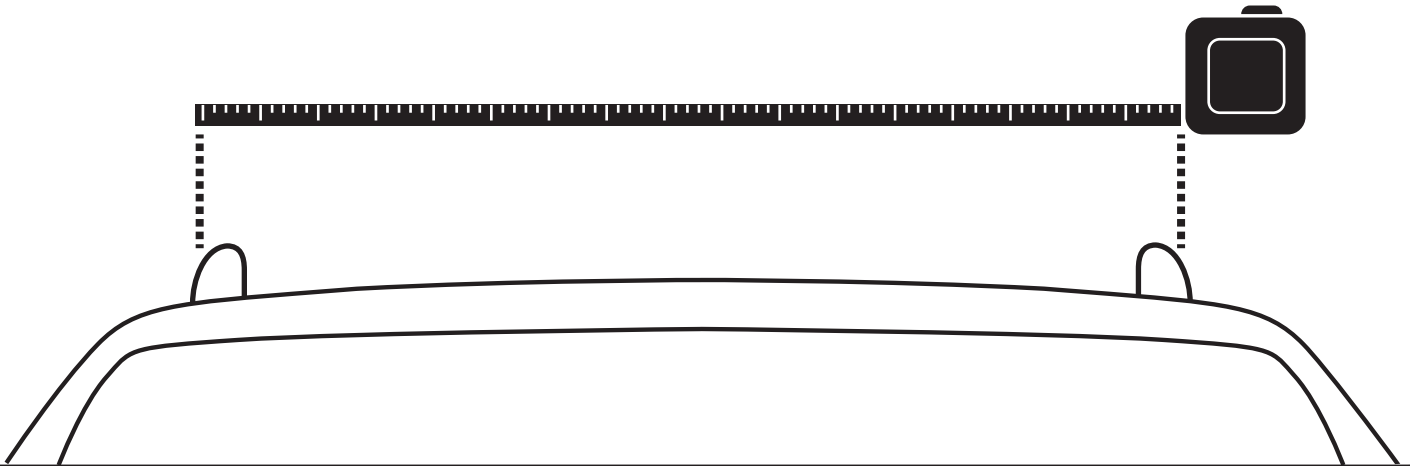

3

DETERMINE THE OURAY CROSSBAR YOU WILL NEED FOR YOUR FLAGSTAFF TOWERS WITH THIS CHART

MEASUREMENT	OURAY CROSSBAR LENGTH
UNDER 37"	44" OURAY CROSSBAR
37" - 40"	47" OURAY CROSSBAR
40" - 43"	50" OURAY CROSSBAR
43" - 46"	53" OURAY CROSSBAR
OVER 46"	60" OURAY CROSSBAR