 
 




CRON

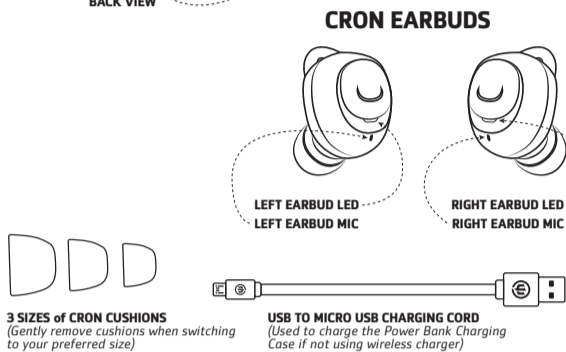

POWER BANK CHARGING CASE

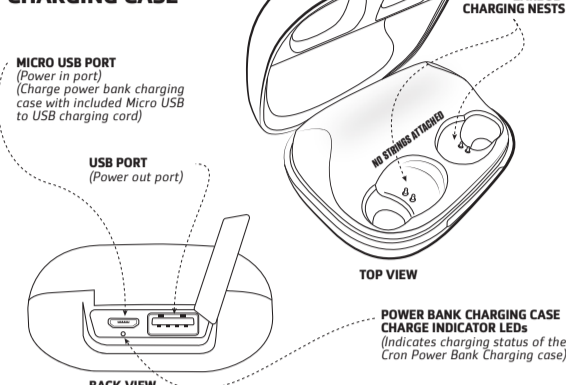

CHARGING THE CRON EARBUDS

Delicately place the Cron earbuds into the earbud charging nests. The cushions on the earbud will face down. A small magnetic pull will help the earbuds fall into the correct position. The Cron earbuds will show a slow flashing white LED when charging. LEDs will briefly turn solid white then turn off when Cron earbuds are fully charged.

The Cron Power Bank Charging Case will shut down automatically when the Cron earbuds both reach full charge or when both the earbuds are removed from the case.

CHARGING EXTERNAL DEVICES WITH POWER BANK CHARGING CASE

External devices like phones or other small electronics that can charge via USB, can be plugged into the USB port (large port) of the Power Bank Charging Case. Using the device's charging cord, plug into the USB port on the charging case, followed by plugging the micro USB end into your personal device.

CHARGING CRON POWER BANK CHARGING CASE VIA Qi WIRELESS CHARGER

To charge your Cron Power Bank Charging Case, make sure your Qi wireless charger is plugged in to a power source. Rest the Charging Case onto the wireless charger

 
NOTE: You may need to slightly adjust the position of the Cron Power Bank Charging Case on the Qi wireless charger until the charging sensors from the charging case and the wireless charger align and charging begins.

CHARGING the CRON POWER BANK CHARGING CASE

To charge the Cron Charging Case, use the included USB to Micro USB charging cord. Connect the Micro USB (smaller side) into the Charging Case and connect USB side into computer or USB wall charger (not included).

The Cron Power Bank Charging Case also has wireless charging capabilities. Simply set your Cron Power Bank Charging Case onto a horizontal Qi wireless charger to charge the case.

NOTE: You may need to slightly adjust the position of the Cron Power Bank Charging Case on the Qi wireless charger until the charging sensors from the charging case and the wireless charger align and charging begins.

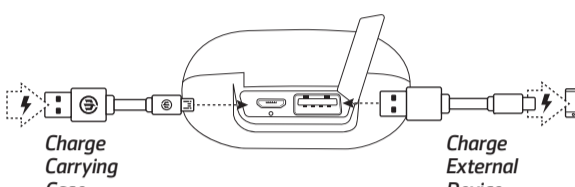

CHARGING CASE STATUS LIGHTS:

Charging – Flashing Orange LEDs
Fully Charged – Solid Orange LED

EARBUD STATUS LIGHTS:

Charging – Slow flashing white LEDs
Fully Charged – LEDs will turn solid white briefly and then shut off.

FIRST TIME USE FOR DUAL EARBUD MODE

(If you want to use a single earbud, please refer to section "Single Earbud Use" on Page 7.)

- 1 Make sure the Cron earbuds are charged (Please refer to section "Charging the Cron Earbuds" on page 3) and Bluetooth device (phone, computer, tablet etc.) is turned on with the Bluetooth feature enabled (this is usually found in settings).
- 2 Remove charged earbuds from charging case. They will turn on and sync together automatically.
- 3 Both earbuds will sync together; both will beep.
- 4 The right earbud, when in dual earbud mode is the "communicator." Once both earbuds are synced, the right earbud will flash red and white.
- 5 Your device will detect the Cron's pairing name "Wicked Cron". Select "Wicked Cron" on your device to start pairing to your device.
- 6 The right earbud will beep when paired with your device and then the LED will turn off.
- 7 You're ready to go!

FUTURE USE AFTER INITIAL PAIRING THE CRON TO YOUR DEVICE

(If this is the first time the Cron earbuds are being paired to your Bluetooth device, or if the Cron earbuds were "forgotten", please see "First Time Use" section on Page 3.)
(If you want to use a single earbud, please refer to section "Single Earbud Use" on Page 7.)

CONTINUED USE AFTER INITIAL PAIRING OF THE CRON EARBUDS TO YOUR DEVICE

Continued use after initial pairing the Cron earbuds to your device

- 1 Remove both Cron earbuds from the Cron Power Bank Charging Case (they will sync to each other automatically)
- 2 Earbuds will automatically pair to the last device it was paired to.

TURNING ON CRON EARBUDS

There are two ways to turn on the Cron earbuds:
1 Remove earbuds from their charging case.
OR
2 Hold both center buttons for 1-2 seconds. (This is when the earbuds have shut down outside of the charging case.)

TURNING OFF CRON EARBUDS

There are two ways to turn off the Cron earbuds:
1 Place earbuds back into their charging case. They will automatically turn off.
OR
2 Hold center button, on either right or left earbud, for 5 seconds. You will hear a shut-down beep.

DISCONNECTED

When out of range, or if your device becomes disconnected from the Cron earbuds, the Cron earbuds will automatically go into pairing mode with the right earbud's LED flashing white/red.

PAUSE/PLAY

When both earbuds are paired to your device you can pause and play your music by using a short press on the center button with either the left or right earbud. (Please note when using BOTH earbuds, you can perform this function using EITHER earbud.)

NEXT/PREVIOUS TRACK

Next – Hold center button on right earbud for 2-3 seconds until the track skips to next track
Previous – Hold center button on the left earbud for 2-3 seconds until the track reverts back to previous track

ANSWER/HANGUP

When both earbuds are connected, answer or hang up by using a short press on the center button on either the left or right earbud.

INCOMING CALL

When receiving an incoming call, the Cron earbuds will ring using your chosen ringtone from your personal device. You can answer by using a short press on the center button on either the left or right earbud.

NOTE: Pressing the answer button on your device will answer the call on your phone. If you would like to take the call using your Cron earbuds, please press the center button on either the left or right earbud to answer the phone call.

LOW BATTERIES

Please consider charging your Cron earbuds regularly when not in use to retain ample battery life in both earbuds. When the earbuds have approximately 10% battery life the earbuds will announce "Low Battery." After around 4 minutes the earbud will repeat the announcement and then shut off. Due to right earbud being the main communicator it might lose battery life before the left. At this point you can shut off the left earbud and charge both earbuds, or choose to use the

left earbud for an additional time in single earbud mode. Please follow the instructions in the section "First Time Use-For Single Earbud Use" below. Please note that when pairing the Left earbud to your device (using single earbud), you will notice that "Wicked Cron" shows up a second time in your pairing name options. Please pair with the newest "Wicked Cron" option as this will be directly connected to the LEFT earbud.

Note: "Wicked Cron" might show up in your Bluetooth device's menu twice. This happens when the earbuds go into "single earbud use," or when one earbud is removed from the charging case for several seconds before it's partner. Please follow the steps below to reset to one "Wicked Cron" for future dual earbud use:
1 Place both earbuds in the charging case to turn them off.
2 Forget both "Wicked Cron" devices from your device.
3 Take both earbuds out of the charging case at the same time (within a few seconds of each other.)
4 A new "Wicked Cron" will display on your Bluetooth menu. Connect to the new "Wicked Cron."

FIRST TIME USE- FOR SINGLE EARBUD USE

*If you have previously connected your Cron earbud to your device using both earbuds, unpair "Wicked Cron" from your Bluetooth settings on your device.
1 – Remove one earbud, keep other earbud off and in case.
2 – "Wicked Cron" will appear in Bluetooth menu. Pair to "Wicked Cron."

Note: To return to "Dual Earbud Mode"
1 Place both earbuds in charging case.

IMPORTANT SAFETY INSTRUCTION

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.

Attention should be drawn to the environmental aspects of battery disposal: The use of apparatus in moderate climates.

This device complies with Industry Canada (licence-exempt RSS standard).
Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

PRECAUTIONS

LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE. USE AS LOW A VOLUME AS POSSIBLE.

Over exposure to excessive sound levels can cause permanent noise-induced hearing loss (NIHL). Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs.

SAFE USE & HAZARD WARNINGS
90 dB SPL at 8 hours, 95 dB SPL at 4 hours, 100 dB SPL at 2 hours, 105 dB SPL at 1 hour, 110 dB SPL at 30 min, 115 dB SPL at 15 min, 120 dB SPL. Avoid as damage may occur.

PRÉCAUTIONS

ÉVITEZ ÉCOUTER DE LA MUSIQUE À UN NIVEAU EXCESSIF, CAR CELA PEUT CAUSER DES DOMMAGES AUDITIFS PERMANENTS.

Les lignes directrices suivantes ont été établies par la Occupational Safety Health Administration (OSHA). Elle souligne le temps maximal d'exposition à divers niveaux de pression sonore avant que des dommages auditifs soient causés. Veuillez utiliser ces lignes directrices afin de limiter votre exposition à des niveaux de bruit élevés, ce qui peut endommager votre capacité auditive et entraîner une perte auditive permanente.

UTILISATION SANS RISQUE ET AVERTISSEMENTS DE DANGER
90 dB SPL 8 heures, 95 dB SPL 4 heures, 100 dB SPL 2 heures, 105 dB SPL 1 heure, 110 dB SPL 30 min, 115 dB SPL 15 min, 120 dB SPL. Évitez, des dommages peuvent être causés.

ADVERTENCIA

ESCUCHA DEL AUDIO NIVELES EXCESIVOS DE VOLUMEN PUEDE CAUSAR DAÑOS PERMANENTES AUDITIVOS. SE USE COMO VOLUMEN MÁS BAJO POSIBLE.

Durante la exposición a niveles excesivos de ruido puede dañar los oídos resultando en ruido permanente pérdida de audición inducida (PAIR). Por favor, use las siguientes pautas establecidas por la Administración de Seguridad de Salud Ocupacional (OSHA) de tiempo máximo que los niveles de presión de sonido antes de que se produzca una lesión auditiva.

USO SEGURO DE PELIGROS Y ADVERTENCIA

90 dB SPL a 8 horas, 95 dB SPL a 4 horas, 100 dB SPL a 2 horas, 105 dB SPL a 1 hora, 110 dB SPL a 30 minuto, 115 dB SPL a 15 minutos, 120 dB SPL. Evite que se produzca daños.

LIMITED ONE-YEAR WARRANTY

Keep your receipt to obtain warranty service. Go to www.wickedaudio.com for more details.

Mis au point au Utah
États-Unis Fabriqué en Chine
Developed in Utah, U.S.A.
Made in China

GARANTIE LIMITÉE D'UN AN

Conservez votre reçu pour obtenir le service en vertu de la garantie. Consultez www.wickedaudio.com pour en savoir plus.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna; Increase the separation between the equipment and receiver; Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction. In no event, under any cause of action of theory of liability shall Wicked Audio Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever arising out of use of or inability to use a product. This includes without limitation, laptops, cellular phones, or other hand-held devices, or any loss of data contained on the foreign device. Notwithstanding any damages that you might incur for general damages in contract, tort (including negligence) or otherwise, the entire aggregate liability of Wicked Audio and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the Wicked Audio product giving rise to liability. Some states may not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under applicable law.

FCC STATEMENT Headset

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna; Increase the separation between the equipment and receiver; Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC ID: #A1W12955X
ZAFM7WI-TW395X (Headset)
ZAFM7WI-TW395XC (Charging case)