 

 


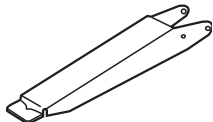
 





 

 



# Assembling the Optional Stand (KX-B061)

## ■ Accessories

The package box for the optional stand includes the parts noted below; please confirm that all parts are present before beginning installation

No.	Part name	Illustration	Q'ty	No.	Part name	Illustration	Q'ty
①	Stand base		2	⑨	Wing bolt	 M5 x 12 mm ( <sup>15</sup> / <sub>32</sub> " )	6
②	Pipe		2	⑩	Support bracket		2
③	Cover		2	⑪	Fall-prevention extension leg		4
④	Side bar (A)		2	⑫	Screw	 M6 x 60 mm (2 <sup>3</sup> / <sub>8</sub> " )	4
⑤	Side bar (B)		1	⑬	Nut		4
⑥	Screw	 M8 x 45 mm (1 <sup>25</sup> / <sub>32</sub> " )	12	⑭	Wrench	 *1	1
⑦	Fixture (left)		2	⑮	Wing bolt (Not use*2)	 M4 x 8 mm ( <sup>5</sup> / <sub>16</sub> " )	8
⑧	Fixture (right)		2	⑯	Screen holder bracket (Not use*2)		4

\*1 The accessory wrench is required to fasten or loosen the screws ⑥, ⑫; please store it carefully for future use.

\*2 These are used for other models.

### ● Before assembly, be sure to lock the casters.

