


# Panasonic®


## Electronic Board

### Installation Manual

(for qualified service personnel)

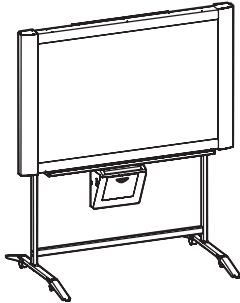

[Stand (option)]

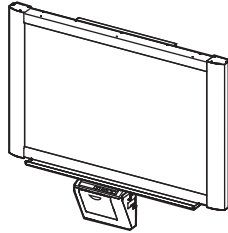

[Wall-mounting (option)]

Stand and Wall-mounting kit are optional.

Model No. **UB-7325**

English . . . . .	1- 16
Français . . . . .	17- 32
Deutsch . . . . .	33- 48
Español . . . . .	49- 64
Italiano . . . . .	65- 80
Nederlands . . . . .	81- 96
Svenska . . . . .	97-112
中文 . . . . .	113-128
Русский . . . . .	129-144

- Please ask your dealer regarding assembly of the electronic board and instruction for wall-mounting.

Before installing this set, please read this manual completely.

English

Français

Deutsch

Español

Italiano

Nederlands

Svenska

中文

Русский

# Table of Contents

	page
Assembling the Electronic Board . . . . .	3
●Accessories for assembling . . . . .	3
●Assembly . . . . .	4
Electronic Board Operations Check . . . . .	7
Repacking . . . . .	8
Assembling the Optional Stand (KX-B061) . . . . .	9
●Accessories . . . . .	9
●Assembly . . . . .	10
Optional Wall-mounting Kit (KX-B063) . . . . .	13
●Accessories . . . . .	13
●Wall-mounting procedure . . . . .	14
●Attaching the wall-mounting fixtures . . . . .	15

Before installing this set, please read this manual completely.

## CLASS 1 LED PRODUCT

### **WARNING**



Have the unit installed, removed and disposed of only by qualified service personnel.





Safety check must be done by qualified service personnel after installing this option.

# Assembling the Electronic Board

## ■ Accessories for assembling

The package includes the parts for setting up the electronic board shown below. Make sure that all of these parts are included in the package before proceeding.

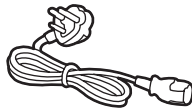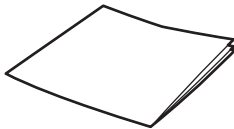No.	Part Name	Illustration	Q'ty	Remarks
1	Power cord		1	
2	Wall-mounting template		1	For wall-mounting

# Assembling the Electronic Board

## ■ Assembly


### 1 Assemble the optional stand or wall-mounting kit.

■ If you are using a stand, refer to page 9.

■ If you are using a wall-mounting kit, refer to page 13.

### 2 Remove the electronic board from the shipping box.

Remove the joints, then remove the electronic board from the shipping box.

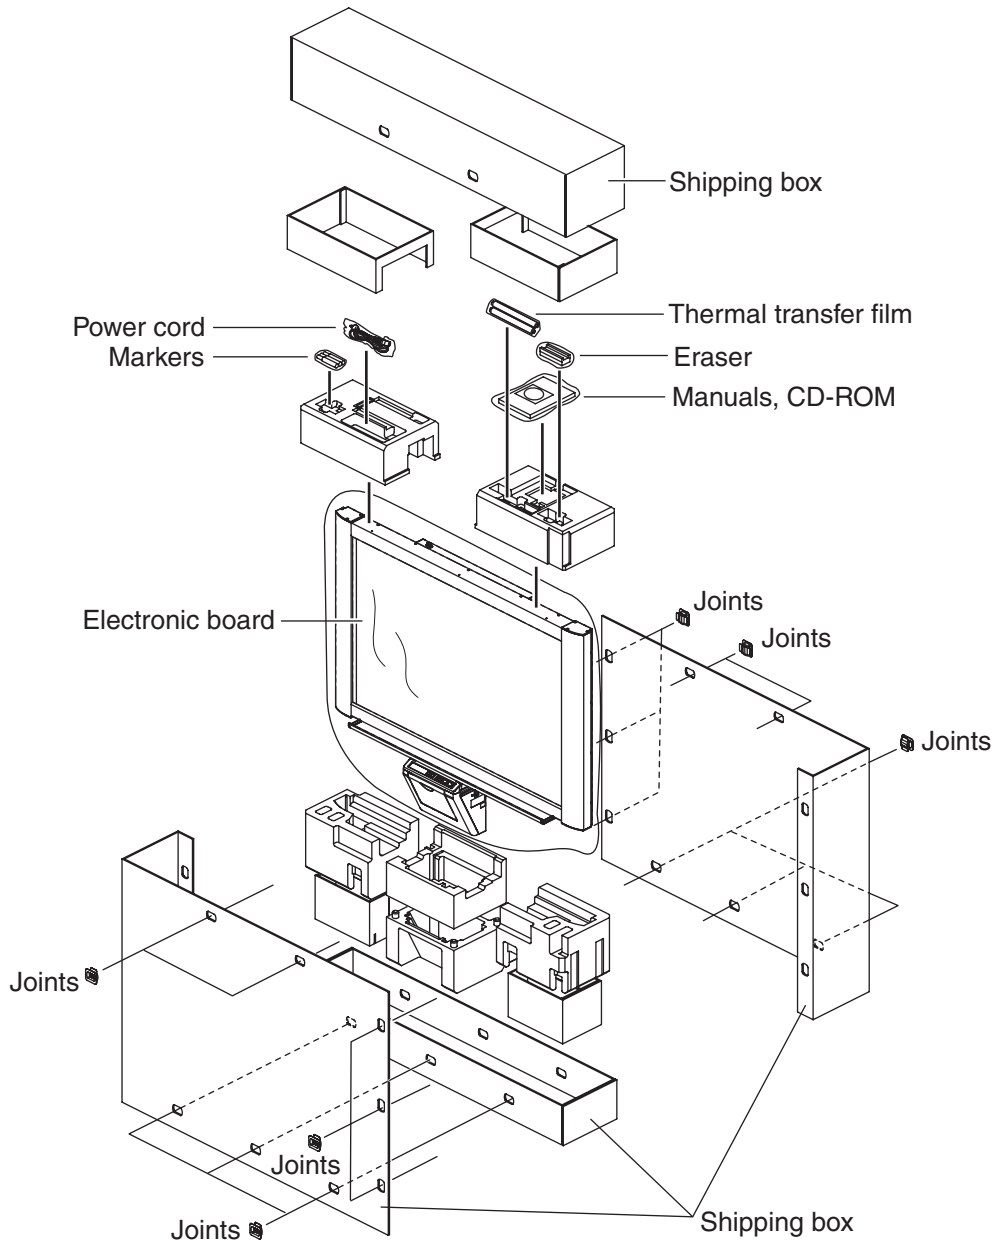

## Caution

- Do not touch the screen film surface, as this may damage it.
- The shipping box, cushioning material, and other packing material will be necessary if you ever need to repackage the electronic board, so do not throw them away.


## Assembling the Electronic Board

### 3 Install the electronic board.

Install the electronic board using the stand (option) or wall-mounting kit (option).


#### ■ Using the stand (option)

- 1) Hang the electronic board on the optional stand.

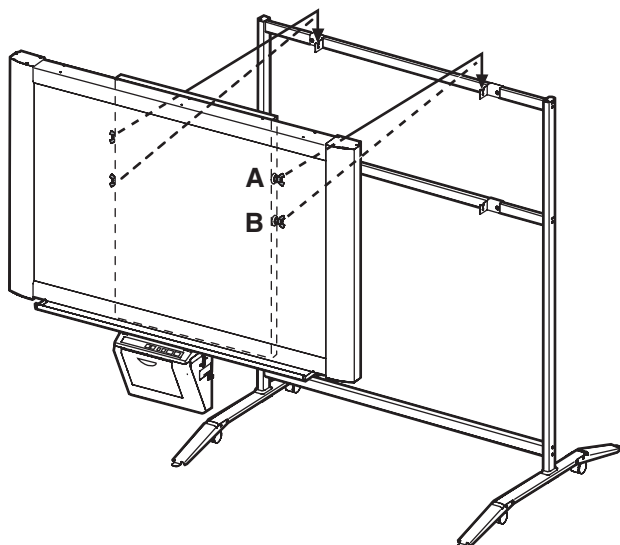


- The electronic board can be mounted 200 mm (7 7/8") higher than hang position **A** by hanging it with the wing bolts **B**.

- 2) Secure the stand fixture to the electronic board using the two wing-bolts [M5 x 12 mm (15/32")] provided with the **stand (option)**.

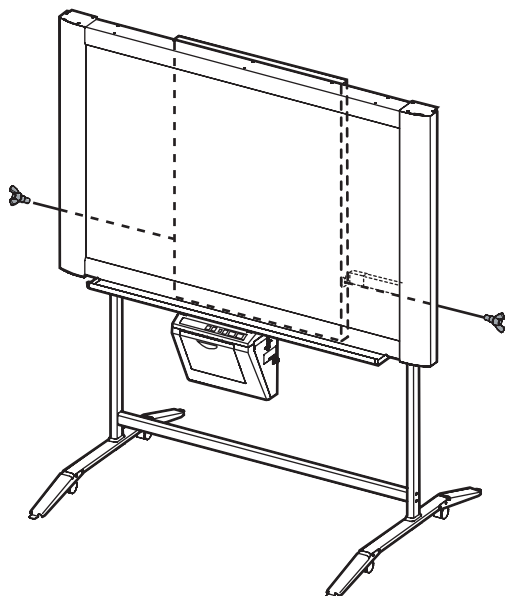


#### ■ Using the wall-mounting kit (option)

- 1) Hang the electronic board on the optional wall-mounting fixtures.

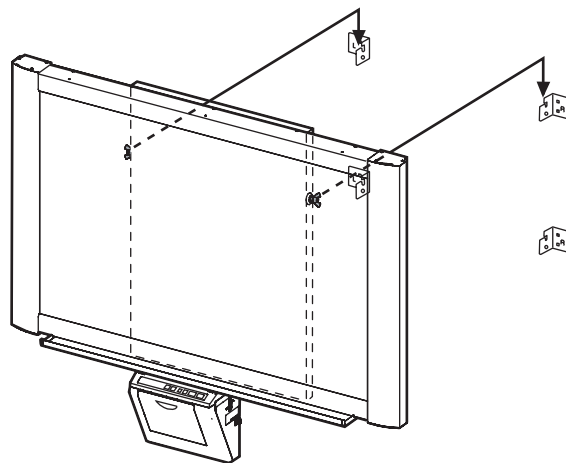

- 2) Secure the wall-mounting fixture to the electronic board using the two wing-bolts [M5 x 12 mm (15/32")] provided with the **wall-mounting kit (option)**.

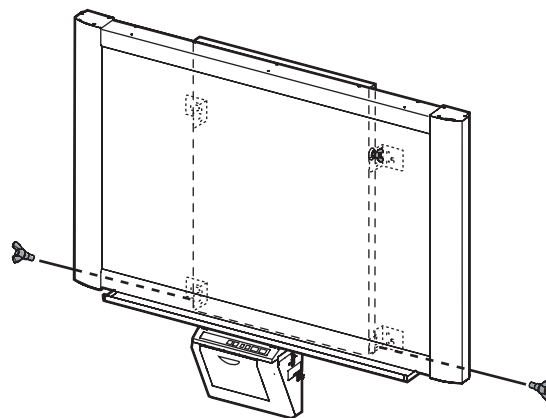


### Caution

- When mounting the electronic board, avoid banging it. Such impact may break the internal light or cause other damage.
- After mounting the electronic board, gradually apply weight to it to make sure that the wall is strong enough to support it.


## Assembling the Electronic Board

### 4 Connect the power cord.

- 1) Securely fit the supplied power cord into the AC inlet on the printer unit.

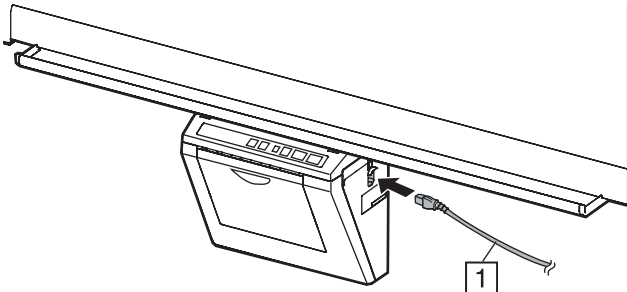


- 2) Fit the power cord into the cable holder.

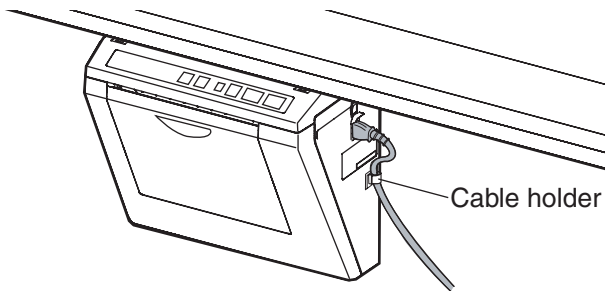

### 5 Wipe the screen film surface.

Soak a soft cloth with water, wring well, and wipe the screen film surface.

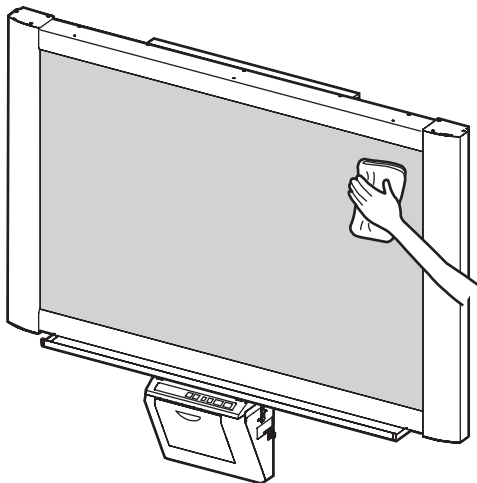

### Caution



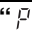
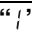
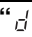
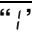





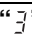




- Do not wipe the screen film surface with paint thinner, benzene, or cleaners that contain abrasives. Doing so may cause discoloration.
- Do not wipe the screen film surface with a dry cloth. Doing so may create static electricity.
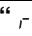
### 6 Check operations.

Refer to “**Electronic Board Operations Check**” on page 7.

# Electronic Board Operations Check


After assembling the electronic board, perform the procedures presented in the following table to make sure it functions properly.

Step	Points to Check		
	Symptom	Solutions	
1	Turn on the power switch.	“  ” flashes after “  ” lights up.	(Normal operation)
		(If not)	Check power cord. (See step 4 on page 6.)
2	Open the printer door and attach the accessory thermal transfer film, then close the printer door. • <b>Installing Thermal Transfer Film procedure (refer to the Operating Instructions on page 10)</b>	“  ” flashes.	(Normal operation)
		(If not)	Check thermal transfer film.
3	Open the paper cover and insert ordinary Letter test paper, then close the paper cover. • <b>Loading Copy Paper procedure (refer to the Operating Instructions on page 11)</b>	“  ” lights up.	(Normal operation)
		(If not)	Check copy paper.
4	Open the printer door.	“  ” flashes.	(Normal operation)
		(If not)	*1
5	Close the printer door.	“  ” lights up.	(Normal operation)
		(If not)	*1
6	① Press  . ② Press  .	Screen is fed.	(Normal operation)
		The screen film surface is not fed smoothly.	*1
		There are strange noises.	
7	① Use the accessory marker to draw a large  filling the entire copyable area of the screen film surface. • <b>Copyable area (refer to the Operating Instructions on page 7)</b> ② Press  twice. ③ Press  .	“  ” lights up and three copies are made.	(Normal operation)
		Three copies are not made.	*1
		The entire readable area is not printed.	
		There are strange noises or paper jams during the copying process.	
		Multiple sheets of paper are fed through at the same time.	
8	① Press  to move the screen film surface. Write letters, etc. with the marker. ② Press  once. ③ Press  .	The contrast/Remaining Film indicator light is turned on and one copy is made.	(Normal operation)
		The Contrast/Remaining Film indicator light is not turned on.	*1
		The image is not copied properly.	
		There are strange markings on the copy sheet (e.g., stripes or lines).	
9	Press  once.	The contrast/Remaining Film indicator light is turned off.	(Normal operation)
		(If not)	*1

\*1 Contact the store or dealer from which the unit was purchased.

# Repacking

Perform Assembly Steps 2 through 4 on pages 4 - 6 in reverse to repack the electronic board and accessories. Use the joints to fasten the shipping box.

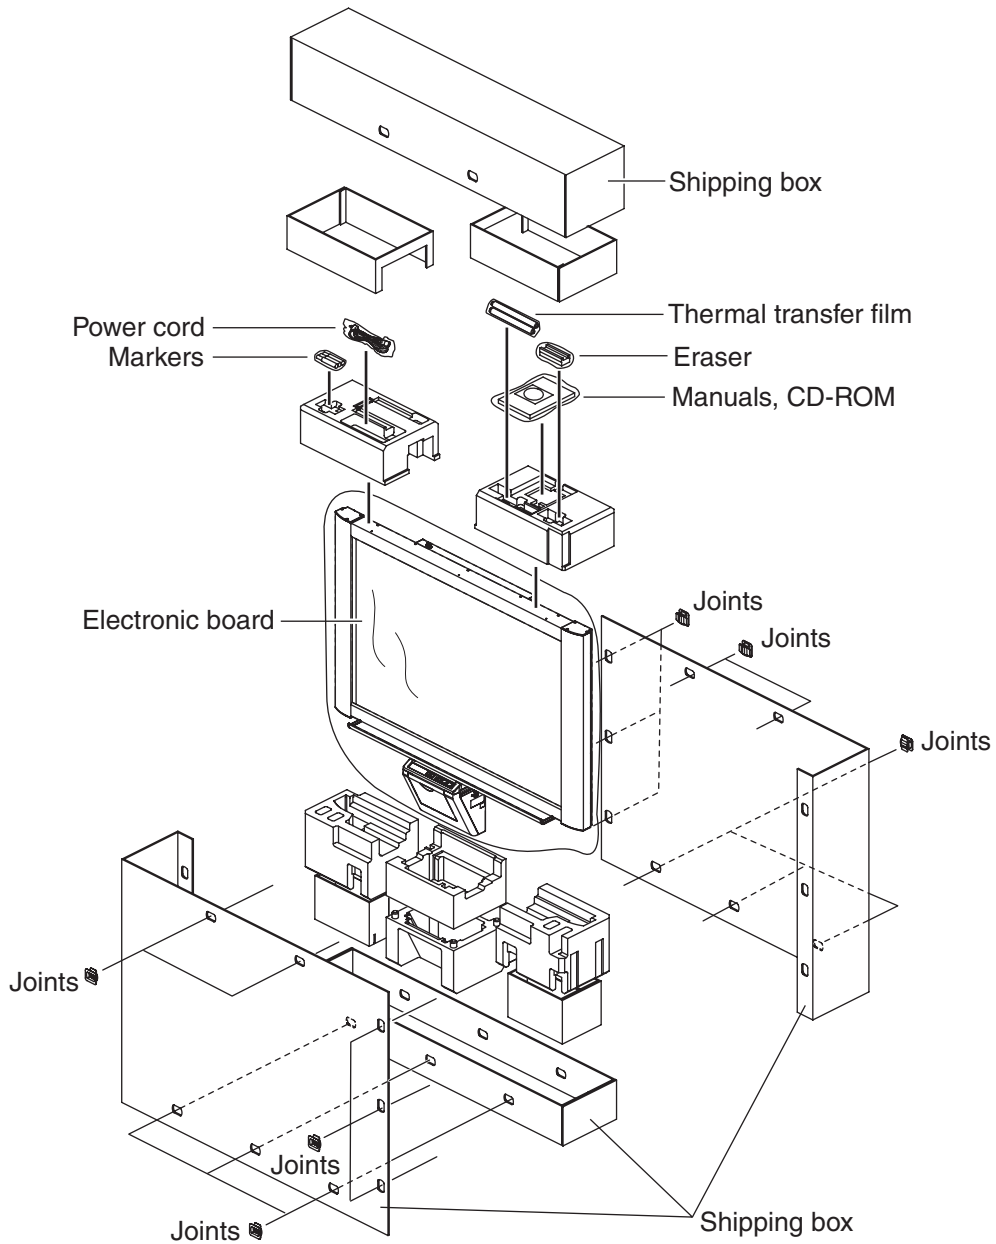

## Caution



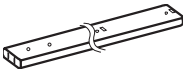









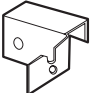

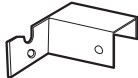
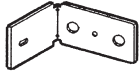
- Do not touch the screen film surface, as this may damage it.

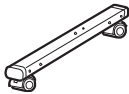

# Assembling the Optional Stand (KX-B061)
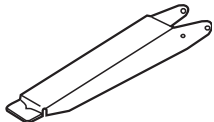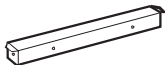
## ■ Accessories

The package box for the optional stand includes the parts noted below; please confirm that all parts are present before beginning installation



No.	Part name	Illustration	Q'ty	No.	Part name	Illustration	Q'ty
①	Stand base		2	⑨	Wing bolt	 M5 x 12 mm ( $15/32$ " )	6
②	Pipe		2	⑩	Support bracket		2
③	Cover		2	⑪	Fall-prevention extension leg		4
④	Side bar (A)		2	⑫	Screw	 M6 x 60 mm ( $2\ 3/8$ " )	4
⑤	Side bar (B)		1	⑬	Nut		4
⑥	Screw	 M8 x 45 mm ( $1\ 25/32$ " )	12	⑭	Wrench	 *1	1
⑦	Fixture (left)		2	⑮	Wing bolt (Not use*2)	 M4 x 8 mm ( $5/16$ " )	8
⑧	Fixture (right)		2	⑯	Screen holder bracket (Not use*2)		4

\*1 The accessory wrench is required to fasten or loosen the screws ⑥, ⑫; please store it carefully for future use.

\*2 These are used for other models.

## ● Before assembly, be sure to lock the casters.

Locking the casters  
(Push this side)

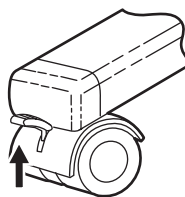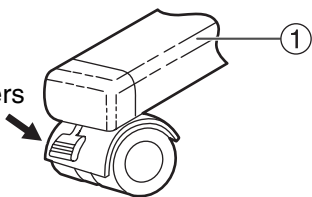

Releasing the lock


# Assembling the Optional Stand (KX-B061)

## ■ Assembly

### 1 Assembling the stand

#### ■ Assembling the fall-prevention extension legs

The fall-prevention extension legs increase the safety of the electronic board.

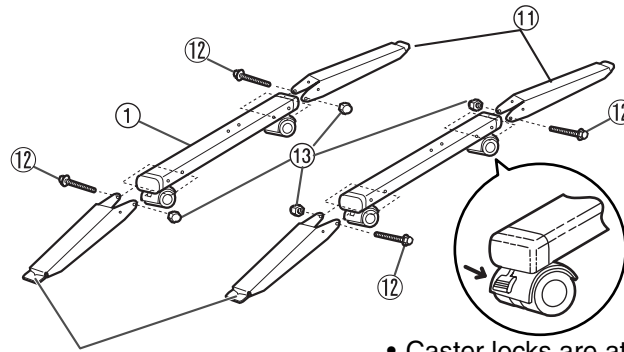

① Fall-prevention extension legs


- Caster locks are attached to the back side.

### Caution


- Install and always set the fall-prevention legs when using the stand.
- When tightening the screw ⑫, hold the nut ⑬ with pliers.

### Note


- When folding back the fall-prevention extension legs to release the lock, perform as follows.

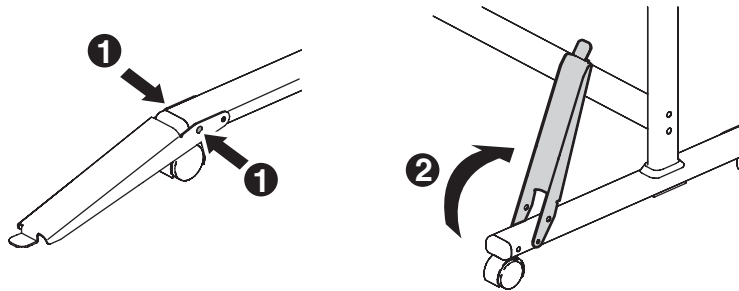

#### ■ Inserting the covers ③ to the pipes ②

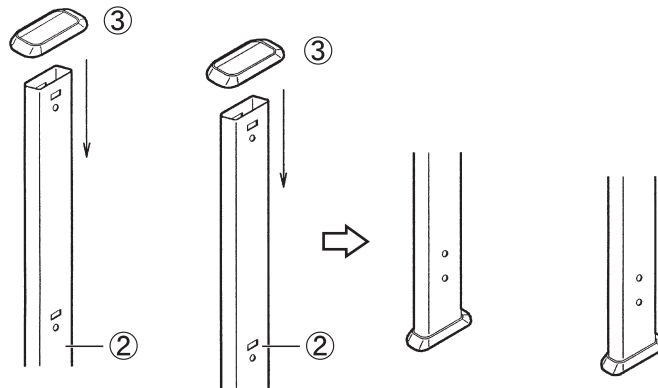

## ■ Assembling the stand

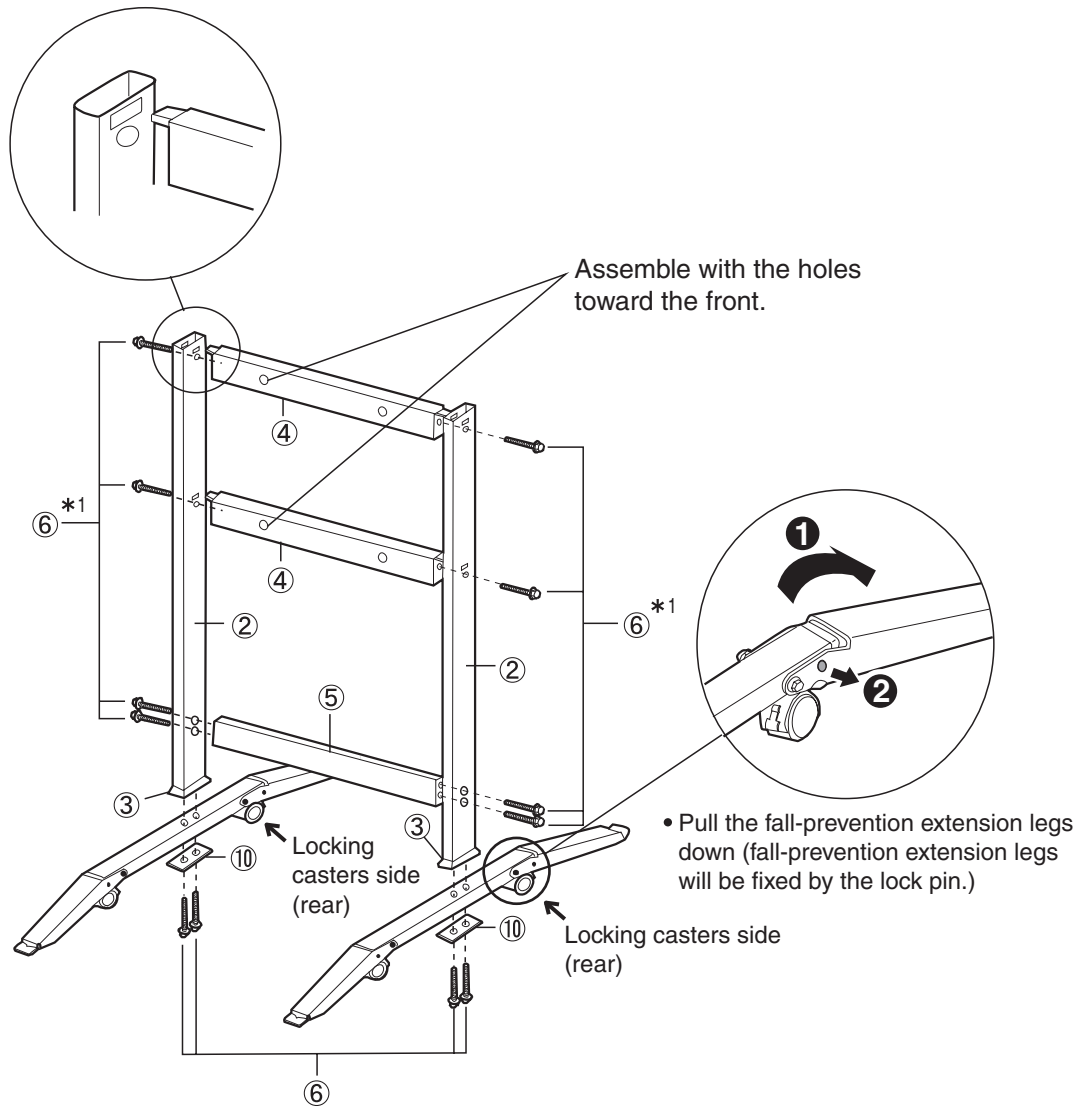


### Note

\*1 Do not tighten the screw ⑥ too much. This may deform the pipes.

## Assembling the Optional Stand (KX-B061)

---

**2** Attach the fixtures ⑦ ⑧ with the four wing-bolts.

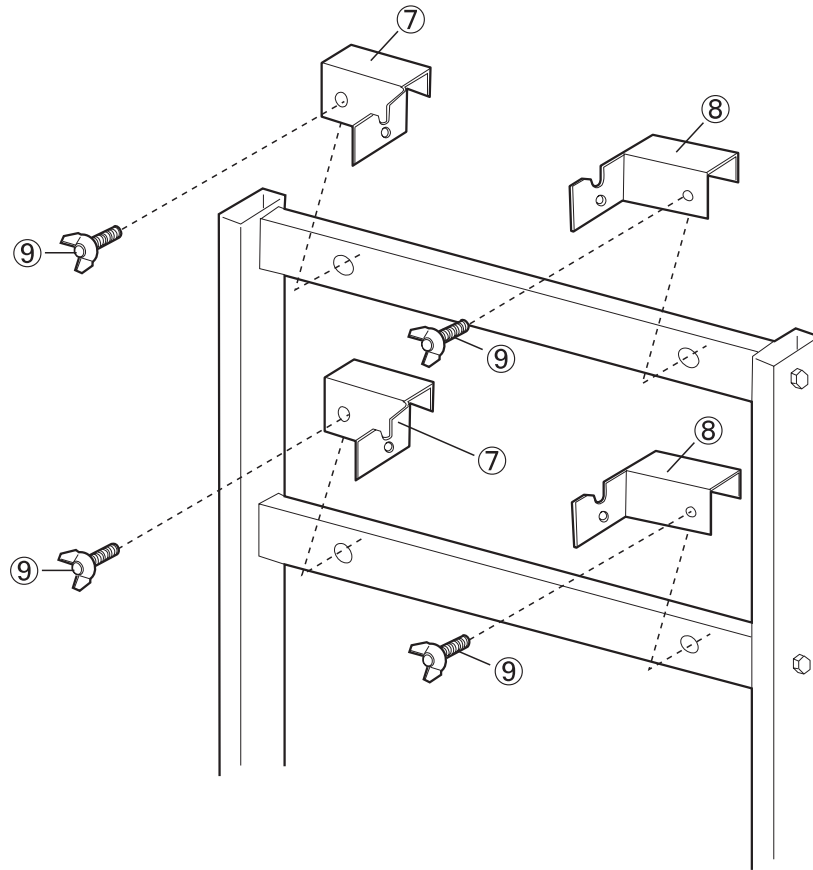

**3** Assemble and install the electronic board.  
Refer to page 4.

# Optional Wall-mounting Kit (KX-B063)

Before attempting installation of this wall-mounting kit, we strongly recommend consulting with the building manager, engineer, or architect. The installer needs to know the type of construction used for the wall intended for this installation and the location of wall studs. Selection of hardware is critical for safe wall-mounting, and depends on the nature of wall construction. Installation should not occur until this consultation takes place.

## Caution

- Do not attach the electronic board to mortared walls. Accidental electric leakage from the wall-mounting fixture bolts to metal laths or wire laths can cause heat, smoke or a fire.

### 1. Tools required:

A minimum of eight (8) pieces of appropriate wall-support hardware (molley, toggle, etc.)

NOTE: THIS HARDWARE MUST BE LOCALLY PROCURED. IT IS NOT INCLUDED IN THE KIT.

Drill (and drill bit of correct size) for hardware installation

Screw driver (Both phillips (+) and slotted (-) will be required.)

Tape measure

Tape or thumb-tacks (2 pcs)



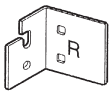


Bubble type level

### 2. Pre-requisites

1. Before installation, make sure that the wall intended for installation is capable of supporting flush-mounted.  
UB-7325 is 215 kgf (474 lbs.).
2. The position of the intended installation is of adequate size for the selected Panaboard.  
UB-7325 is 1,516 mm (H) × 1,648 mm (W) [5' (H) × 5' 5" (W)].
3. An outlet is within 3 m (9' 10<sup>1</sup>/<sub>8</sub>" ), and not located behind the Panaboard.

## Accessories

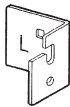The package box for the optional wall-mounting kit includes the parts noted below; please confirm that all parts are present before beginning installation. Eight screws for mounting the fixtures on the wall are not provided. Please purchase the appropriate wall-mounting hardware (sold in stores). Refer to page 15.

No.	Part name	Illustration	Q'ty	No.	Part name	Illustration	Q'ty
①	Wall-mounting fixture L		2	④	Screw (Not use*)	 M4 x 16 mm (20/32")	4
②	Wall-mounting fixture R		2	⑤	Wall-mounting template (Not use*)	 Use the wall-mounting template provided with UB-7325.	1
③	Wing bolt	 M5 x 12 mm (15/32") (For mounting of the electronic board)	2				

\*These are used for other models.

# Optional Wall-mounting Kit (KX-B063)

## Wall-mounting procedure

**1** Confirm that the wall is strong enough to support the weight of the electronic board.

### Caution

The wall must be capable of supporting at least 2,108N [215 kgf (474 lbs.)] for UB-7325.


**2** Tape the Wall-mounting template on the wall.

- Do not use the template included in the wall-mounting kit (KX-B063), but rather the one included with the electronic board (UB-7325).
- When taping the template on the wall, make sure it is level.

**3** 1) Drill holes in the wall for the wall-mounting fixtures (8 holes total).

- Holes on the wall-mounting fixture are 7 mm ( $\frac{1}{4}$ " ) in diameter.

2) After removing the wall-mounting template, attach the wall-mounting fixtures with the appropriate wall-mounting hardware (two screws in each fixture).

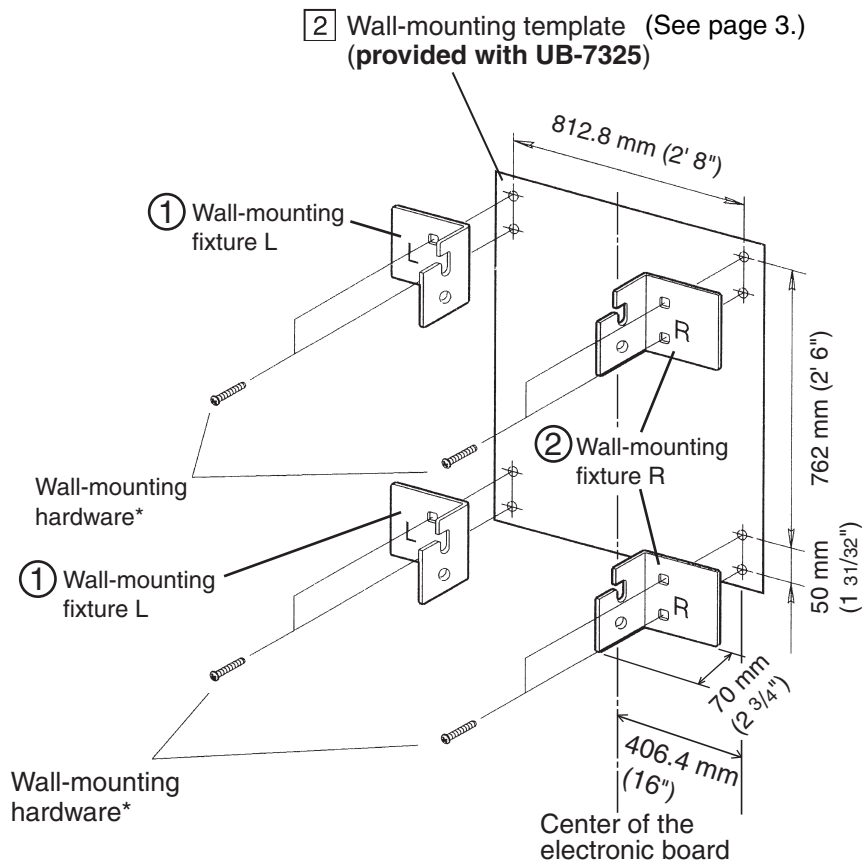

\* This hardware must be locally procured, it is not included in the kit.


- Refer to the section "Attaching the wall-mounting fixtures" (page 15) for drilling in the wall and attaching the mounting fixtures.
- Refer to step 3 on page 5 for mounting the electronic board.

## ■ Attaching the wall-mounting fixtures

The electronic board must be mounted with the method most suited to the material of the wall.  
 Three methods are presented here.  
 (Other options may be available in your area.)

### ● Attaching to metal or concrete walls

Stud plugs (sold in stores) are needed.

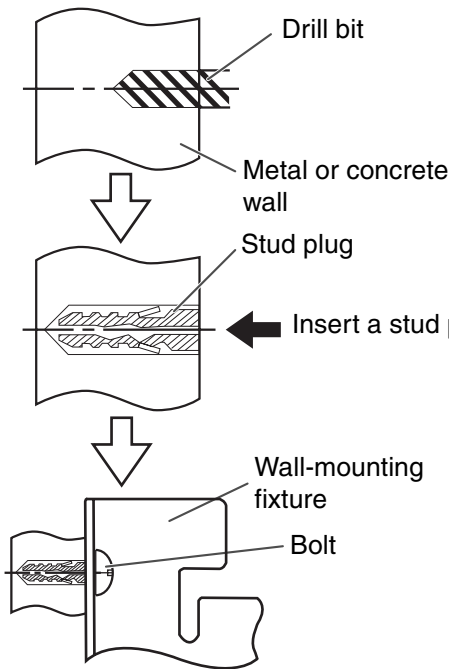


Drill eight holes in the wall.  
 For the correct hole size, refer  
 to the instructions for the  
 particular stud plugs used.

Insert each bolt through a hole  
 in the wall-mounting fixture and  
 tighten until the wall-mounting  
 fixture is securely fixed to the  
 wall.

## Optional Wall-mounting Kit (KX-B063)

### ●Attaching to plasterboard walls

Split-wing toggles (sold in stores) are needed.

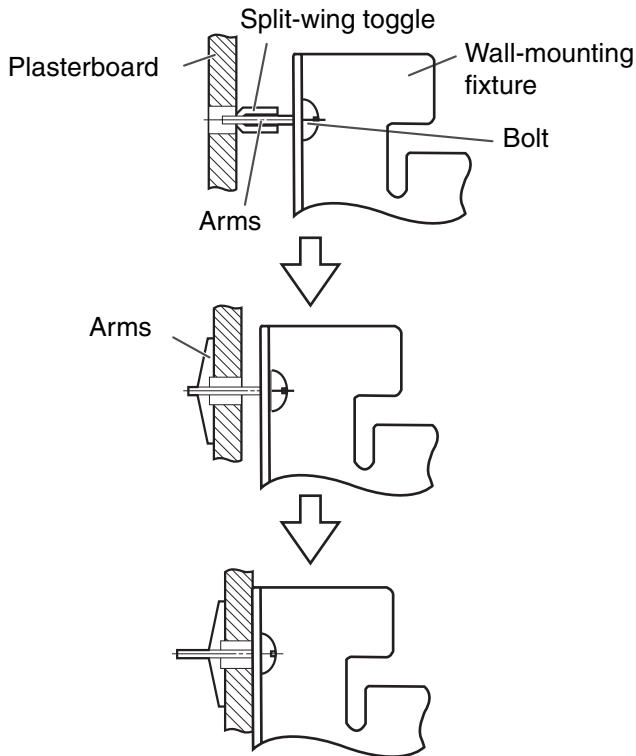


Insert each bolt through a hole in the wall-mounting fixture and into the hole in the wall beneath so that the arms of the split-wing toggle are horizontal. For the correct hole size, refer to the instructions for the particular split-wing toggles used.

After the arms expand, pull the wall-mounting fixture out until the arms of the split-wing toggle grip firmly into the wall.

Tighten each bolt until the wall-mounting fixture is securely fixed to the wall.

### ●Attaching to wooden walls

Use wood screws (sold in stores).

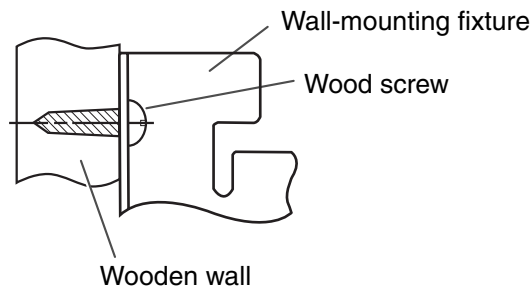

For the correct hole size, refer to the instructions for the particular wood screws used.