

E6 EEPROM Programmer

How to read

Connect USB cable to EEPROM Programmer and PC.



Put in the processor into EEPROM programmer socket.
First PIN in socket is in the white dot corner.




E6 EEPROM Programmer

OPTIONAL: Use optional clip cable to read directly from the board.


NOTE: You need to pull up one leg of the processor.

Please be careful with it!

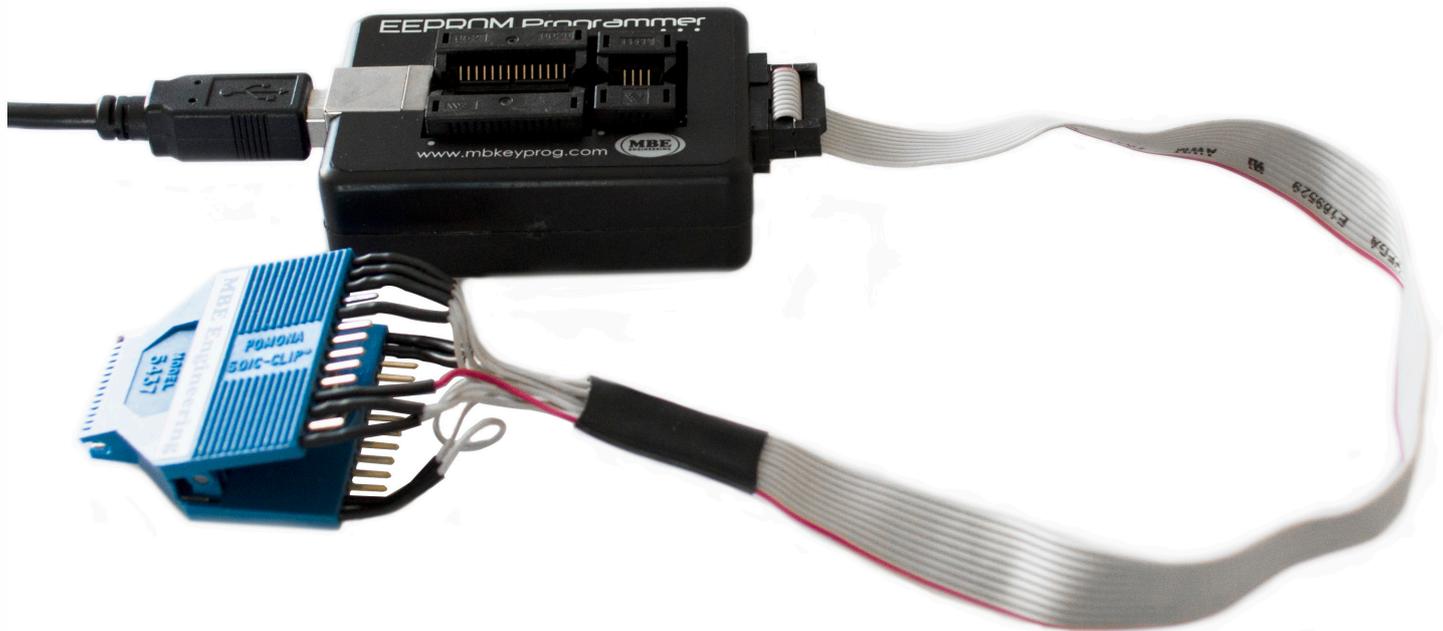


E6 EEPROM Programmer

Open E6 Eeprom programmer software and select your memory from the list.

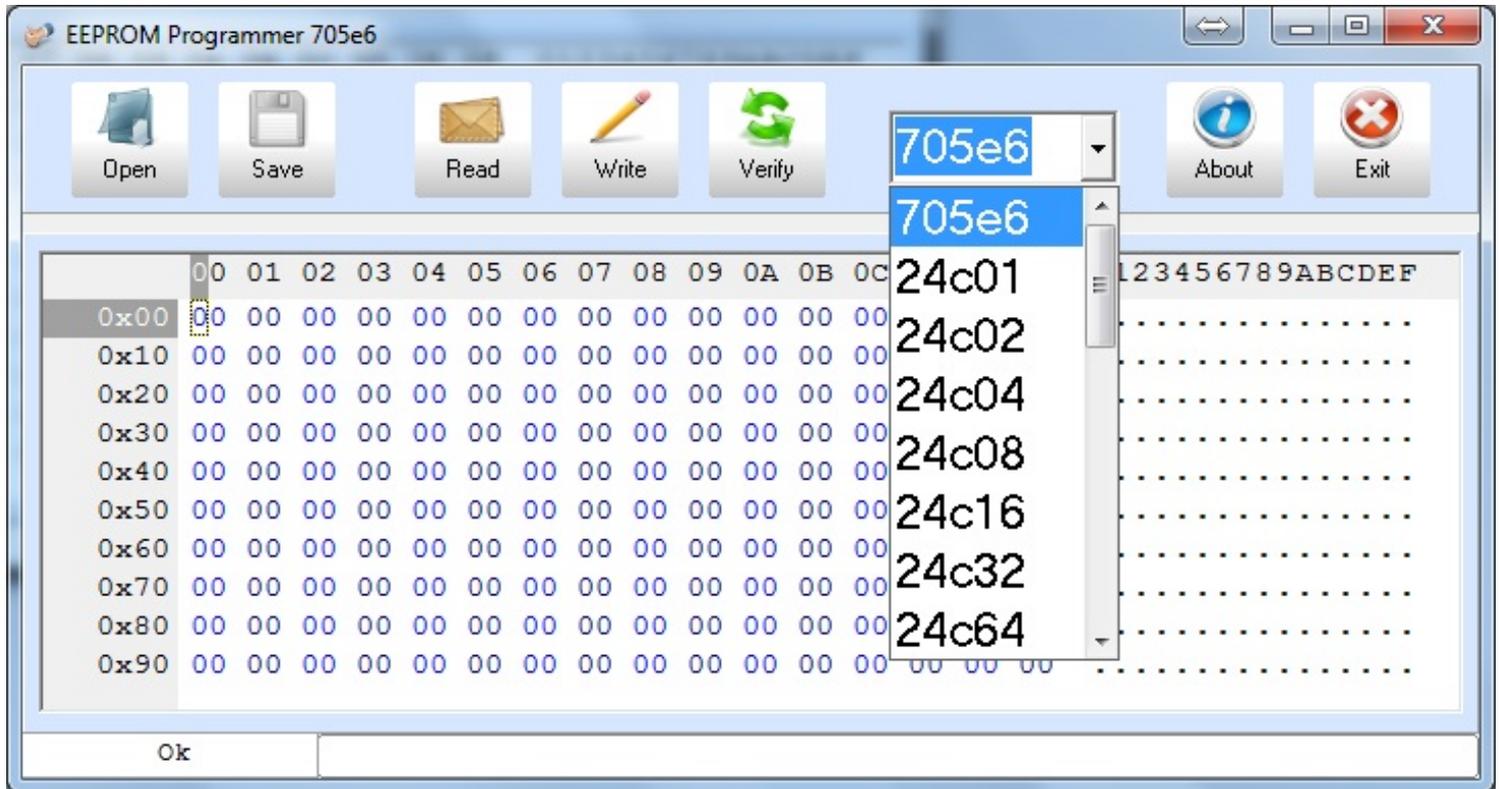


To read your memory click "Read" button.

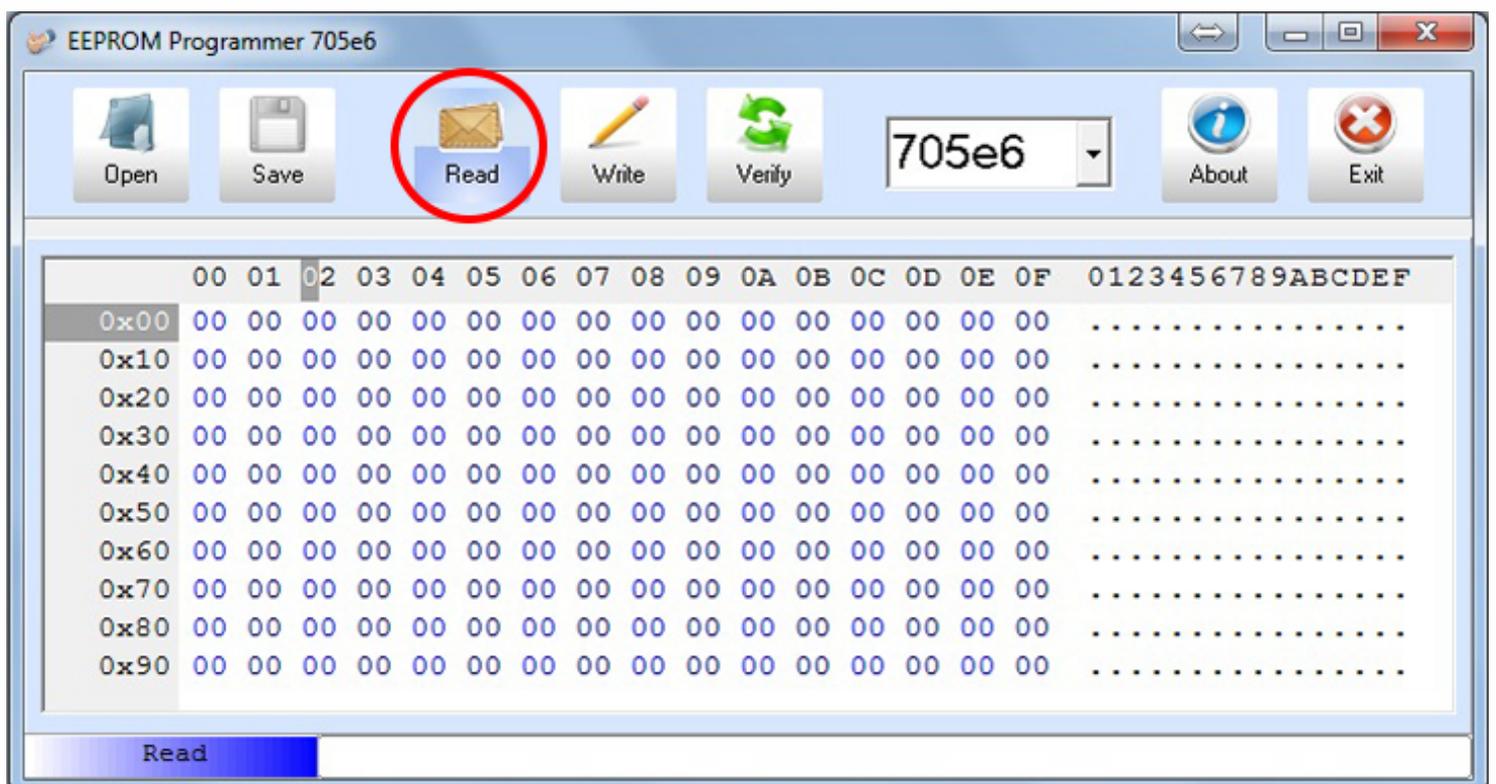

E6 EEPROM Programmer

How to write

To write to your memory click "Write" button.

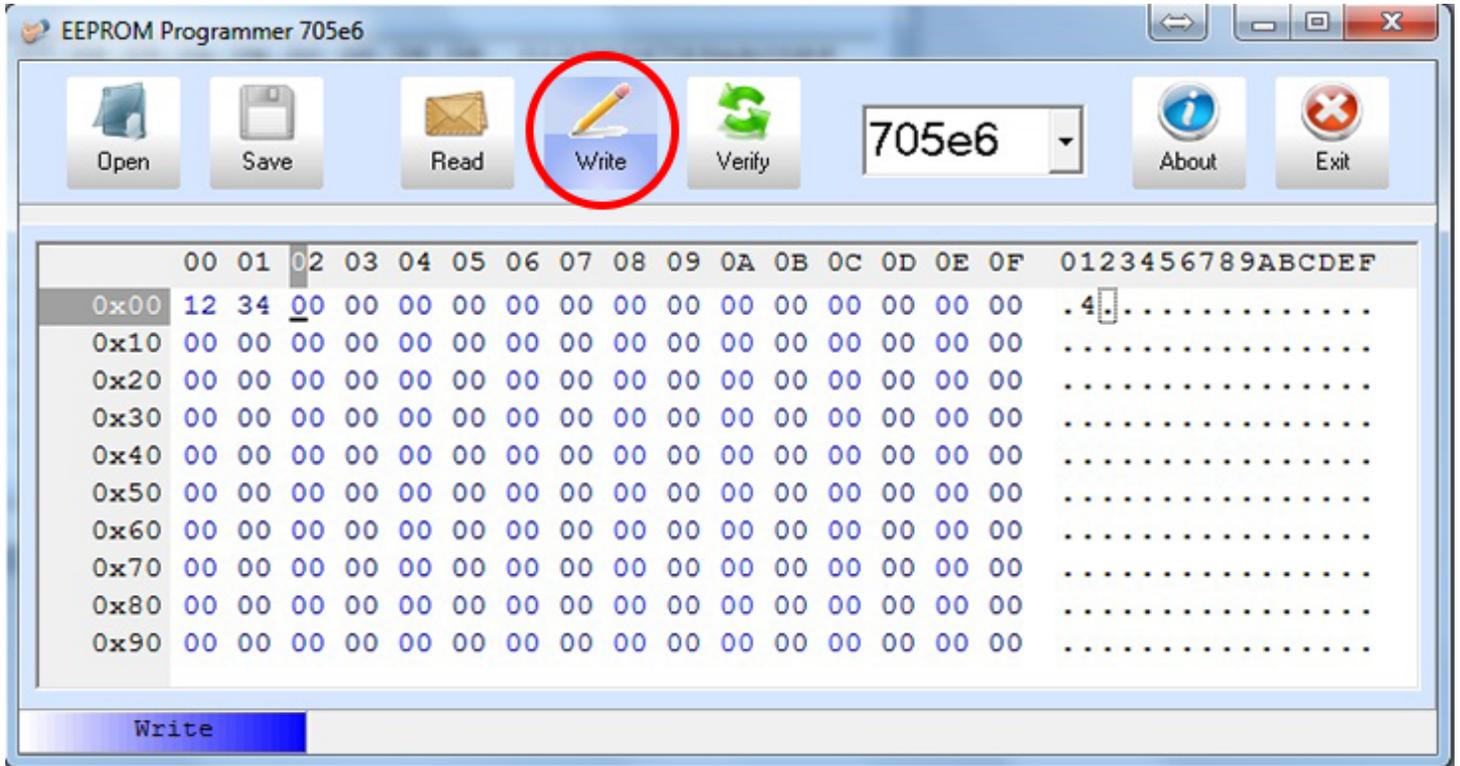

After writing process you need to Verify if it has been written correctly.

