



LS42 Lawn Scarifier

Operating Instructions

Before commissioning the machine, read operating instructions and observe warning and safety instructions.

CE



 **TRACMASTER**
The landscape machinery specialists

Manufacturer Details

Tracmaster Ltd
Sovereign Centre
Victoria Road
Burgess Hill
West Sussex
RH15 9LR
UNITED KINGDOM
Tel: +44 1444 247689
www.tracmaster.co.uk
info@tracmaster.co.uk

Machine Details

Model: CAMON LS42 Scarifier

Serial Number:

Engine Serial No:

Date of Purchase:

Supplier:

Table of Contents

1.0	What the Machine is Designed For	2
1.1	Applications	2
2.0	Specifications	3
3.0	Unpacking and Assembly	4
3.1	Major Components Diagram	4
3.2	Unpacking Instructions	4
4.0	Safety Instructions – Pre-Operation	5
4.1	Basic Safety Instructions	5
4.2	Main Components and Operating Elements	5
4.3	Engine and Drive	5
4.4	Operating Lever	5
4.5	Height Adjustment	5
4.6	Collection Bag	6
4.7	Rotor Shaft	6
4.8	Commissioning	6
4.9	General Safety Instructions	6
4.10	Engine Specific Safety Instructions	7
4.11	Hazard Pictorial Explanations	8
5.0	Safety Instructions Starting and Operating	10
5.1	To Start the Engine	10
5.2	To Stop the Engine	10
5.3	Safety Equipment	11
5.4	Operation	11
5.5	Procedure for Unexpected Shut Down	12
5.6	How to Clear Unwanted Debris from the Underside of the Machine	12
5.7	Residual Risks of the LS42 Scarifier	13
6.0	Maintenance	14
6.1	Schedule	14
6.2	Basic Maintenance	14
6.3	Advanced Maintenance	14
6.3.1	Belt	14
6.3.2	Rotate Rotor	15
6.3.3	Blades	16
6.4	Engine	16
6.4.1	Check Engine Oil Level	16
6.4.2	Change Engine Oil	17
6.4.3	Air Filter	17
6.4.4	Spark Plug	17
6.5	Cleaning	18
6.6	Troubleshooting	18
6.6.1	Machine	18
6.6.2	Engine	18
6.6.3	Lubricants	18
7.0	Transportation, Storage and Handling	19
7.1	Transportation	19
7.2	Storage	19
7.3	Handling	19
8.0	Service Record	20
	EC Declaration of Conformity	21

1.0 What the Machine is Designed For

1.1 Applications

The CAMON LS42 Lawn Scarifier has been designed by Tracmaster for removing the dead thatch and moss from lawns and other grassed areas.

The benefit of scarifying a lawn is that it allows air, water and nutrients to reach the roots of the grass whilst removing unwanted dead and foreign material.



IMPORTANT – READ CAREFULLY

The blades of the CAMON LS42 Scarifier are designed to pass through the grass ONLY - they are NOT designed to make contact with solid ground at any point during operation.

The machine will be damaged should blades continuously come into contact with solid ground.

DO NOT use the CAMON LS42 Scarifier for cutting grass or slitting the ground.

Both operations will result in damage to the machine.

Operating the machine on non-grass surfaces such as concrete or tarmac will cause damage to the LS42 Scarifier.

DO NOT scarify your lawn if there is a likelihood of high temperatures or drought.

Irrigate the lawn if necessary to ensure that the grass can recover from its treatment.

2.0 Specifications


ENGINE	
Engine Manufacturer	Honda
Engine Model	GX160
Engine Type	4-stroke OHV, single cylinder
Net Engine Power	3.6kW (4.8hp) @ 3600rpm
Engine Shaft Size	¾" straight
Spark Plug	BPR6ES (NGK) / W20EPR-U (DENSO)
Spark Plug Gap	0.70 - 0.80mm
Engine Ignition Type	Recoil
Cold Start System	Choke
Fuel Tank Capacity	3.1 litres
Fuel Type	Unleaded
Fuel Consumption	1.4 litres per hour @ 3600rpm
Air Filter	Paper
Engine Operating Speed	3000rpm
Engine Oil	10w/30 API SJ or later
Engine Oil Capacity	0.6 litres
Dry Weight	15.1kg

The power rating of the engine indicated in this table is the net power output tested on a production engine for the engine model and measured in accordance with SAE J1349 at a specified rpm.

MACHINE	
Model	LS42
Working Width	42cm
No of Blades	30
Direction of Rotor	The rotor rotates in the same direction as travel
Clutch Type	Centrifugal
Height Adjustment	From 0mm above the ground to 20mm
Discharge	Onto the ground or into collection bag if fitted
Wheel Types	Solid rubber
Handlebar	Foldable
Noise Level	97 dB(A)
Vibration Acceleration Value	6.2ms ²
Max Gradient for Operation on Slope	20 degrees
Weight	63kg
Dimensions (l x w x h)	120 x 67 x 98cm

3.0 Unpacking and Assembly

3.1 Major Components Diagram

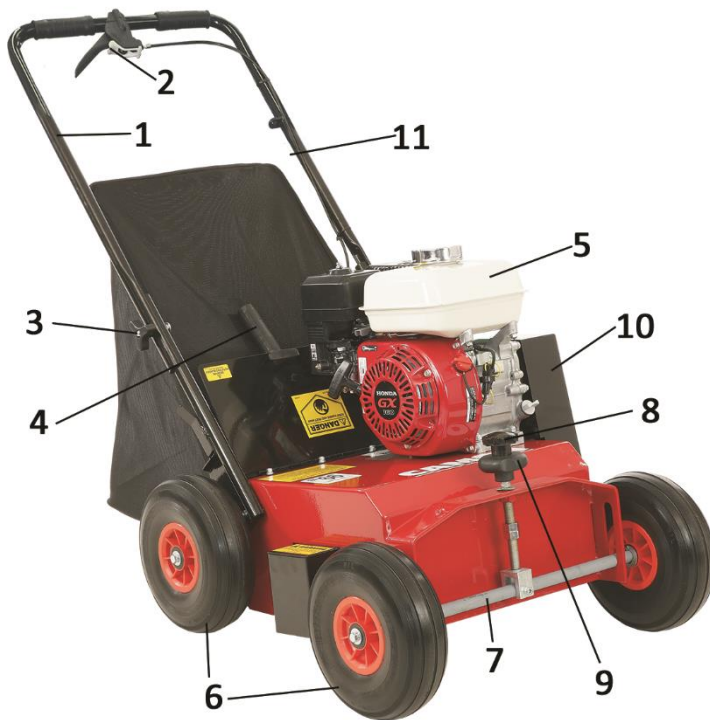

- 1 Top Handlebar
- 2 Operating Lever
- 3 Handlebar Locking Knobs
- 4 Collection Bag Lifting Handle
- 5 Engine
- 6 Wheels
- 7 Front Axle
- 8 Height Adjuster Knob
- 9 Locking Knob
- 10 Belt Guard
- 11 Throttle Cable

3.2 Unpacking Instructions

Open the top of cardboard box.

Cut the box open by using a sharp knife to cut down through the four corners of the box.

Swivel the folded top part of the handle bar until it locates into position extending from the lower handle bar arms.

Tighten the top handlebar into position using the locking knobs provided.

Push the four wheels onto the axles of the Scarifier and fasten in place using the penny washer, M8 spring washer, and M8 x 16 bolt provided.

Push the machine forward safely and gently out of the box.

Dispose of the cardboard box and other padding material.

4.0 Safety Instructions – Pre-Operation

4.1 Basic Safety Instructions

Before starting the machine, read and understand these operating instructions.

4.2 Main Components and Operating Elements

Below is a description of the main components of the LS42 and how they operate.

4.3 Engine and Drive



The Honda GX160 is a four-stroke engine that runs on standard unleaded fuel.

The Honda GX160 is fitted with a red on/off lever that is the main operating control for this engine. Rotating the switch to the 'I' position allows the engine to be started. Rotating the switch to the 'O' position will turn off the engine.

The engine is air cooled and therefore it is important that the grille covering the recoil rope is kept clear from debris.

The engine drive shaft is fitted with a centrifugal clutch that engages at a set engine speed and drives a fixed drive belt that is also connected to a pulley on the rotor shaft.

The engine air filter cleans the air drawn in by the engine. A clogged air filter will reduce performance.

The engine is fitted with a fuel on/off lever and a choke lever. Read the engine operating instructions to understand the operation of these levers.

4.4 Operating Lever

The LS42 Scarifier rotor shaft is operated by lifting the lever located underneath the top of the handlebar.

NB: IT IS A TWO STAGE PROCESS TO PULL THE BLACK LEVER. THE GREY LEVER LOCKING CATCH MUST BE DEPRESSED BEFORE THE BLACK OPERATING LEVER CAN BE SQUEEZED BY THE OPERATOR.

This lever increases the engine speed to a level that will engage the centrifugal clutch fitted to the engine drive shaft. Once the clutch has been engaged it will transfer the engine power to the rotor shaft that will rotate at high speeds within the chassis of the Scarifier.

4.5 Height Adjustment

The height of the blades of LS42 Scarifier is altered using the two large knobs at the front of the machine.

The top knob is connected to the centre of the front axle via a threaded rod. Rotating the knob in each direction will raise or lower the front axle in relation to the main chassis of the machine and in turn alter the height of the blades with the chassis.

The second knob located below the top knob on the threaded rod is used to fix the position of the threaded rod and consequently the height of the blades relative to the front axle.

4.6 Collection Bag

If fitted the collection bag will collect the thatch and moss that is removed from a grass area.

Use the central lifting handle when connecting or disconnecting the bag from the machine.

Always stop the engine and wait for the blades to stop rotating by removing or replacing the collection bag.

To attach the collection bag onto the machine, first lift the safety back flap on the rear of the machine chassis with one hand. Then whilst holding the bag with your other hand guide the two small metal rods protruding from either side of the collection bag frame into the two channels that have been formed to hold the bag.

4.7 Rotor Shaft

The main rotor shaft holds three rods with each rod holding 10 hardened steel blades.

The blades are separated using spacers and springs. Each set of 10 blades on a rod is offset from the other two rods.

4.8 Commissioning

Prior to operation it is necessary to check the engine oil level and add engine oil level to the levels indicated in the table in section 5.1.

The engine fuel tank will not contain fuel so will need filling to the recommended level before use.

4.9 General Safety Instructions

Be aware of all the safety requirements for the machine.

Never allow people unfamiliar with these instructions or children to use the machine. Local regulations can restrict the age of the operator.

Never operate the machine while people, especially children, or pets are nearby.

Operators should take care to prevent accidents to themselves or other people and damage to property.

Wear ear protection and safety glasses at all times while operating the machine.

While operating the machine always wear substantial footwear and long trousers. Do not operate the machine when barefoot or wearing open sandals.

Visually check the machine for operational safety, complete componentry and fixed guarding prior to each use.

Read and be aware of the warning and instruction signs located on the machinery.

Cordon off the work area to prevent access from the general public.

Before starting work clear the area of any objects that may cause damage to the machine such as stones, sticks, wires, bones and other foreign objects.

WARNING – Petrol is highly flammable.

Store fuel in containers specifically designed for the purpose.

Refuel outdoors only and do not smoke while refueling.

Add fuel before starting the engine. Never remove the cap of the fuel tank or add petrol while the engine is running or when the engine is hot.

If petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapors have dissipated.

Replace all fuel tanks and container caps securely.

Replace faulty silencers.

Do not operate the machine if you are under the influence of alcohol or drugs. This equipment must only be operated by persons who are medically fit both physically and mentally.

Only work in good light and visibility.

Before using the machine, always visually inspect to see that the tines, bolts are not worn or damaged. Replace worn or damaged tines and bolts in sets to preserve the balance.

Operator clothing should not be loose, and footwear should offer good grip.

Know how to stop the machine in an emergency.

4.10 Engine Specific Safety Instructions

Always ensure the engine is turned off and fuel tap is turned off when transporting the machinery, cleaning the machinery and making adjustments.

Always start the engine in open air. Starting an engine within a confined space can lead to the inhalation of toxic substances.

Do not smoke or use a naked flame when refueling.

Do use only unleaded petrol from fuel containers designed for this purpose. Refuel outdoors only and replace the fuel tank cap securely.

Do not mix oil with the fuel.

Leave one inch of space in the fuel tank during refilling.

WARNING – Petrol is highly flammable.

Store fuel in containers specifically designed for the purpose.

Refuel outdoors only and do not smoke while refueling.

Add fuel before starting the engine. Never remove the cap of the fuel tank or add petrol while the engine is running or when the engine is hot.

If petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapors have dissipated.

Replace all fuel tanks and container caps securely.

Avoid contact with the engine during operation as it will become hot. Leave the engine to cool prior to contact.

Never interfere with the control settings of the engine.

NEVER TILT THE MACHINE BACKWARDS WHEN CLEANING.

4.11 Hazard Pictorial Explanations







		<p>DANGER – ROTATING BLADES. KEEP HANDS AND FEET AWAY.</p>
--	--	---

	<p>WARNING Rotating blade hazard. Do not operate with guard removed. Always remove the spark plug before servicing.</p>	<p>WARNING! ROTATING BLADE HAZARD. DO NOT OPERATE WITH GUARD REMOVED. ALWAYS REMOVE THE SPARK PLUG BEFORE SERVICING.</p>
--	--	---

	<p>MAXIMUM SOUND POWER LEVEL (LWA). EAR PROTECTION MUST BE WORN WHEN OPERATING THE MACHINE.</p>
--	--





<p>DO NOT OPERATE WITH GUARD REMOVED.</p>	<p>ENSURE SAFETY GUARDS ARE IN PLACE. MACHINE MUST NOT BE OPERATED WITHOUT GUARDS.</p>
--	---

	<p>WEAR SUITABLE PPE:</p> <ul style="list-style-type: none"> • EAR DEFENDERS • EYE DEFENDERS • FOOT PROTECTION • SAFETY GLOVES
--	---

		READ OPERATING INSTRUCTIONS BEFORE USE.
		REMOVE SPARK PLUG BEFORE SERVICING OR PERFORMING MAINTENANCE.
		WARNING: KEEP BYSTANDERS AWAY.

5.0 Safety Instructions Starting and Operating

5.1 To Start the Engine
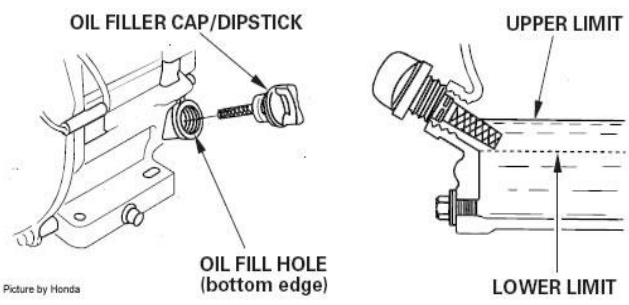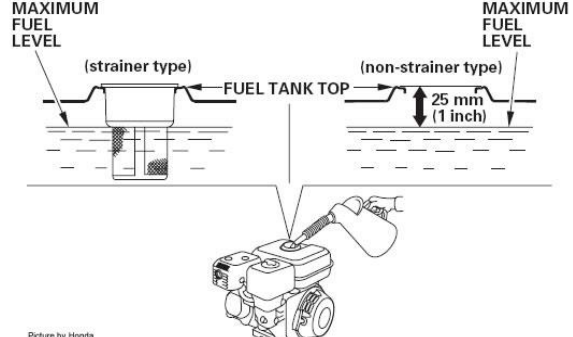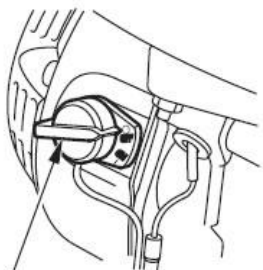
<p>Using the dipstick provided, check the engine oil level. Top up with 10w/30 oil if the dipstick is clear of oil.</p>	 <p>OIL FILLER CAP/DIPSTICK</p> <p>OIL FILL HOLE (bottom edge)</p> <p>UPPER LIMIT</p> <p>LOWER LIMIT</p> <p>Picture by Honda</p>
<p>Check the fuel level. Refill as necessary and as determined by the fuel tank type – see diagram.</p>	 <p>MAXIMUM FUEL LEVEL</p> <p>(strainer type)</p> <p>FUEL TANK TOP</p> <p>(non-strainer type)</p> <p>MAXIMUM FUEL LEVEL</p> <p>25 mm (1 inch)</p> <p>Picture by Honda</p>
<p>Switch the engine ignition switch to the ON position.</p>	 <p>ENGINE SWITCH</p> <p>Honda Picture</p>
<p>Turn the fuel tap located on the engine carburetor to the ON position. If the engine is cold or has not been operated recently set the choke lever on the carburetor to the ON position.</p>	 <p>FUEL VALVE LEVER</p> <p>CHOKE LEVER</p> <p>THROTTLE LEVER</p> <p>Picture by Honda</p>

Pull the engine recoil handle slowly until it engages then pull hard and fast to start the engine.

After the start, guide the cord back into its position. Do not let it snap back.

Once the engine has started, if the choke lever has been used, return this to its OFF position after the engine has run for a few seconds.

5.2 To Stop the Engine

Release the operating lever.

Switch the engine ON/OFF switch to the 'O' off position.

Turn the fuel tap lever to the OFF position.

Ensure the blades have stopped rotating prior to moving the machine.

WARNING: THE EXHAUST COVER MAY BE HOT – DO NOT TOUCH.

5.3 Safety Equipment

The LS42 operator must be wearing:

- Ear Defenders
- Gloves
- Protective Footwear
- Safety Glasses

5.4 Operation

Before scarifying can be carried out the grass must be cut short and be cleared of any objects such as stones, sticks, wires or bones that would damage the Scarifier or be picked up and thrown by the rotating blades.

Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.

Operate the machine only in daylight or in good artificial light.

WARNING: SCARIFYING LONG GRASS WILL QUICKLY CAUSE DAMAGE TO COMPONENTS OF THE MACHINE. WE RECOMMEND GRASS IS CUT PRIOR TO SCARIFYING.

Do not operate the Scarifier on wet lawns or in rainy weather.

Always be sure of footing on slopes.

Walk never run.

Always work across the face of slopes, never up and down.

Exercise extreme caution when changing direction on slopes.

Use extreme caution when reversing or pulling the machine towards you.

Stop the tines if the machine has to be tilted for transportation. Do not operate the tines when crossing surfaces other than grass and when transporting the machine to and from the working area.

Never operate the machine with defective guards, or without safety devices, for example deflectors and or catchers in place.

Do not change the engine governor settings or over speed the engine.

Disengage all tine starting levers before starting the engine.

Start the engine carefully according to the instructions and with feet well away from the tines.

Do not tilt the machine when starting the engine.

Do not put hands or feet near or under the rotating parts. Keep clear of the discharge opening at all times.

Never pick up or carry the machine whilst the engine is running.

Avoid operating the machine in bad weather conditions especially if there is the risk of lightning.

Set the operating height by screwing the top adjuster knob either up or down and locking the desired height with the locking handle.

WARNING: THE BLADES MUST NOT BE ALLOWED TO TOUCH THE GROUND AT ANY POINT DURING OPERATION.

If using the collection bag, ensure that it is mounted correctly and is secure.

Lift the operating lever to engage the rotor shaft and walk at a slow steady pace pushing the machine ahead of you.

To turn the LS42 Scarifier 180 degrees, release the operating lever, put light downwards pressure on the handlebars and rotate the machine on its rear wheels.

Do not work the Scarifier on slopes of more than 20 degrees and always work across the slope, not up and down it.

Once the collection bag has become full, release the operating lever, turn off the engine and ensure the rotor shaft has stopped turning. Remove the collection bag and empty. Re-attach the bag securely and re-start the engine to continue scarifying.

Stop the engine and disconnect the spark plug wire before:

- a) Clearing blockages
- b) Checking, cleaning or working on the machine
- c) After striking a foreign object
- d) If the machine starts to vibrate abnormally.

Stop the engine and disconnect the spark plug wire

- a) Whenever you leave the machine
- b) Before refueling

Reduce the throttle setting during engine shut down and turn the fuel off on the engine at the conclusion of scarifying.

5.5 Procedure for Unexpected Shut Down

Release the operating lever

Turn the engine operating switch located on the engine to the OFF position.

Ensure the rotor shaft and blades have stopped rotating prior to moving the machine.

5.6 How to Clear Unwanted Debris from the Underside of the Machine

Ensure that the engine has been turned off, remove the spark plug wire and the rotor shaft has stopped turning.

Turn the engine fuel tap to the off position.

Attach a lifting hoist to the top handlebar and lift the machine so that it tilts forward onto its front wheels. As the underneath of the chassis becomes exposed it is possible to see and remove any unwanted debris.

WARNING: ALWAYS TILT THE LS42 SCARIFIER FORWARDS TO AVOID OIL IN THE ENGINE FLOODING INTO AREAS WHERE IT WILL CAUSE DAMAGE.

5.7 Residual Risks of the LS42 Scarifier

The rotor shaft will continue to rotate for a couple of seconds once the operating lever has been released. Ensure that the blades have stopped rotating prior to moving or tilting the machine.

The LS42 Scarifier is designed to be pushed by the operator both during transportation and operation. It has no brake system and therefore the operator must hold firmly onto the machine on sloped areas.

6.0 Maintenance

6.1 Schedule

	Operation	Daily	Every Week	Every Month
Engine	Check engine oil level 10W/30 See separate engine manual	X	X	
Machine	Check condition of blades		X	
	Check condition of blade rods		X	
	Check belt condition			X
	Check operating lever and cable		X	
	Check grassbag condition		X	
	Check rotor shaft bearings			X
	Lubricate wheel bearings			X
	Tighten all nuts and bolts			X

6.2 Basic Maintenance

Check that all guards are fitted securely.

Ensure the cable connecting the operating lever to the engine is securely fastened at both ends and shows no sign of wear.

Check the pressure of pneumatic tyres and ensure that solid tyres do not show any indentations or significant wear and tear.

Ensure the wheels are held securely and the bolts that hold the wheels onto the axles are in place.

Check the wheels rotate smoothly and without hindrance.

6.3 Advanced Maintenance

We strongly recommend that an Authorised Representative is consulted prior to any major machine maintenance projects.

6.3.1 Belt

Inspection Check:

Check every 25 hours that the drive belt is not frayed or cracked. If it appears frayed or cracked then it is time to replace the belt.

Changing the Belt:

Remove the three capscrews used to attach the belt guard to the chassis and remove the belt guard.

Lift the tension pulley away from belt and hold.

Pull the belt towards you and allow the tension pulley to fall back into its normal position but now not resting on the belt.

The drive belt has now become slack.

Grab the right-hand side of the belt close to the bottom pulley and pull as if you are trying to pull the belt off the bottom pulley.

With your other hand slowly and carefully rotate the **pulley in an anticlockwise** direction and ease the belt off the pulley.

The belt is now free from the machine.

To fit the new belt, start by locating the new belt in the groove of the centrifugal clutch.

Stretch the new belt tight by pulling it downwards to the bottom pulley.

Locate one side of the belt in position on the bottom pulley.

Slowly rotate the bottom pulley so that the belt is slowly eased into its place sitting in the groove of the bottom pulley.

Pull the belt towards you and pull the tension pulley past the belt, now release the belt and the tension pulley.

Re-attach the belt guard using the original cap screw bolts.

6.3.2 Rotate Rotor

To access the underneath of the chassis you must use a lifting hoist to lift the handlebars of the machine so that it tilts forward over its front axle.

Remove both the belt guard and rotor shaft guard by undoing the fastening nuts and bolts.

Remove the belt as instructed above in section 6.3.1.

Loosen the pulley grub screw and slide the bottom pulley off the shaft.

WARNING: Do not lose the woodruff key at this stage.

Loosen the grub screws in the bearings.

Remove the fasteners of the bearing carriers. The two chassis protection plates will become detached from the chassis at this stage.

Pull the loose bearings away from the chassis approximately 30mm. A tool for pulling bearings may be required at this stage should the bearings be difficult to move.

Once the bearings have been pulled away from the chassis the blade rotor will be able to be removed from the chassis.

Rotate the blade rotor through 180 degrees and reinsert into the chassis.

Fit the bearing carriers into place around the bearing and use the required fasteners to fix the carriers to the chassis.

Re-fit the bearings into their position either side of the rotor clamps.

Locate the bottom pulley onto the end of the rotor shaft ensuring the woodruff key is fitted. Once the pulley is situated beneath the centrifugal clutch fix the pulley into position by tightening the grub screw.

Re-attach the belt and belt guard as described in 6.3.1.

6.3.3 Blades

Inspection Check:

Blades that have been worn so that they have become rounded must be changed for the LS42 Scarifier to function properly.

Changing the Blades:

Safety glasses and gloves must be worn.

Remove the rotor as described in section 6.3.2.

Remove the one split pin from the end of just one rod.

Slide the rod through the spiders being careful to remove the springs and blades as the rod is removed from each section.

Once the worn blades have been removed the rod should be checked for wear and if serviceable can be reinserted and the new blades located.

Reinsert the rod slowly and in each section between spiders pass the rod through the springs and blade in the correct order.

Continue this until each section has been filled with a blade and springs and the rod is showing through the last spider.

Renew and spread the split pin to secure the rod.

Repeat this process with the remaining two rods.

WARNING: Take note of the spring and blade layout from the diagram enclosed.

Re-attach rotor to the chassis as described in section 6.4.1.

6.4 Engine

6.4.1 Check Engine Oil Level

This is to be checked prior to each use and every 8 hours during operation.

Check only when the engine is off and in a horizontal position.

Clean the oil filler plug and its surrounding parts.

Remove the oil filler plug. Clean the dipstick with a clean cloth and put the oil filler plug all the way back into the engine. Remove the oil filler plug and check the oil level.

Refill the oil if indicator shows more is required. For the Honda GX160 the recommended oil is SAE 10w/30.

6.4.2 Change Engine Oil

Refer to the engine manufacturer's manual for location of components and more detailed assistance.

Do not change the oil if the engine is hot.

The first oil change is after 50 hours of work.

Subsequent oil changes should be made after each 100 hours of work.

At extreme temperatures or conditions change the oil after every 50 hours.

Open the drain plug on the engine and the filling plug and drain the oil into a suitable container or use a suction pump to remove oil through filler neck.

Ensure the waste oil is disposed of properly.

Refit the drain plug and tighten.

Fill fresh engine oil through the oil filling opening. Use a funnel or similar device for ease of filling.

Replace the oil filler plug and tighten.


6.4.3 Air Filter

Inspection Check:

Remove the air cleaner cover and inspect the filter elements.

Cleaning:

See diagram below containing information provided by Honda.

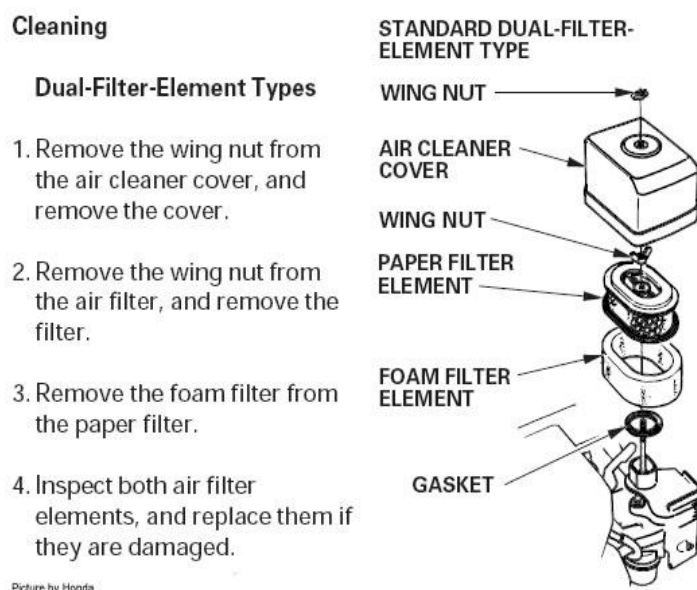

6.4.4 Spark Plug

Clean and replace.

6.5 Cleaning

After cleaning, particularly if a pressure washer has been used, ensure any lubrication points are re-lubricated.

Clean the engine with a cloth only. Avoid spraying the engine with jets of water as this may leak into the fuel and ignition systems.

6.6 Troubleshooting

6.6.1 Machine

Have all serious malfunctions on the machine and engine repaired by an authorised Tracmaster or Honda agent.

Problem	Possible Cause	Remedy
No drive to blades	Broken belt	Replace belt
	Broken spring tensioner	Replace spring
	Damaged centrifugal clutch	Replace clutch
Poor collection and performance	Blades have become rounded on the bottom edge	Turn blades round or replace blades
	Blades are worn out	Replace blades

6.6.2 Engine

Problem	Possible Cause	Remedy
Engine does not start	Spark plug connector not connected	Connect spark plug connector
	Choke lever is not actuated	Actuate choke lever
	Fuel tank empty	Fill fuel tank
	Fuel line clogged	Clean fuel line
	Defective spark plug	Clean or replace spark plug
	Engine has too much fuel	Dry and adjust spark plug and start engine
Engine overheats	Low engine oil	Refill immediately
	Impaired cooling	Clean cooling fan grille
	Air filter clogged	Clean air filter

6.6.3 Lubricants

Use the specified 10w/30 oil specified by Honda for the engine oil.

To lubricate the roller bearings in the wheels we recommend using bio-lubricating grease.

7.0 Transportation, Storage and Handling

7.1 Transportation

Use ramps where possible to manoeuvre the Scarifier into a transportation vehicle.

The LS42 must be fixed securely using straps and by placing chocks behind the wheels.

Always transport the LS42 horizontally and not at an angle.

Ensure that the fuel control lever on the engine is moved into the OFF position so fuel does not leak into the carburetor during transportation.

7.2 Storage

Always clean the machine and dry thoroughly prior to storage and ensure all lubrication points have been re-greased.

For periods of long storage, change the engine oil.

Either drain the fuel completely or fill the fuel tank and add fuel stabilizer.

Do not store the Scarifier in wet rooms, where fertiliser is stored, or in stables as heavy corrosion may occur.

Always store the machine in a horizontal position.

7.3 Handling

Do not attempt to lift the machine alone. At least two people is the minimum required.

Gloves must be worn when lifting the LS42 Scarifier.

Do not tilt the machine so that fuel can leak into the air filter of the engine.

When performing maintenance on the Scarifier when it is situated on a work bench, ensure that the machine is firmly held in position at all times.

Do not lift the machine solely by the engine at any point.


8.0 Service Record

To ensure your machine is kept in peak condition we recommend that your CAMON LS42 Lawn Scarifier is serviced regularly.

Contact Tracmaster on 01444 247689 to find out who your local Authorised Agent is.

Company: _____ Date: _____	Company: _____ Date: _____
Company: _____ Date: _____	Company: _____ Date: _____
Company: _____ Date: _____	Company: _____ Date: _____

EC Declaration of Conformity

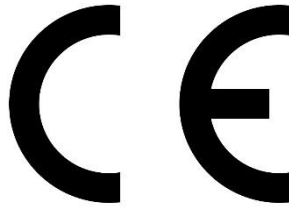

Tracmaster Ltd declares that the machinery stipulated below complies with all the relevant provisions of:

Machinery Directive 2006/42/EC

EMC Directive 2004/108/EC

and the National Laws and Regulations adopting these directives and other relevant directive.

Manufacturer: Tracmaster Ltd
Sovereign Centre
Victoria Road
Burgess Hill
RH15 9LR
UNITED KINGDOM

Machine Description: CAMON LS42 Scarifier

Serial No:

Harmonised Standards applied: (including parts of):

- | | |
|---|---|
| EN 294:1992 | Safety of machinery: Safety distance to prevent danger zones being reached by the upper limbs. |
| EN 954-1:1996 | Safety of machinery: Safety related parts of control systems. Part 1 – general principles for design. |
| EN 20643:2008+A1:2012 | Hand arm vibration: Laboratory measurement of vibration at the grip surface of hand guided machinery – general. |
| EN 12100-1:2003 & EN12100-2:2003 | Safety of machinery: Basic concepts, general principles for design parts 1 & 2. |
| EN 13684:2004+A2:2009 | Garden equipment. Pedestrian controlled lawn aerators and scarifiers. |
| ISO 11684:1995 | Tractors, machinery for agriculture and forestry, powered lawn and garden equipment: Safety signs and hazard pictorials – general principles. |

Responsible Person: Jody Symons

Position in Company: Technical Director

Address: Tracmaster Ltd, Sovereign Centre, Victoria Road, Burgess Hill, RH15 9LR

Date: September 2012

Signature:



© 2018 Tracmaster Ltd



Tracmaster Ltd, Sovereign Centre, Victoria Road, Burgess Hill RH15 9LR
Tel: +44 (0)1444 247689 www.tracmaster.co.uk info@tracmaster.co.uk