
TECHNICAL SERVICE BULLETIN



C2000 Tiller Belt Guide

The engine pulley belt guide has been changed to prevent the possibility of the belt coming off the pulley when the operating lever is released very quickly.

To replace the guide:

1. Remove left hand mudguard.
2. Remove the belt cover.
3. Undo the nyloc nut only to remove the existing guide.
4. Hold up the operating lever on the handlebar to tighten the belt. Do not release.
5. Fit the new belt guide using washers if necessary either side of the guide mounting plate to ensure the belt is central in the guide. Move the guide up or down to give the gaps at the top and bottom of the belt as shown and tighten the retaining nut.
6. Release operating lever.
7. Run the machine and check the drive system.
8. Replace the belt cover.

DO NOT ADJUST THE BELT GUIDE WITH THE ENGINE RUNNING

If you require any further assistance please contact our Technical Department.

Email:
technical@tracmaster.co.uk

Phone:
01444 247689



Top gap = 6mm

Bottom gap = 10mm