

# Setting Guide

This setting guide **should only be used as general reference.**  
 After some uses, you will learn what settings will work best for your bottles.  
**Always test bottle temperature before feeding baby.**

baby brezza®  
 safe+smart  
 bottle warmer

### Quick Warm ☁️

🏠 Room Temperature 21°C

Plastic 🍼		Glass 🍷	
30ml	1	30ml	×
60ml	2	60ml	×
90ml	3	90ml	1
120ml	4	120ml	2
150ml	5	150ml	3
180ml	6	180ml	4
210ml	7	210ml	5
240ml	8	240ml	6
270ml	9	270ml	6

### Quick Warm ☁️

❄️ Cold Temperature REFRIGERATED 4°C

Plastic 🍼		Glass 🍷	
30ml	1	30ml	×
60ml	2	60ml	×
90ml	3	90ml	1
120ml	4	120ml	2
150ml	5	150ml	3
180ml	6	180ml	3
210ml	7	210ml	4
240ml	8	240ml	5
270ml	9	270ml	6

### Steady Warm 🌀

🏠 Room Temperature 21°C

Plastic 🍼		Glass 🍷	
30ml	1	30ml	×
60ml	2	60ml	1
90ml	3	90ml	2
120ml	4	120ml	4
150ml	5	150ml	4
180ml	6	180ml	5
210ml	7	210ml	7
240ml	8	240ml	7
270ml	9	270ml	7

### Steady Warm 🌀

❄️ Cold Temperature REFRIGERATED 4°C

Plastic 🍼		Glass 🍷	
30ml	1	30ml	×
60ml	2	60ml	1
90ml	3	90ml	2
120ml	4	120ml	3
150ml	5	150ml	4
180ml	6	180ml	5
210ml	7	210ml	6
240ml	8	240ml	7
270ml	9	270ml	7




Instructions

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces. Use handles.
3. To protect against electric shock and injury to persons do not immerse cord, plug, water tank or appliance in water or other liquid.
4. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised are not to play with the appliance.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before inserting or removing parts, and before cleaning the appliance.
6. Do not operate this appliance with a damaged cord or plug. If the appliance malfunctions or has been damaged in any manner, return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
8. Use on level surface and be sure there is no debris under the unit and the rubber pads are touching the surface.
9. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Do not place on or near hot gas or electric burner, or in a heated oven.
13. Do not use appliance for other than intended use.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. To disconnect, turn appliance off, then remove plug from wall outlet.
16. Make sure machine is turned off before unplugging.
17. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine.
18. The extension cord should be arranged so that it does not drape over a counter top or tabletop, where it can be pulled on by children or tripped over unintentionally.
19. Before serving make sure food is at safe temperature for baby.
20. Unplug cord from wall outlet before serving milk or food warmed in appliance.
21. Do not leave cord within child's reach.
22. The food should not be heated for too long a period

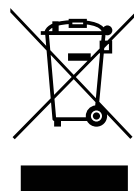

This marking indicates that products should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or Contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

- CAUTION:** To maintain the compliance with the RF exposure guideline, place the unit at least 8in/20cm from nearby persons.
- CAUTION:** If E1, E2, E3, or E4 error messages appear on the bottle warmer screen, please contact customer service before any continued use of the bottle warmer.

**Save these instructions**

# SAFE+SMART BOTTLE WARMER® PARTS



## TECHNICAL DATA


Model: BRZ00139

Supply Voltage: 220-240V ~ 50/60Hz


Current: 4.4A

Heater Power: 500W

## TOUCH DISPLAY CONTROLS

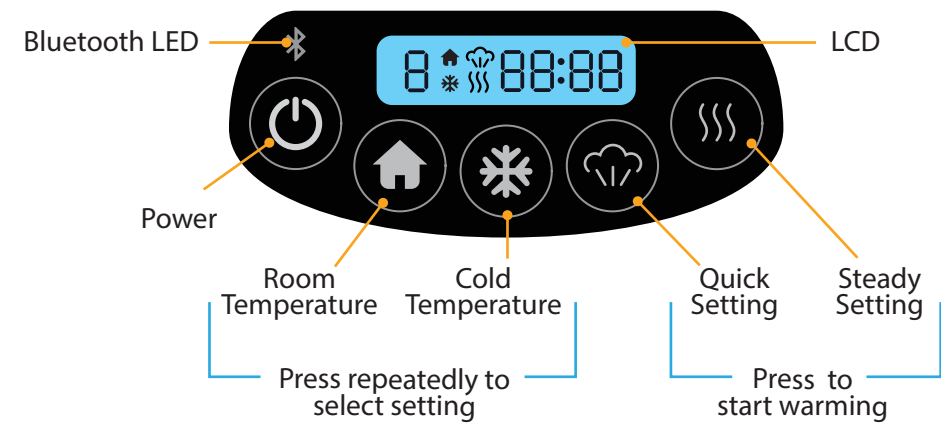


## LCD Screen Setting Icons:

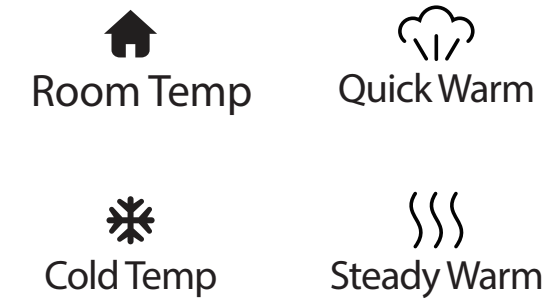

## APP INTERFACE

Once connected, the setup screen will display on your mobile device.\*

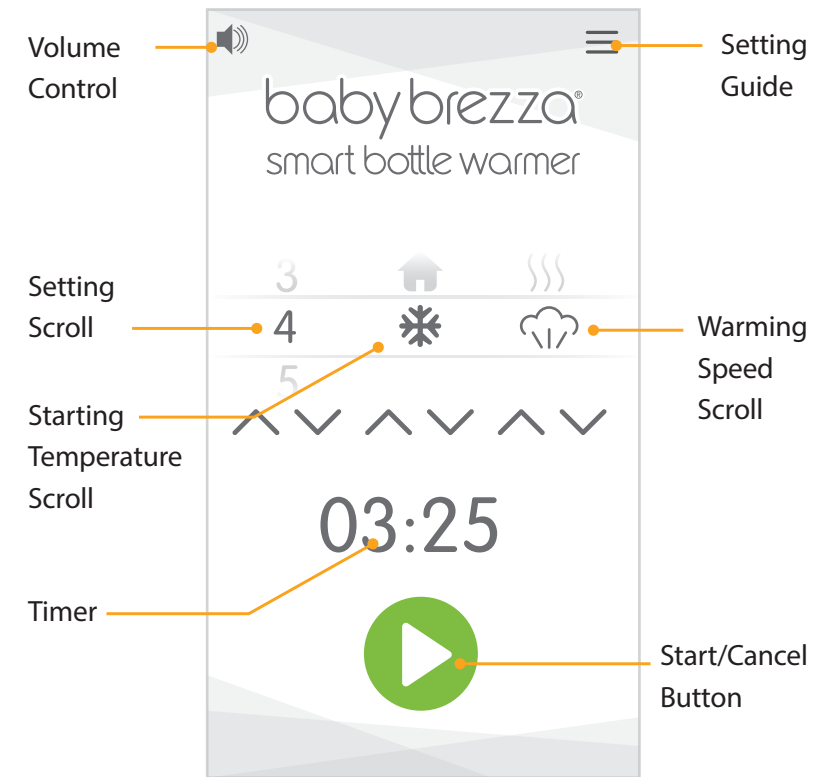

\* English or French can be set at app start up.

## FEATURES

- Features 2 Warming Modes:  
Steady Warm Mode: A warm water bath gently heats milk to body temperature, preserving essential nutrients found in breast milk, which can break down at high temperatures.  
Quick Warm Mode: Steam is used to safely & efficiently heat formula or milk fast.
- Simple Defrost: Safely defrost frozen breast milk pouches.
- The easy-to-use control panel allows you to set up your warmer whether starting with cold or room temperature milk.
- The Baby Brezza App lets you control the warmer from your smartphone and alerts you when your bottle is ready.
- Works with all bottle types. Remember, bottles made of different materials and construction heat at different rates. Try a higher or lower setting if your bottle is too cold or too warm. Always remove venting systems when warming. Bottles with bottom venting systems may leak when heating.

## USING THE SAFE+SMART BOTTLE WARMER® MOBILE APP

The bottle warmer can be set up straight from your smart phone or tablet. Download and install the Baby Brezza Bottle Warmer App available on the app store & Google play. Bluetooth is required on your mobile device to connect to the Safe+Smart Bottle Warmer.




Press on the warmer and touch on your mobile device to connect.





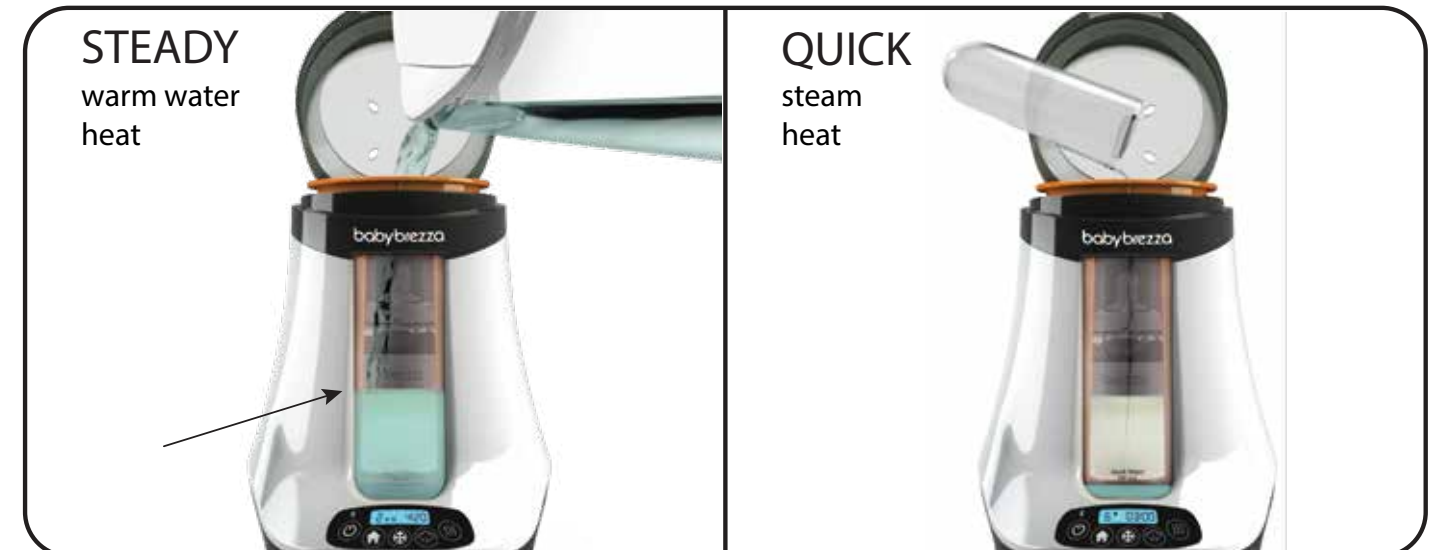

Place the bottle into the warmer and ensure that the tabs around the bottle tray rim align with the slots in the bottle warmer.

## CHOOSE A HEATING MODE: STEADY OR QUICK




DETAILS FOR EACH MODE ON THE FOLLOWING PAGES →

## STEADY WARM






1. Fill the bottle warmer with water until it matches the level of the milk inside the bottle.  
**Always use room temperature water for best heating results.**  
Using warm, hot or cold water will result in inaccurate or dangerous bottle temperatures.
2. Close the bottle warmer cover.
3. Press  to turn on machine.
4. Use the setting guide on the back of this manual to determine the setting for your bottle.  
Make sure to select the correct bottle size and material.
5. Identify the **starting temperature** of your bottle.
  - If your bottle is **room temperature** (approximately 70F/21C) press  repeatedly to select your setting.
  - If your bottle is **cold** (refrigerated 39°F / 4°C) press  repeatedly to select your setting.
6. Press  to begin heating.
7. Warmer will beep when bottle is ready. Remove bottle immediately after warming is complete, swirl bottle gently and check temperature before feeding baby .

**Fill warmer with water to level of milk in the bottle.**



 If you are warming multiple bottles, allow the bottle warmer to cool before warming the next bottle.

## QUICK WARM


1. Fill the measuring cup (included on the back of the warmer) with **room temperature water**. **Do not use warm, hot or cold water, which will result in inaccurate or dangerous bottle temperatures.** Empty the measuring cup into the warmer as shown.  Water level will be at the "Quick Warm" fill line - see arrow below.
2. Close the bottle warmer cover.
3. Press  to turn on machine.
4. Use the setting guide on the back of this manual to determine the setting for your bottle.  
Make sure to select the correct bottle size and material.
5. Identify the **starting temperature** of your bottle.
  - If your bottle is **room temperature** (approximately 70F/21C) press  repeatedly to select your setting.
  - If your bottle is **cold** (refrigerated 39°F / 4°C) press  repeatedly to select your setting.
6. Press  to begin heating.
7. Warmer will beep when bottle is ready. Remove bottle immediately after warming is complete, swirl bottle gently and check temperature before feeding baby .

Please note: the quick warm mode uses steam to warm bottles. Please use caution when opening the lid after warming cycle is complete. Always use the orange bottle tray to remove the bottle from the warmer and avoid touching any hot areas of the bottle warmer. Outside of warmed bottle may be hot immediately after warming. The heating element surface is subject to residual heat after use.

**Fill warmer with water to the Quick Warm Fill line.**

(use measuring cup included with warmer)



 If you are warming multiple bottles, allow the bottle warmer to cool before warming the next bottle.

## DEFROSTING FROZEN MILK POUCHES

To use the defrost setting, place a frozen milk pouch into the warmer and fill water to the line of the milk in the pouch.

Press the ❄️ temperature setting until the “F” icon is displayed on the LCD screen,

Then press 🌀 to begin heating.



## CLEANING THE BOTTLE WARMER

Always allow warmer to cool before cleaning



1  
Unplug the bottle warmer and remove the bottle tray from the base.



2  
Carefully pour out any remaining water inside the base.



3  
Wipe all parts dry before next use. If necessary, wipe base exterior with damp cloth. **Do not use scouring pads, abrasives or solvents for cleaning.**

## DE-SCALING THE BOTTLE WARMER

It is very important to de-scale this appliance every 4 weeks to ensure that it continues to work properly.

Pour all remaining water out of the water chamber. To de-scale, mix 2oz (60ml) of white vinegar with 4oz (120ml) of cold water into the water chamber, and then run one heating cycle on setting 5 until any scaling has been removed. Please ensure proper ventilation when descaling with vinegar.

## TROUBLESHOOTING

Condition	Possible Cause	Possible Remedy
Unit will not power on.	Unit is unplugged.	Ensure that plug is securely inserted into the power outlet.
	⏻ is held for too long.	Press ⏻ to turn on the unit. Do <b>not</b> hold down the button.
Lid will not close.	Bottle Tray is misaligned inside bottle warmer.	Ensure that bottle tray is lined up with bottle tray slots in the bottle warmer.
Machine will not sync to mobile device or is disconnected.	Bluetooth connectivity in mobile device is not turned on.	Turn on the Bluetooth connectivity in your mobile device before syncing to the unit.
	Mobile device is out of range.	Mobile device needs to be within 20ft of the bottle warmer.
Warmed bottle is too hot. (Quick warm setting)	Not enough water added to bottle warmer.	Add water to the marked Quick Warm fill line.
	Setting time is too long or incorrect setting chosen.	Try a lower setting according to your preference.
Warmed bottle is too hot. (Steady warm setting)	Not enough water added to bottle warmer.	Add water until it matches the height of liquid in your bottle.
	Setting time is too long or incorrect setting chosen.	Try a lower setting according to your preference.
Warmed bottle is too cold. (Quick & Steady warm settings)	Too much water added to bottle warmer.	Reduce water in bottle warmer to the required height based on your setting. (Refer to page 5).
	Setting time is too short or incorrect setting chosen.	Try a higher setting according to your preference.
“E5” error displays on machine or “Error” message displays on app.	Little or no water has been added to the machine.	Add cold water to the machine and let it sit and cool for 5 min. Empty out cold water and restart the bottle warmer. Make sure to add the appropriate amount of water needed for warming.
E1, E2, E3, or E4 error displays on machine.	Internal malfunction in machine.	Please contact customer service before continuing to use your machine.

## Limited 1-Year Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The limited warranty is valid only on products bought through authorized resellers. Buying through an unauthorized reseller.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza Formula Pro that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza Formula Pro will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza Formula Pro should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please contact Customer Service.

## Customer Service

If you are experiencing problems with your BabyBrezza Formula Pro Advanced, visit [babybrezza.com/pages/international](http://babybrezza.com/pages/international) to locate your local customer service representative.

Distributed in Australia  
by CNP Brands  
82 Maribyrong Street,  
Footscray, VIC, 3011  
Customer Service 1300 667 137  
E: [info@cnpbrands.com.au](mailto:info@cnpbrands.com.au)  
W: [www.cnpbrands.com.au](http://www.cnpbrands.com.au)

Distributed in New Zealand  
by Wainhouse Distribution  
2-6 Argyle St. Morningside,  
PO Box 41-014  
St Lukes, Auckland, New Zealand  
Customer Service 0800 567 5000  
E: [helpline@wainhousedist.co.nz](mailto:helpline@wainhousedist.co.nz)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---