

Please visit

www.babybrezza.com


For cooking tips, recipes, accessory products and more.

Warranty

If you are experiencing problems with your Baby Brezza One Step Baby Food Maker, please call our Customer Service department at 1-888-396-6552 before returning the product so that we can offer you our best service customized to your particular situation.

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in the United States and Canada. Buying through an unauthorized reseller or using a product outside of the United States and Canada automatically voids this warranty. This warranty is available to consumers only. You are a consumer if you own a Baby Brezza One Step Baby Food Maker that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza One Step Baby Food Maker will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your One Step Baby Food Maker should prove to be defective within the warranty period, we will repair it or, if we think it necessary, replace it. To obtain warranty services, please call Customer Service at 1-888-396-6552 or write to: Baby Brezza, 250 Passaic Street, Newark, NJ 07104 Attn: Customer Service.

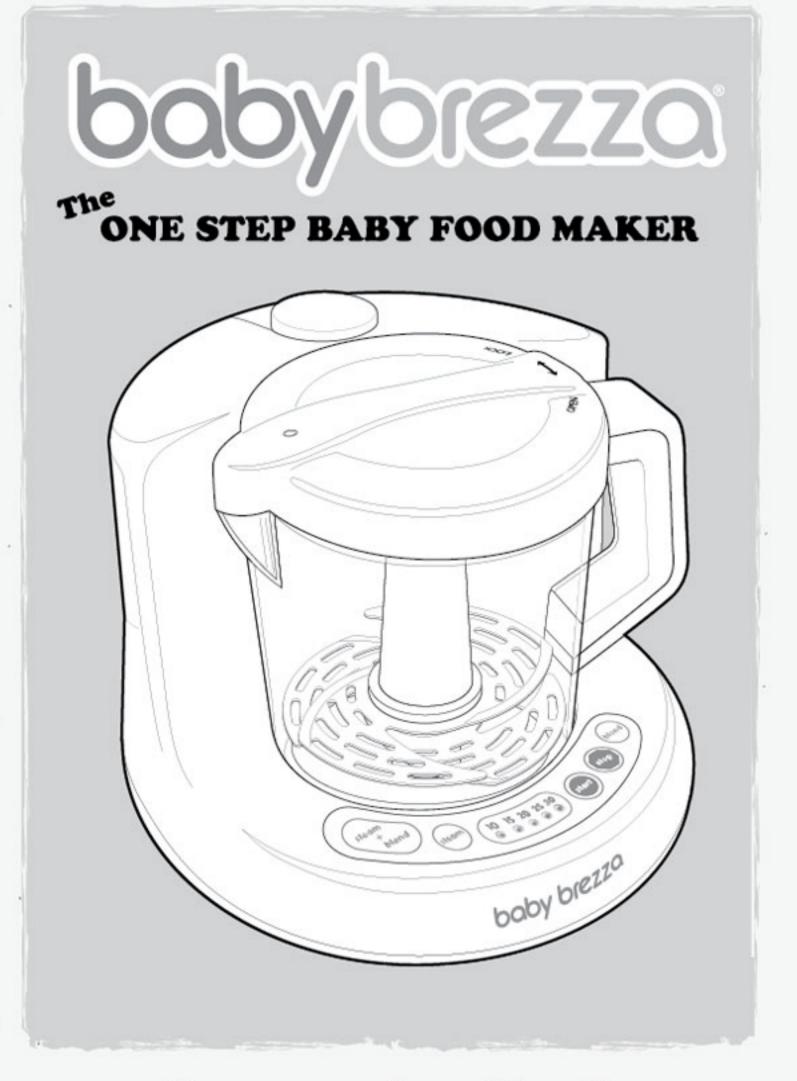

Instruction Book

Important Safeguards

- Read all instructions before using.
- 2. Do not touch hot surfaces. Use handles.
- To protect against electric shock do not immerse cord, plug or appliance in water or other liquid.
- 4. Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before inserting or removing parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
- Use on level surface and be sure there is no debris under the unit and the rubber pads are touching the surface.
- 9. Household use only. Do not use outdoors.
- 10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 11. Do not place on or near hot gas or electric burner, or in a heated oven.
- 12. Extreme caution must be used when moving an appliance containing hot liquids.
- 13. Do not use appliance for other than intended use.
- 14. Do not use the machine without food in the bowl.
- 15. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- 16. Make sure machine is turned off before unplugging.
- 17. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine. The extension cord should be arranged so that it does not drape over countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- Before serving be sure food is at safe temperature.
- Unplug cord from wall outlet before serving food made in machine. Do not leave cord within child's reach.
- 20. Avoid contact with moving parts. Never remove lid while blade is moving.
- Blade has 4 cutting edges and is sharp. Handle carefully. Install and remove by handling top of plastic column.
- 22. Do not disassemble or lubricate drive shaft.
- 23. Do not blend hard foods in this machine. Use the steam + blend function for hard foods such as carrots and potatoes. Use the blend only function for soft foods such as bananas and berries.

Safety Switch Function

If the Bowl Lid is opened or the Bowl is removed from the Base during operation, the machine will automatically shut off and beep rapidly. If the Lid and Bowl are replaced within 5 seconds after removal, the machine will resume operation, otherwise it will return to standby mode.

Overheating Protection

If the Steam Chamber runs dry during operation, the heater will shut off and the machine will beep rapidly 5 times. Add water to the Steam Chamber to resume operation.

Baby Brezza Components



TECHNICAL DATA

Model: BRZ9043

Motor Power: 150W

Supply voltage: 120V ~50/60Hz

Current: 3.5A

Heater Power: 400W

How to Use

Clean all parts before first use





Choose steam time and press start.




Insert plug into wall outlet. Blue lights will cycle to confirm power is on.

(2)

- Open Steam Tank lid, add 180ml of water to Steam Tank, close Steam Tank Lid firmly.
 Bowl is marked with 180ml measurement line for your convenience.
- Place Blade in Bowl by simply dropping the Blade on the Driveshaft without turning it.
 It will sit loosely in the Bowl. Do Not lock in the Blade by turning it or pushing it down.
- Always make sure Driveshaft and Driveshaft Gasket are properly inserted into Bowl before steaming or blending. Use of the machine without the Driveshaft and Gasket will result in water damage to the Base.
- Add desired ingredients to Bowl, close Bowl Lid securely by turning counterclockwise. ✓ (See "attaching lid and bowl" below.)
- Make sure safety tab on Bowl Lid is fully inserted into Base or machine will not start.

Attaching Lid and Bowl

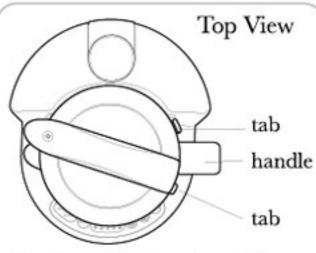

To place lid on bowl, postition the lid so the handle is between the two tabs on the lid and turn counter-clockwise. Turn bowl counter-clockwise to lock on to base.




Turn lid counter-clockwise to lock on to bowl.

Turn bowl clockwise to release from base.



Turn lid clockwise to release from bowl.

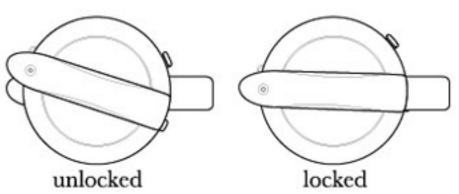

Cooking & Controls

Steam and Blend - Automatically blend after steaming:

- Press "steam + blend" repeatedly until desired cooking time is selected. Lights on Control Panel will indicate how much time has been selected.
- Press "start" button to begin the steam + blend cycle. Once the steam cycle is complete, the blend cycle will run for 30 seconds and the machine will shut off.
- For a smoother consistency, press and hold the "blend" button to blend more.

Blend Only:

 Make sure Bowl Lid is locked onto Bowl. Press and hold "blend" button until desired consistency is achieved. Do not remove lid when blade is moving.

Steam Only:


- If you would like to steam without the automatic blend cycle, press the "steam" button repeatedly until desired steam time is selected.
- Press the "start" button to begin steam cycle. Machine will beep 3 times and shut off when steam cycle is complete.

 
Reheat & Defrost:


· Use the steam function to reheat and defrost. See Steam Only instructions above.

Important Cooking Tips

Always make sure Blade is in the up position when steaming.
 The blade has two positions:

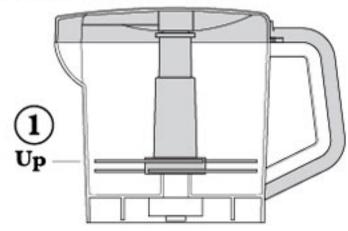



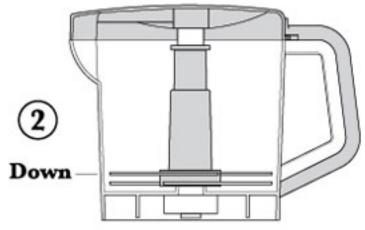

Down position for blending.

The blade will automatically drop to the down position when blending.

Do not overfill the steam tank

It's normal for a little water to spray into the Bowl, but an over-full steam tank will spray too much water into the bowl and may pop the steam tank lid open.

Cut ingredients to approximately 1/4 - 1/2 inch pieces before placing in bowl.
 Smaller pieces of food steam and blend more thoroughly, ensuring proper food texture for your baby to easily swallow and digest.

Cleaning:

- · Always unplug the appliance before cleaning.
- · Clean the appliance before and after use.
- Bowl, Blade and Bowl Lid are top shelf dishwasher safe* and can also be hand washed with warm, soapy water. Never use abrasive pads to clean machine parts.
- · Never put the Driveshaft in the dishwasher.
- · Base and Driveshaft should be wiped with damp cloth only.
- · We recommend regular cleaning of the Steam Tank to prevent damage to the machine from mineral deposits. The frequency of cleaning will depend on the type of water you are using and how much mineral deposit build up forms. Always unplug before cleaning. Put 1/3 cup white vinegar and 1/3 cup distilled water in machine and let sit overnight. Pour out vinegar and water solution following instructions below. Refill Steam Tank with purified water, plug in machine and run "Steam" cycle for 15 minutes. Rinse with purified water to eliminate any remaining vinegar taste. Empty any remaining water and refill with purified water before steaming new recipes.
- Never use a chemical descaler in the machine.
- · Note: To remove unwanted water, open the Steam Tank Lid and slowly pour out of the steam port on the front of the machine. (See diagram below).





Driveshaft

Removing and replacing the Driveshaft

Remove driveshaft from bowl before cleaning in dishwasher. See illustration.

Knob To remove Driveshaft, turn Knob on bottom of bowl clockwise and pull out. Wipe drive shaft with damp cloth. Never put driveshaft in dishwasher. Do not misplace Driveshaft

Gasket while cleaning. To replace the Driveshaft after cleaning, insert into hole in bottom of bowl and turn counter-clockwise to lock in place *.

*Always make sure Driveshaft & Driveshaft Gaskets are properly inserted and locked into place to prevent damage to bowl and base.

Troubleshooting

Condition	Possible Cause	Possible Remedy
Machine will not start.	Steam Tank is dry. (Machine will beep rapidly 5 times to indicate that the Steam Tank is Dry)	Add water to Steam Tank.
	Safety tab on Bowl Lid is not fully inserted into Base.	Make sure Bowl Lid is turned counter-clockwise as far as possible and safety tab on Bowl Lid is fully inserted into Base.
	Machine is unplugged.	Plug in Baby Brezza.
Machine stops during operation	Steam Tank is dry. (Baby Brezza will beep rapidly 5 times to indicate that the Steam Tank is Dry)	Add water to Steam Tank.
	Safety tab on Bowl Lid has been disengaged from Base.	Make sure Bowl Lid is turned counter-clockwise as far as possible and safety tab on Bowl Lid is fully inserted into Base.
Final puree consistency isn't smooth	Raw food isn't diced finely enough before steaming.	Dice food into smaller pieces, approximately 1/4", before placing in bowl.
	Low water content of raw food.	Add additional water, formula, breast milk or other liquid after steaming and blend longer.
Can not remove Blade from Driveshaft	Blade is in dropped position with driveshaft pins locked in place.	Lock bowl back onto machine. Gently pull up on center blade column while twisting clockwise.
Scaling in Steam Tank	Mineral rich water used persistently.	Clean Steam Tank by following instructions on page 5.

If you can not remedy problems with the machine by using the troubleshooting chart above, please contact Customer Service at 1-888-396-6552.