



Silicone Scraper instructions


The silicone scraper should be washed before first use. You can leave it installed in the Locking Cover when washing, but if you need to remove or replace it, follow the instructions below.

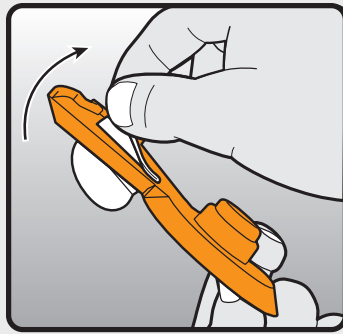


To Remove : Gently pull the scraper from the top to remove and slide out of slot in Locking Cover.

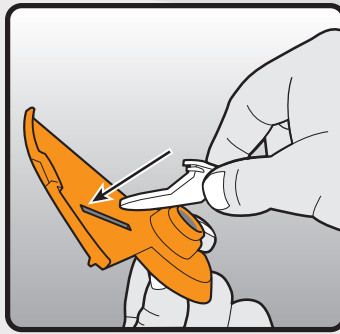


To install : Align scraper with slot in Locking Cover and push gently into slot.

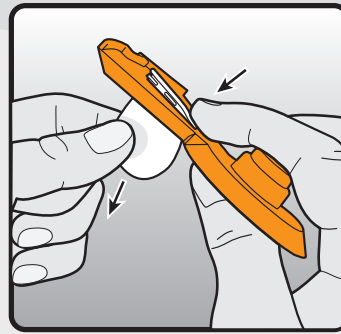


While pulling from the bottom side, push on the top side to seat the first barb.

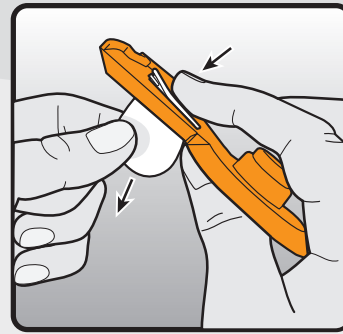

Continue pushing down along the top of scraper while gently pulling to seat all barbs.

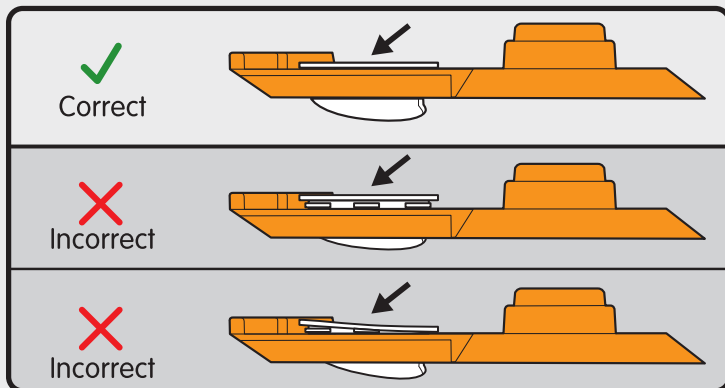

When the Scraper is fit properly, the top will sit flush with the Locking Cover. Check for proper fit by comparing to drawing above.

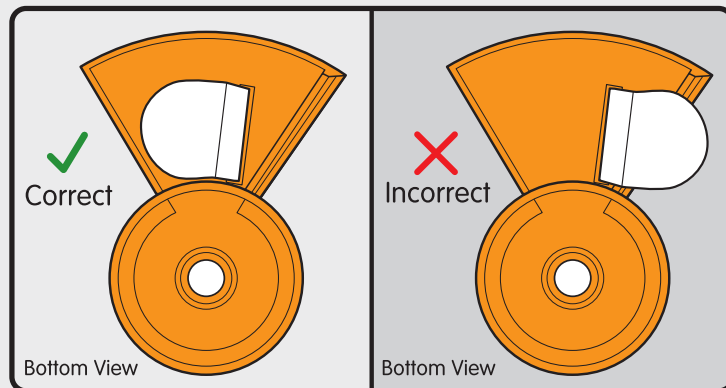

Check the direction of the scraper when fit in the locking cover. When viewed from the bottom of the Locking Cover, the Silicone Scraper should fit underneath without protruding as shown in the illustration above.

Customer Service and Warranty

If you are experiencing problems with your Baby Brezza® Formula Pro®, please call our Customer Service department at 1-800-667-4111 or email at: service@issibaby.ca before returning the product to retailer so that we can offer you the best service.

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in Canada. Buying through an unauthorized reseller or using this product outside of Canada automatically voids this warranty. This warranty is available to consumers only. You are a consumer if you own a Baby Brezza® Formula Pro® that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza® Formula Pro® will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza® Formula Pro® should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it. To obtain warranty services, please call Customer Service at 1-800-667-4111 or write to: service@issibaby.ca.

babybrezza® formula pro®

Instructions for set-up, use and cleaning

⚠ WARNING ⚠

For the Formula Pro to work properly you **MUST** follow these 4 essential points:

1. **Assemble the locking cover and powder container parts correctly.**
2. **Keep the powder level above the MIN line.**
3. **Clean the funnel and underside of powder container EVERY DAY or after every 4 bottles made.**
4. **Make sure Funnel and all powder container parts are completely dry before assembly.**

⚠ **FAILURE TO SET UP AND CLEAN THE FORMULA PRO® CORRECTLY WILL RESULT IN IMPROPER FORMULA DISPENSING.**

READ THE INSTRUCTION MANUAL and **CAREFULLY** follow the step-by-step directions for cleaning, set up and use.



⚠ **WARNING: IF YOUR CHILD WAS BORN PREMATURE, WITH LOW BIRTH-WEIGHT OR IS IMMUNE DEFICIENT, PLEASE CONSULT YOUR PEDIATRICIAN BEFORE USING THIS MACHINE.**

babybrezza.ca

This product may be covered under one or more of the following including U.S. Patent No. 8,584,901, Canadian Patent No. 2,842,603 and pending patent application(s) in the U.S. and other countries.

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces.
3. To protect against electric shock and injury to persons do not immerse cord, plug, water tank or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before inserting or removing parts, and before cleaning the appliance.
6. Do not operate this appliance with a damaged cord or plug. If the appliance malfunctions or has been damaged in any manner, contact ISSI Inc. at 1-800-667-4111 or by email at: service@issibaby.ca
7. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
8. Use on level surface and be sure there is no debris under the unit and the rubber pads are touching the surface.
9. Household use only. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use.
13. Do not attempt to use the machine without water in the water tank.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. Make sure machine is turned off before unplugging.
16. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine. The extension cord should be arranged so that it does not drape over countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
17. Before serving make sure formula mixture is at safe temperature for baby.
18. Avoid contact with moving parts. Never remove powder container, powder container lid, funnel or water tank while machine is in operation.
19. Do not disassemble.

⚠ Warning: For infants less than 6 months old, always use boiled, cooled water or bottled, purified water suitable for infant formula preparation. Tap water and/or unsterilized baby bottles can potentially lead to adverse effects for the health of your baby. Only prepare one bottle at a time, feed immediately and follow all instructions carefully. Do not keep leftover formula mix. Always hold baby while feeding. Leaving baby unattended may cause choking.

TECHNICAL DATA

Supply voltage: 120V ~ 60Hz

Model: FRP0045


Current: 2.5A

Heater Power: 250W

Motor Power: 20W

Save these instructions

Formula Pro® Controls & Indicator Lights

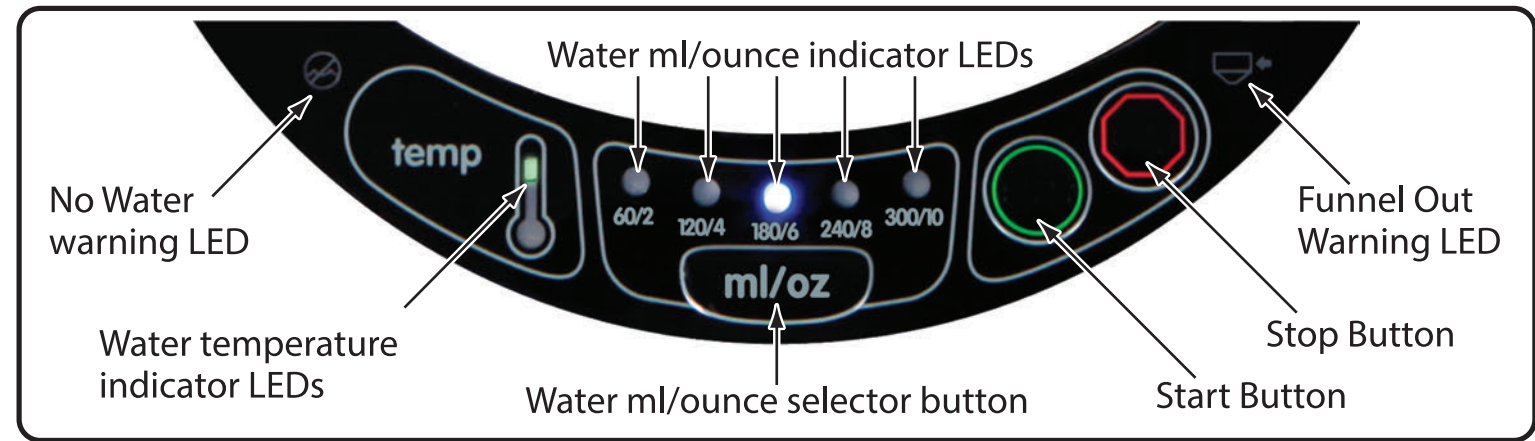

Formula Pro® Components




Powder Container set up

Wash: Funnel, Funnel Cover, Inside of Water Tank, and all Powder Container parts (see page 2).

After washing, **make sure all Powder Container parts are COMPLETELY DRY before assembly.**

Set up the Measuring Wheel to work with your powder type.

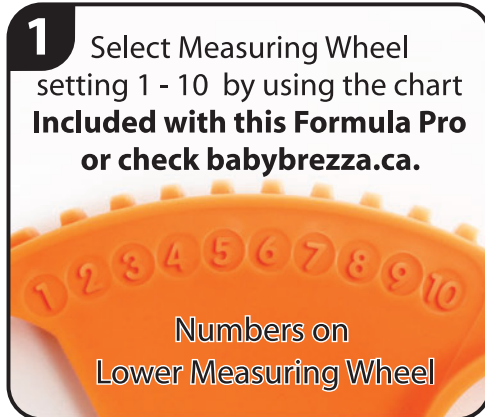

Press upper & lower halves of Measuring Wheel together so your powder's setting number shows through window on the Upper Measuring Wheel. You have now assembled your Measuring Wheel.

Set up the Powder Container and parts.

Correct assembly is critical to accurate powder dispensing



Place Powder Container on Base with "MIN" & "MAX" lines facing front.



Place assembled Measuring Wheel In Powder Container.



Locking Cover should look like this when assembled properly. **Make sure the front edge of Locking Cover is under the tab in the Powder Container. Locking cover MUST be correctly installed, or the machine will dispense wrong amount of powder.**



Place Stirring Wheel In Powder Container, align with axle and push down so it touches the Locking Cover.

EXTREMELY IMPORTANT!

1. Place the front edge of Locking Cover **under the tab in the Powder Container.**
2. Press down on back edge so hole slides over axle.

Don't add powder yet.

Follow the steps on the next page to run an internal cleaning cycle BEFORE using the Formula Pro® with powder.

Clean internal parts - before first use - without powder

After setting up the powder container, run a cleaning cycle to rinse internal parts.



Place Powder Container Lid on Powder Container as shown.



Turn Powder Container Lid Clockwise to lock into place.




Plug in machine and turn power switch to on position.



Fill water tank to MAX line with **distilled or cooled, boiled water.** Check water tank is correctly fitted with hook slotted in machine, and is flush with base.



Place 10 ounce (300 ml) or larger container to catch water.

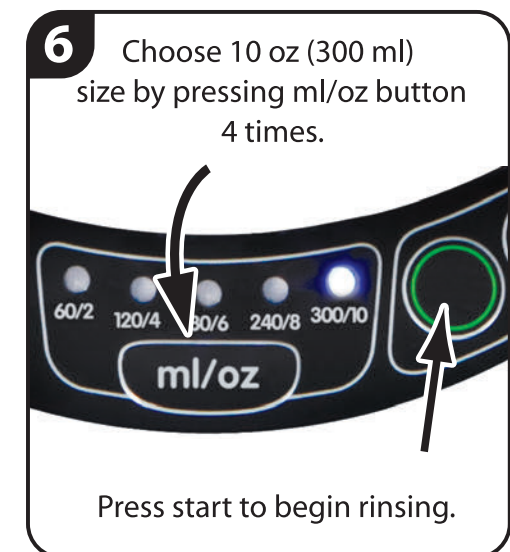

The Formula Pro® will stop after dispensing 10oz (300 ml) of water. Dispose of the water captured in the container.

Your Formula Pro® is now ready to use with powder.

Follow the steps on pages 5 and 6 to prepare bottle with the Formula Pro®

Always use a clean and sterilized bottle, nipple or other feeding equipment.

Wash and dry hands before handling sterilized bottles.

Make each bottle as needed, and do not store mixed formula for later use.

Bottle Preparation

Follow the steps on these pages to prepare bottles with the Formula Pro®



1

Fill water to MAX line



2


Fill powder container with powder and close Lid

Pour powder loosely and evenly into Powder Container. Never fill past the MAX line.


Never pack powder in the Powder Container or overfill.

Powder can be spread evenly with the 3 arms on the Powder Container Lid before closing.


Temperature Indicator Lights

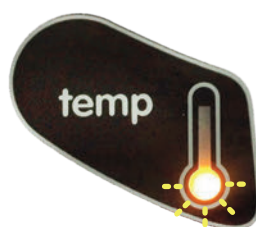

Flashing Yellow means water is heating.

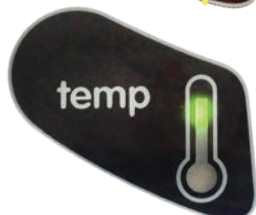

Solid Green means water is warm and ready.

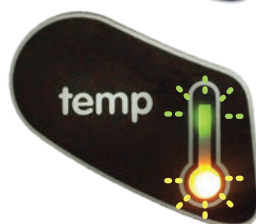

Flashing Yellow & Green means water poured into tank is too hot or too cold.

About water temperature

The heater in the Water Tank will warm the water and keep it warm as long as the machine is powered on. If you refill the Water Tank with cool or room temperature water and need to use the machine right away, the machine can be used while water is heating (flashing yellow light). Water temperature varies by a few degrees according to the heating cycle of the tank.

If you run the machine with cool or room temperature water, before the water is warm and ready, always make sure formula is mixed properly and check for clumps.

For quickest warming time, always fill the water tank with room temperature or cool water. Flashing green & yellow lights mean the water poured into in the Water Tank is too hot or too cold. The machine will not work while the green & yellow lights flash. If you don't want to wait long for the water to heat, do not fill with water stored in the refrigerator.

⚠ Never fill Water Tank with hot water. If you boil water before using it in the machine, let the water cool to body or room temperature before pouring it into the Water Tank.

Bottle Preparation continued on next page

Bottle Preparation Continued



Select correct height for Drip Tray based on bottle height. Lift up and pull out to remove. Push in and **DOWN** to install.


3



Short Bottle


Tall Bottle

Adjust the drip tray so the bottle is as close to the Funnel outlet as possible. This will make sure no formula spills outside of the bottle.

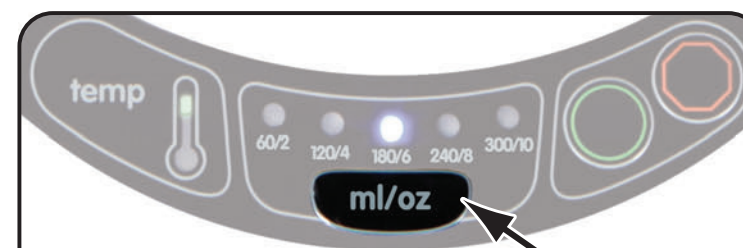

Select bottle size by pressing the ml/oz button. With each push, the amount will increase 2 oz (60 ml).

4

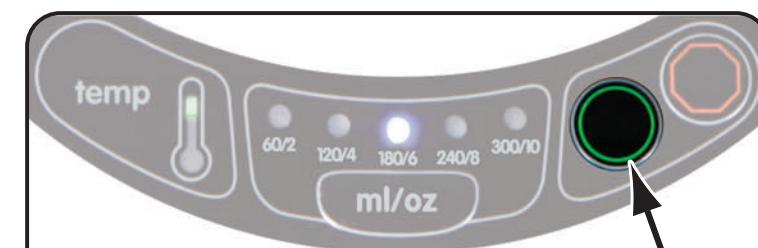

When desired ml/oz size is selected, press start to dispense formula.

5



Machine will dispense formula into bottle and stop when done.

6



Check level of mixed formula. **LEVEL WILL APPEAR HIGHER** due to added powder volume and/or variance in bottle markings.

7

Some powders will clump. Always check for clumps and shake to dissolve them if necessary. Check the temperature.



8

The funnel warning LED will light up after every 4 bottles made to remind you to clean the funnel and underside of powder container. Follow cleaning instructions on the next page to clean and reset funnel LED.

⚠ Never remove Water Tank, Funnel or Powder Container while machine is in operation.

Always hold the bottle when feeding baby. Never prop the bottle up and leave your baby to feed unsupervised.

After baby stops feeding from bottle, discard any leftover formula mixture.


Daily Cleaning - EXTREMELY IMPORTANT!

Unplug the appliance before cleaning. Do not use abrasive pads to clean the machine.

The Funnel, Funnel Cover and underside of Powder Container MUST BE CLEANED after every 4 bottles made. Follow these steps to clean the Formula Pro® parts every day.



1 Remove Funnel & Funnel Cover by pulling out and down.

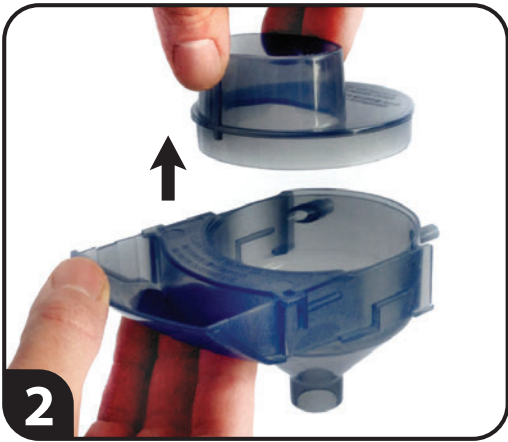

2 Remove Funnel Cover from Funnel by lifting up on Funnel Cover.




3 Wash and rinse Funnel & Funnel Cover thoroughly. Funnel and Funnel Cover are top rack dishwasher safe and are also safe for steam sterilization.



4 Wipe the hole on the underside of the Powder Container.

With the Funnel removed and Powder Container attached to machine, wipe any dry formula powder from the hole on the underside of the Powder Container & Funnel Compartment in a circular motion with a DRY paper towel or DRY soft cloth.

- ⚠ Never use a wet or damp cloth to clean the Funnel Compartment or underside of Powder Container.
- ⚠ Always make sure the Funnel and Funnel Cover are completely DRY before placing in machine.

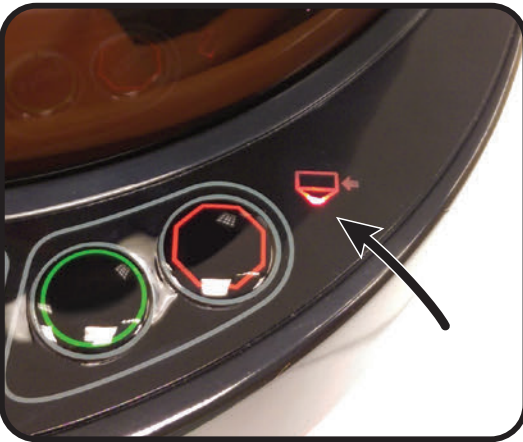

Funnel Cleaning Reminder LED

After every 4 bottles made, the funnel LED will flash as a reminder to remove and clean the funnel. If the start button is pressed without cleaning the funnel prior, the Formula Pro will beep and the funnel LED will continue to flash.

Remove the funnel. (The funnel LED will light up.) Follow the instructions for cleaning and drying the funnel and place it back in the machine. The LED lights will turn off once the funnel is replaced.

Monthly Cleaning

The Powder Container parts, Water tank and Base should be cleaned once a month.



1 The Powder Container and Powder Container Parts should be cleaned **once a month** by emptying any remaining powder (powder can be saved for refill) and cleaned with mild detergent and soft cloth or sponge. **NEVER PLACE POWDER CONTAINER IN DISHWASHER.**

The Water Tank should be cleaned **once a month** with mild detergent and soft cloth or sponge. Rinse inside of Water Tank thoroughly before refilling with clean, purified water. Wipe the outside of the Water Tank with a damp clean cloth. **Never immerse Water Tank or get the electronics in the base of the Water Tank wet.** If the electronics in the base of the Water Tank get wet, allow to air dry thoroughly before placing back on base. **Never place Water Tank in dishwasher.**



3 The machine Base should be wiped with a damp, soft cloth or sponge and dried immediately. Never submerge the base or plug in water or other liquids. Dry machine Base after cleaning.

User Tips



Always make sure powder level is above the top of the Stirring Wheel. You will know it's time to refill the Powder Container when any of the four horizontal arms of the Stirring Wheel are visible through the powder.

Do not use the machine when the powder level is below the MIN line marked on the Powder Container.



If any powder is spilled outside of the container onto the Formula Pro or between the water tank and base, wipe the powder away with a clean, dry cloth to maintain a clean surface.



Make sure powder is not above the MAX line before closing lid.


If the powder forms a cone shape mound when refilling the Powder Container, use the 3 arms on the bottom of the Powder Container Lid to gently level the powder before closing. Always keep the powder level below the MAX line and never pack powder in the Powder Container.

The Formula Pro can be used at any time during the water heating cycle, but not all powders mix well with cool or room temperature water. Always check for clumps & shake or stir the closed bottle gently to mix the powder completely with the water.

Troubleshooting

Condition	Possible Cause	Remedy
Machine will not start.	Unit is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Unit is not turned on.	Turn switch on lower back of unit from off to on.
	Funnel is removed or not fully inserted.	Insert Funnel or push front of Funnel until flush with machine.
	Water Tank is removed or not fully seated.	Place Water Tank on Base or push down all the way.
	Water level is below “MIN” line.	Add more water to Water Tank.
	Powder Container is removed or not fully seated.	Place Powder Container on Base or push down all the way.
	Powder Container Lid is not completely closed.	Turn Powder Container Lid clockwise to close completely.
	Powder Container Lid is on backwards.	Make sure tab on outer edge of Powder Container Lid is facing the back of the machine and engaged with safety switch. See page 4, step 1 & 2 for details.
	Water in Water Tank is too cold. (Green & Yellow Temp LEDs Flashing)	Allow water to warm up or pour warmer water in Water Tank to raise temperature faster.
	Water in Water Tank is too hot. (Green & Yellow Temp LEDs Flashing)	Allow water to cool down or pour cool water in Water Tank to lower temperature faster.
Temperature of dispensed formula is too cold.	Water has not yet been heated to correct temperature.	Wait for heater to warm water in tank. Green LED in “temp” section of control panel will illuminate when water reaches correct temperature.
Not enough powder dispensed.	Powder level in Powder Container is too low.	Refill Powder Container with more powder.
	Powder is stuck in Powder Measuring Wheel.	Make sure Silicone Scraper is installed correctly.
	Measuring Wheel is set to incorrect number for powder type.	Make sure the Measuring Wheel is set to the correct number for your powder type.

Troubleshooting

Condition	Possible Cause	Remedy
Too much powder dispensed.	Measuring Wheel is set to incorrect number for powder type.	Make sure the Measuring Wheel is set to the correct number for your powder type.
	Locking Cover is not locked under tab in Powder Container.	Check Locking Cover and make sure the edge is locked under the tab in the Powder Container. See page 3, Step 5 for details.
Not dispensing water	Water Tank not fully seated.	Push Water Tank down all the way on Base.
Scaling on water tank heater plate.	Mineral rich water used persistently.	Clean heater plate and use purified/distilled water.
Powder build-up on funnel cover and underside of powder container.	Frequent use without cleaning underside of powder container. See page 7, step 4 for details.	Clean funnel cover and powder container bottom frequently, every 4 bottles, or at least once a day.
Water Tank is full, red no water light  is on.	Water Tank not fully seated.	Push Water Tank down all the way on Base.
Funnel will not fit all the way in Funnel Compartment.	Funnel Cover is not straight on funnel or not pushed down completely.	Align tab on front of Funnel Cover with notch in Funnel and push down Funnel Cover completely.
Funnel LED flashing, Formula Pro beeps when start button is pressed.	Funnel and hole on underside of Powder Container require cleaning.	Follow Steps on Page 7 to clean and dry Funnel and hole on underside of Powder Container.
If you can not remedy problems with the machine by using the troubleshooting chart above, do not return the Formula Pro® to the store, please contact Customer Service 1-800-667-4111 or email at: service@issibaby.ca Any other servicing should be performed by an authorized service representative.		