papapezza®

Customer Service

If you are experiencing problems with your Baby Brezza Formula Pro, please call our Customer Service department at 1-888-396-6552 before returning the product so that we can offer you our best service customized to your particular situation.

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in the United States and Canada. Buying through an unauthorized reseller or using this product outside of the United States and Canada automatically voids this warranty.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza Formula Pro that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza Formula Pro will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza Formula Pro should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please call Customer Service at: 1-888-396-6552, customerservice@babybrezza.com or write to:

Baby Brezza, 250 Passaic Street, Newark, NJ 07104 Attn: Customer Service.

This product may be covered under one or more of the following including U.S. Patent No. 8,584,901, Canada Patent No. 2,842,603, China Patent No. CN103874441, Australia Patent No. 2011374309, Spain Patent No. ES2473790B2 and pending patent application(s) in the U.S. and other countries.

babybrezza.com © 2017 Baby Brezza Enterprises LLC

babybrezza[®] formula pro[®]



Instructions for set-up, use and cleaning

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

- 1. Read all instructions before using.
- 2. Do not touch hot surfaces.
- 3. To protect against electric shock and injury to persons do not immerse cord, plug, water tank or appliance in water or other liquid.
- 4. Close supervision is necessary when any appliance is used by or near children.
- 5. Unplug from outlet when not in use and before cleaning.
 Allow to cool before inserting or removing parts, and before cleaning the appliance.
- 6. Do not operate this appliance with a damaged cord or plug. If the appliance malfunctions or has been damaged in any manner, return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
- 8. Use on level surface and be sure there is no debris under the unit and the rubber pads are touching the surface.
- 9. Household use only. Do not use outdoors.
- 10. Do not let cord hang over edge of table or counter, or touch hot surfaces.

- 11. Do not place on or near hot gas or electric burner, or in a heated oven.
- 12. Do not use appliance for other than intended use.
- 13. Do not attempt to use the machine without water in the water tank.
- 14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- 15. Make sure machine is turned off before unplugging.
- 16. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine. The extension cord should be arranged so that it does not drape over a counter top or tabletop, where it can be pulled on by children or tripped over unintentionally.
- 17. Before serving make sure formula mixture is at safe temperature for baby.
- 18. Avoid contact with moving parts. Never remove powder container, powder container lid, funnel or water tank while machine is in operation.
- 19. Do not disassemble.

MARNING: For infants less than 6 months old, always use boiled water that's then been cooled to room temperature. Never pour boiling/hot water in water tank. Or use bottled, purified water suitable for infant formula preparation. Tap water and/or unsterilized baby bottles can potentially lead to adverse effects for the health of your baby. Only prepare one bottle at a time, feed immediately and follow all instructions carefully. Do not keep leftover formula mix. Always hold baby while feeding. Leaving baby unattended may cause choking. If your child was born premature, with low birth-weight or is immune deficient, please consult your pediatrician before using this machine.

Save these instructions



CONGRATULATIONS!

Thank you for purchasing your new Formula Pro[®]. In doing so, you have chosen the most unique and innovative on-demand baby formula maker on the market. At Baby Brezza, we developed the Formula Pro[®] to help parents save time and frustration when it comes to feeding their babies.

 
Now you actually have two new babies: The hungry human baby who needs formula and the Formula Pro®. Just like a real baby, the Formula Pro® needs some tender love and care, and will bring you years of joy. We promise it's worth it, for a perfectly mixed warm bottle of formula prepared in 30 seconds. Your baby's first bottle of hassle-free formula is just a few minutes away. But keep the powder in the cupboard for now. You'll first have to hand-wash all the parts (no dishwasher, no sterilizing and no boiling water!) with soap and water, then assemble them and flush the Formula Pro® with water. It's easy. We'll show you how in the following pages. To get the most out of your new Formula Pro®, read these instructions and retain them for future reference.

FEATURES

- Optimal water temperature, easy assembly, and hassle-free formula preparation.
- Patented mixing technology: Accurately measures and mixes formula powder and water in seconds.
- The removable water tank: easy to fill and clean, holds 50 ounces of water.
- Airtight formula storage, holds 700g of formula powder.
- Works with most major formula brands and types.
 (check babybrezza.com/settings for the current list of compatible formulas).

TIPS AND MAINTENANCE

- Funnel and especially the Powder-Dispensing Hole, needs to be cleaned after every 4 bottles or once a day (whichever comes first). A red indicator light will illuminate to remind you.
- Make sure powder level is always filled above the min line and never fill the powder container above the max line.
- Once a month you'll need to take apart the machine completely and hand-wash. You can't put any of the parts in a dishwasher, sterilizer or microwave, as the parts will warp and the machine will not operate.
- Each part needs to be completely dry when reassembling, to avoid formula clumping and growing bacteria. Some of the parts have little grooves and holes, so it may take some persistence to dry by hand.
- Refer to page 11 for a handy set-up check list.





TECHNICAL DATA Model: FRP0045 Heater Power: 250W Supply Voltage: 120V ~ 60Hz Current: 2.5A Motor Power: 20W

3

FLUSHING THE FORMULA PRO® BEFORE FIRST USE

ABOUT WATER TEMPERATURE

For quickest warming time, always fill the water tank with room temperature water. Flashing green & yellow lights mean the water poured into the water tank is too hot or too cold. The machine will not operate while the green & yellow lights flash.

The heater in the water tank will warm the water and keep it warm as long as the machine is powered on. If you refill the water tank with room temperature water and need to use the machine right away, the machine can be used while water is heating (flashing yellow light).


⚠ Never fill water tank with hot or cold water. If you boil water before using it in the machine, let the water cool to room temperature before pouring it into the water tank.



Fill water tank to MAX line with room temperature water only.



Place 10 ounce or larger container to catch water.

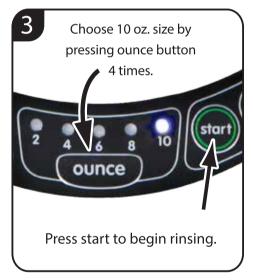


The Formula Pro® will stop after dispensing 10oz of water. Dispose of the water captured in the container.

Your Formula Pro® is now ready to use with powder.

SET-UP DETAILS


Please watch set-up and cleaning videos at babybrezza.com/video.

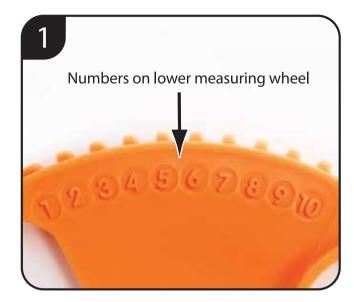

Select measuring wheel setting 1 - 10 by using the chart provided at **babybrezza.com/settings**



Example of measuring wheel assembled correctly on setting 5.

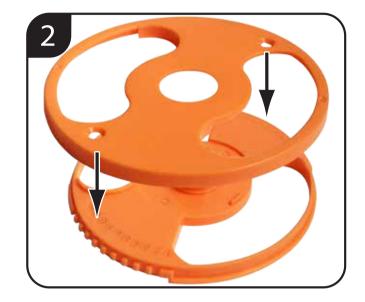

Press upper and lower measuring wheels together so powder setting shows through window as in image 2a.



Place powder container on base with "MIN" & "MAX" lines facing front.

SET-UP DETAILS

Please watch set-up and cleaning videos at babybrezza.com/video.



Place assembled measuring wheel in powder container exactly as shown in photo above.



1. Place the front edge of locking cover **UNDER THE TAB** in the powder container.





Place stirring wheel in powder container, align with axle and push down so it touches the locking cover.



Fit the powder container lid on the powder container with the tab towards the back/left and turn clockwise to lock into place. The powder container is now set up.

5

PREPARING YOUR FIRST BOTTLE

1 bobybezio

Fill tank with **room temperature water** suitable for infant formula preparation.




Carefully fill powder container with powder and close lid. Never overfill or pack powder in container.

Wipe any powder spilled on machine with a clean damp cloth.




Choose correct drip-tray height and turn power switch to "on" position on back of machine.

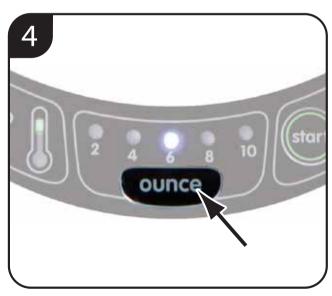

Choose ounce size by pressing "ounce" button until desired size illuminates.

Ounce size indicates water volume only. It does not include the volume of powder added when mixing.

PREPARING YOUR FIRST BOTTLE

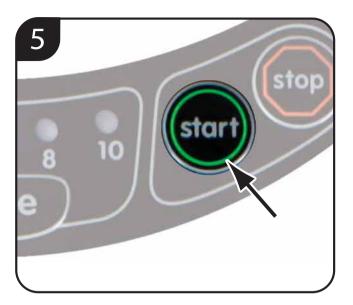

Press the "start" button to begin dispensing.



Check for clumps and shake or stir the bottle if necessary. Check temperature and...



When dispensing is complete, make sure to check level of mixed formula. Level will appear higher due to added powder volume and/or variance in bottle markings.



... Feed baby.

DAILY CLEANING

To wash, always use a non-abrasive sponge and hand wash with warm soapy water. **Never use hot/boiling water, or** put any parts in a dishwasher or sterilizer. Dry parts thoroughly; always make sure parts are completely dry before using again. Must be cleaned daily or after every four bottles when the funnel LED indicator light illuminates.



Remove Funnel & Funnel Cover by pulling out and down.



Wipe the powder-dispensing hole using a dry paper towel or soft dry cloth.



Wash the funnel and funnel cover and dry thoroughly before replacing.



Wipe any spilled powder off base of machine.

⚠ Always make sure the Funnel and Funnel Cover are completely DRY before placing in the machine. ⚠ Never use a wet or damp cloth to clean the powder dispensing hole or underside of Powder Container.

MONTHLY CLEANING

 
Please watch set-up and cleaning videos at babybrezza.com/video.



Hand-wash powder container and associated parts and dry thoroughly.



Wash inside of water tank and wipe outside with clean damp cloth.





Wipe base with soft, damp cloth or sponge and dry with a dry paper towel.

USER TIPS



Refill when stirring wheel arms are visible. Never use machine with powder below MIN line.




Make sure powder is not above the MAX line before closing lid.
Use prongs on underside of powder container lid to gently level the powder.



Wipe any spilled formula off machine including the side covered by the water tank. It is very important to keep the entire Formula Pro® clean.

TOUCH DISPLAY CONTROLS

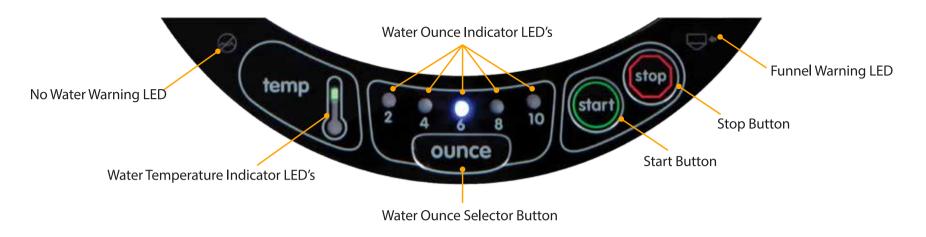

TEMPERATURE INDICATOR LIGHTS



Flashing Yellow means: water is heating.



Solid Green means: water is warm & ready.



Flashing Yellow & Green means: water poured into tank is too hot or too cold.

SETUP CHECKLIST

Your Formula Pro® is set up correctly when you have:

	Washed and thoroughly dried all removable parts according to the cleaning instructions. (no dishwasher, sterilizing, or boiling water.)
	Assembled the Formula Pro® correctly.
	Flushed the Formula Pro® with water. (use only room temperature water)

TROUBLESHOOTING

Condition	Possible Cause	Possible Remedy
Machine will not start.	Unit is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Unit is not turned on.	Turn switch on lower back of unit from off to on.
	Funnel is removed or not fully inserted.	Insert funnel or push front of funnel until flush with machine.
	Water Tank is removed or not fully seated.	Place water tank on base or push down all the way.
	Water level is below "MIN" line.	Add more room temperature water to water tank.
	Powder container is removed or not fully seated.	Place powder container on base or push down all the way.
	Powder container lid is not completely closed.	Turn Powder container lid clockwise to close completely.
	Powder container lid is on backwards.	Make sure tab on outer edge of Powder Container Lid is facing the back of the machine and engaged with safety switch. See page 6, Step 7 for details.
	Water in Water Tank is too cold. (Green & Yellow Temp LED's Flashing)	Dump out and refill with room temperature water.
	Water in Water Tank is too hot. (Green & Yellow Temp LED's Flashing)	Dump out and refill with room temperature water.
Temperature of dispensed formula is too cold.	Water has not yet been heated to correct temperature.	Wait for heater to warm water in tank. Green LED in "temp" section of control panel will illuminate when water reaches correct temperature.
Funnel will not fit all the way in Funnel Compartment.	Funnel Cover is not straight on funnel or not pushed down completely.	Align tab on front of Funnel Cover with notch in Funnel and push down Funnel Cover completely.
Funnel LED flashing, Formula Pro beeps when start button is pressed.	Funnel and hole on underside of Powder Container require cleaning.	Follow Steps on Page 9 to clean and dry Funnel and hole on underside of Powder Container.

12

11

TROUBLESHOOTING

Condition	Possible Cause	Possible Remedy
Too much powder dispensed	Locking cover is not under tab in powder container.	Check locking cover and make sure the front edge is locked under the tab in the powder container. See page 6, Step 5 for details.
	Measuring wheel is set to incorrect number for powder type.	Make sure the measuring wheel is set to the correct number for your powder type. See page 5, Steps 1-2a.
Not enough powder dispensed.	Powder level in powder container is too low.	Refill Powder Container with more powder.
	Machine has not been cleaned regularly.	Disassemble, clean by hand-washing, completely dry all parts and reassemble.
	Silicone scraper is not correctly installed.	Make sure silicone scraper is installed correctly.
	Measuring wheel is set to incorrect number for powder type.	Make sure the measuring wheel is set to the correct number for your powder type. See page 5, Steps 1-2a.
Not dispensing water	Water Tank not fully seated.	Push Water Tank down all the way on Base.
Not dispensing water or formula. Yellow and Green Temp LEDs flash when start is pressed.	Powder Container Parts stuck	Turn off power, remove powder from Powder Container, check for and clear any obstructions, turn power back on and resume normal use.
Scaling on water tank heater plate.	Mineral rich water used persistently.	Clean heater plate and use mineral free water if possible.
Powder build-up on funnel cover and underside of powder container.	Frequent use without cleaning underside of powder container. See page 9, Step 3 for details.	Clean funnel cover and powder container bottom frequently after every 4 bottles.
Water Tank is full, red no water light 🚱 is on.	Water Tank not fully seated.	Push Water Tank down all the way on Base.

If you can not remedy problems with the machine by using the troubleshooting chart above, <u>do not return your Formula Pro®</u> to the store, <u>please contact Customer Service at 1-888-396-6552.</u> Any other servicing should be performed by an authorized service representative.

NOTES:

13