

Installation and Operating Instructions

Weather Alert Transmitter

Model WT-SS

Installation

1. The WT-SS Weather Alert Transmitter is designed to interface with a variety Weather Alert radios that include a normally open (or open collector) output.
2. Plug the cord on the weather transmitter into the alarm output jack located on the rear panel of the weather radio.



Operation

1. The WT-SS Weather Alert Transmitter will transmit as long as the weather receiver maintains the alert output and will stop transmitting when the alert output goes back to normal.
2. Transmission range is determined by which Signature Series transmitter you are using.
3. This weather transmitter is powered by two AA alkaline batteries (included). Actual battery life is determined by the amount of time the transmitter is transmitting. In normal use the batteries may be expected to last several years.
4. On the face of the transmitter is a Yellow LED (low battery indicator light) to let you know the battery is low and needs to be changed.

Address Switch Settings

The Silent Call system is digitally encoded. All Silent Call receivers and transmitters are tested and leave the factory programmed to a factory default address. ***You do not need to change the address unless someone in your area has Silent Call products and they are interfering with your equipment.***

1. Make sure that all Silent Call transmitters in the area are turned off.
2. Located on the back of the transmitter case is a removable access panel. Remove the access panel and take out the batteries. Note that you MUST remove the batteries first or the switch setting will not take effect.
3. Locate the address switch on the transmitter circuit board that has 5 small dip switches. Set the switches to any combination that you want. For Example: 1, 2 ON 3, 4, 5 OFF. This gives your transmitter an "address". Note: Do NOT set the switches to the all "ON" or all "OFF" position.
4. Reinstall the batteries and replace the access panel.
5. Refer to your specific Signature Series Receiver instruction manual for programming your receiver to your newly changed transmitter address.

Technical Support

For technical support on this or any other Silent Call product, please feel free to contact us. You can reach us by phone at 800-572-5227 (voice or TTY) or by Email at support@silentcall.com

Limited Warranty

Your transmitter is warranted to be free of defects in material and workmanship for five years from the date of initial purchase. During that time, the unit will be repaired or replaced free of charge when shipped prepaid to Silent Call Communications. This warranty is void if the defect is caused by customer abuse or neglect.



5095 Williams Lake Road, Waterford Michigan 48329

(800) 572-5227 v/tty (248) 673-7360 fax

Website: www.silentcall.com Email: silentcall@silentcall.com