



The TEX-BAR process controller offers a 5-digit numeric display as well as a 0-100% front panel bar graph, for instant, visualisation of your selected process variable.

This versatile unit accepts both current (0/4–20mA) and voltage (0–2/10V) inputs, allowing easy interface with a wide range of PLC and monitoring systems.



### Order Codes

<b>TEX-BAR</b>	Process controller + Bar graph
-HV	85–265V AC / 95–370V DC
-LV	15–48V AC / 10–72V DC

#### Options

-R2	2 x relay outputs
-R4	4 x relay outputs
-A	1 x mA/V analog output
-S2R	1 x RS232 (RJ11 terminal)
-S4S	1 x RS485 (screw terminal)

### Contents

<b>1 - Specifications</b>	2
<b>2 - Front Panel &amp; Display</b>	3
<b>3 - Wiring</b>	5
<b>4 - Dimensions &amp; Installation</b>	8
<b>5 - Input Header Adjustment</b>	10
<b>6 - Input Setup &amp; Calibration</b>	12
<b>7 - Setpoint Setup</b>	19
<b>8 - Setpoint Open Access</b>	22
<b>9 - Reset PIN Numbers / View Firmware Vsn</b>	22
<b>A - Appendix A - Serial Modes</b>	23

## 1

## SPECIFICATIONS

## Input

**Process input signal** 4–20mA, 0–20mA, 0–2V, or 0–10V

**Power supply**

HV= 85–265V AC / 95–370V DC, or  
LV= 15–48V AC / 10–72V DC

**Excitation** 24V DC (50mA max)

**Sampling rate** 10Hz

**Resolution** 16 bit

**Accuracy** 0.05% of reading

**Ambient drift** 50ppm/°C typical

**Mains frequency** Select 50/60Hz

## Relay Output

**OPTIONAL**

**Number of relay outputs** 0, 2, or 4

**Relay output type** 5A form A (3A 240V AC max or 3A 30V DC max)

## Analog Output

**OPTIONAL**

**Number of analog outputs** None or 1

**Analog output type** Isolated 16 bit  
4–20mA/0–10V

## Comm Port

**OPTIONAL**

**Number of comm ports** None or 1

**Comm port options**

S2R= Isolated RS232, RJ terminal, or  
S4S= Isolated RS485, screw terminal

## Programming

**Buttons** Up, Down & Prog (P) buttons

**Factory calibrated** for all input ranges.  
Set up for 4–20mA by default. (Header  
adjustment required for voltage input.)

**Security** Input and setpoint setups are  
independently PIN protected

## Display

**Display type** LED display with 0-100%  
bar graph (51 segments), 3 buttons

**LED indicators** 6 setpoint indicator LED's

**Digits** 1 row of 5 digits, 8mm (0.3"),  
7 segment alphanumeric LED

## Construction

**Casing** Panel mount case

**Ingress protection rating** IP65 dust/  
splash proof (face only)

**Dimensions (H x W x D)**

96 x 48 x 120mm (3.78 x 1.89 x 4.72")

**Panel cutout** 92 x 45mm (3.62 x 1.77")

## 2

## FRONT PANEL &amp; DISPLAY

## 2.1 - Front panel

● The SP LED's are used to indicate active setpoints.


▲ The 'Up' button is used to access the **Input Setup & Calibration** menu (Section 6).

It is also used to scroll through options or increase values in the setup menu.

P The 'Prog' button is used to save your settings and advance to the next step in the setup process.

▼ The 'Down' button is used to access the **Setpoint Setup** menu (Section 7) and the **Setpoint Open Access** menu (Section 8).

It is also used to scroll through options or decrease values in the setup menu.

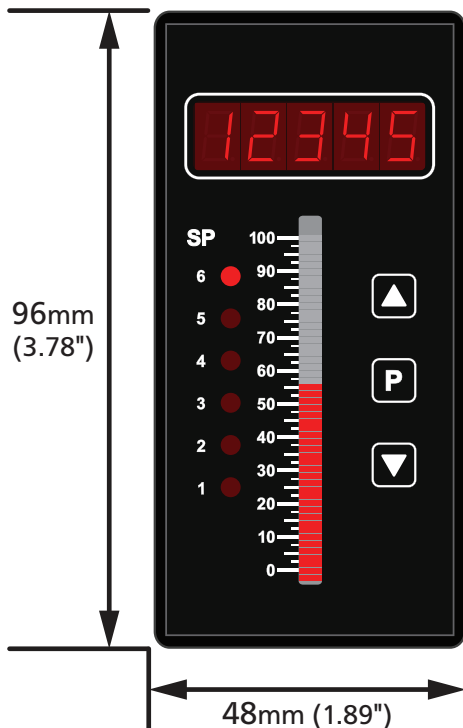

## 2.2 - Display brightness

To adjust the display brightness, press the P and ▲ buttons together from the main display. **BRI** appears and toggles with the current brightness setting.
































Use the ▲ and ▼ buttons to adjust the LED backlight, and then press P to finish.

---

## 2.3 - 7 Segment display characters

The 5 digit, 7 segment display is chiefly intended for displaying numbers. However when navigating the setup menus, alphabetic characters will also be displayed. This table is provided for your reference during setup, if required:

---

A	B	C	D	E	F	G
						
H	I	J	K	L	M	
						
N	O	P	Q	R	S	T
						
U	V	W	X	Y	Z	
						
!	?	/				
						

---

## 3


## WIRING

BEFORE YOU BEGIN WIRING, ensure that the unit is switched off and the power supply is disconnected.

## 3.1 - Pinouts

## Key


- 3.1A Analog Input (See 3.2)
- 3.1B Function Pins (See 3.6)
- 3.1C Power Supply HV/LV (See 3.7)
- 3.1D Relay Output (See 3.3)
- 3.1E Serial Port (See 3.5)
- 3.1F Analog Output (See 3.4)

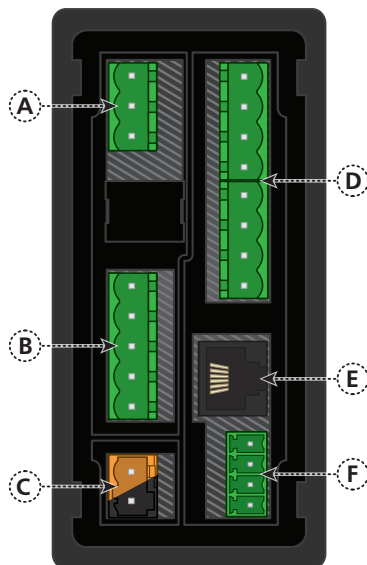

## 3.2 - Wire the analog input


See 3.1A

Wire the analog input as required for your application, referring to the diagrams below. (For instructions on changing the input type header, see Section 5).

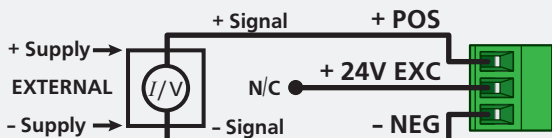**2-wire Current/Voltage Input***External excitation used*


### 2-wire Current Input

*Loop powered sensor*

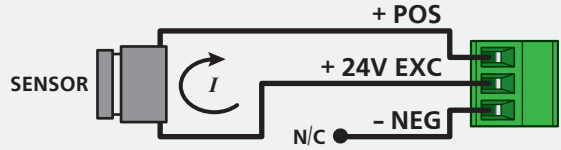

### 2-wire Current/Voltage Input

*Controller supplied excitation*

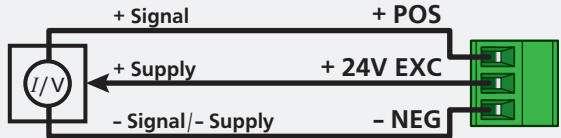


## 3.3 - Wire the relay outputs (if installed)


See 3.1D

If your controller has relay outputs installed, wire them as shown below. Relays can be programmed to operate within the total span range of the controller.

-R2

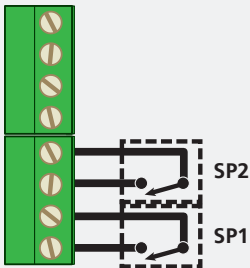

-R4

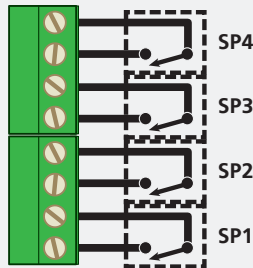


## 3.4 - Wire the analog output (if installed)

See 3.1F

If your controller has analog output installed, wire it as shown for either voltage (0–10V) or current (4–20mA).

 -A




### 3.5 - Wire the serial port (if installed)

See 3.1E

If your controller has serial port fitted, wire it as shown in the applicable diagram.

- › **S2R** RS232, RJ11 terminal
- › **S4S** RS485, screw terminal

#### -S2R (RS232)

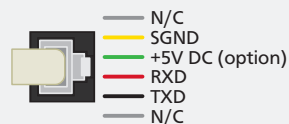

#### -S4S (RS485)




### 3.6 - Wire the function pins

See 3.1B

Connect external switches to enable a function to be executed when its switch is activated.

- › **Hold** Holds the current display value
- › **Test** Resets the meter

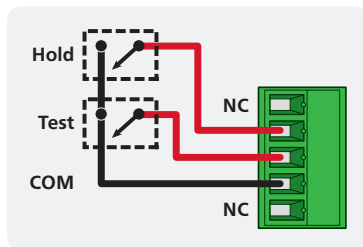


### 3.7 - Wire the power supply

See 3.1C

Wire your controller for either **low** or **high** voltage power supply, as shown in the diagrams below. Check the label on the unit against the colour of the connector:

- › **Orange** = High voltage  
(85–265V AC, 95–370V DC)
- › **Black** = Low voltage  
(15–48V AC, 10–72V DC)

Once you have completed the wiring process it is safe to switch on your power supply.


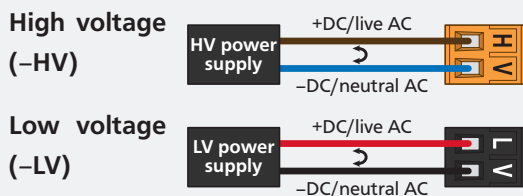


**NEVER CONNECT YOUR LOW VOLTAGE UNIT TO MAINS POWER.**

## 4

## DIMENSIONS &amp; INSTALLATION

## 4.1 - Case dimensions

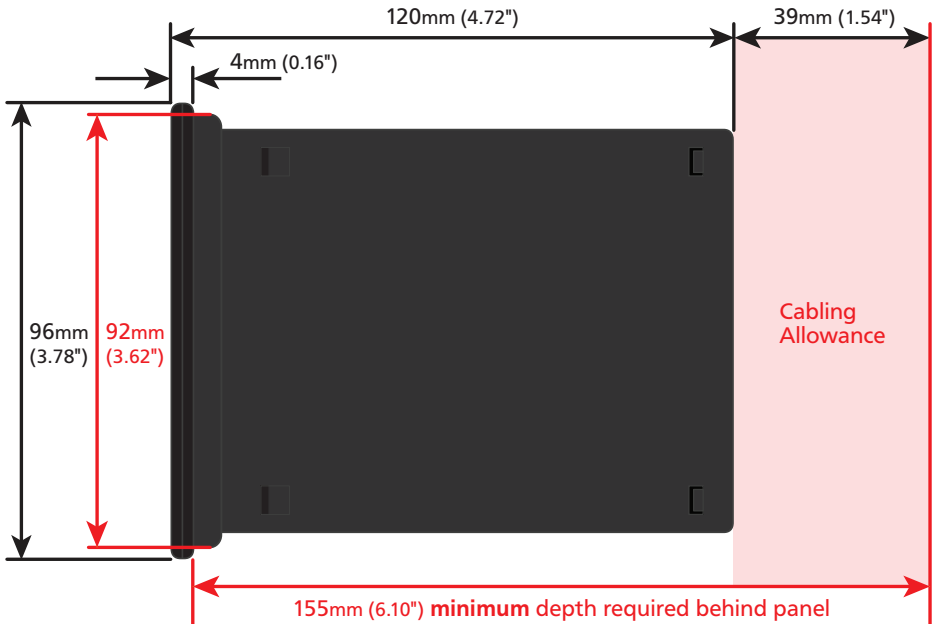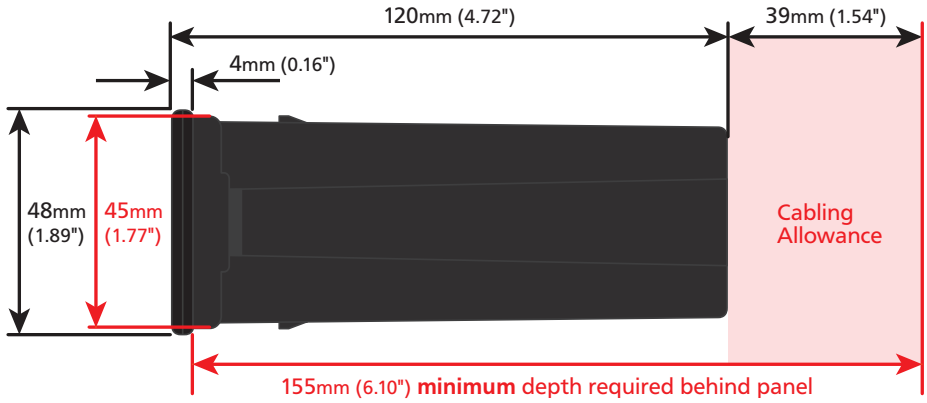





## 4.2 - Installation instructions

Before installing the unit in the panel, it is recommended that you **FIRST** read Section 5 to confirm that the input header does not need to be adjusted.

- A** Prepare the **Panel Cutout** to 45 x 92mm  $\pm 5$  (1.77 x 3.62"  $\pm 0.02$ ), as shown below.  
**Allow at least 155mm (6.10") depth behind the panel to accommodate the meter body and protruding cabling.**
- B** Remove the **Mounting Clips** from the meter back.
- C** Slide the **Panel Gasket** over the rear of the unit to the back of the **Meter Faceplate**.
- D** From the front of the panel, insert the meter into the **Panel Cutout**. Holding the unit in place, engage the **Mounting Clips** so that the tabs snap into place over the notches on the case.
- E** To achieve a proper seal, tighten the **Screws** evenly until the unit sits firmly against the panel. Do not over-tighten the screws.

Panel Cutout

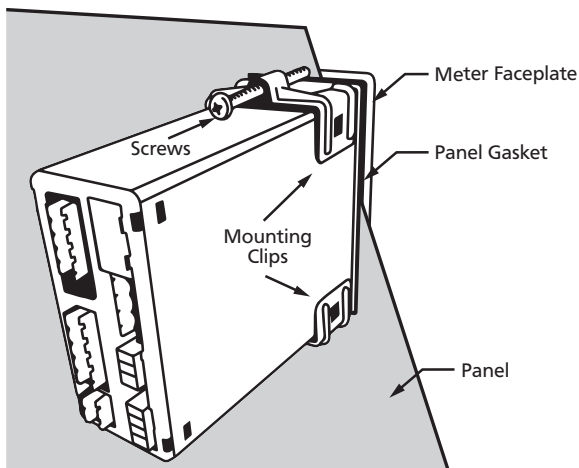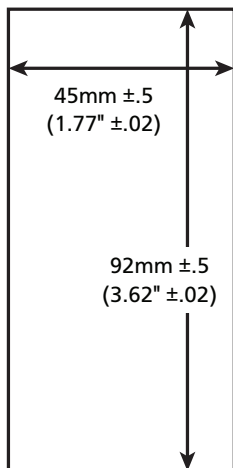

## 5

## INPUT HEADER ADJUSTMENT

The analog input board for the TEX-BAR has a header which can be set to 3 positions, depending on your input type and range, as per the table below:

Header Position	Used For
<b>20mA</b>	0–20mA and 4–20mA input ranges (default setting)
<b>2V</b>	0–2V input range
<b>10V</b>	0–10V input range

### 5.1 - Do I need to shift the input header?

In most cases the **input header does not need to be changed** from its default position of '20mA' (suitable for 0–20mA and 4–20mA inputs).

You **will** need to shift the input header if:

- › You are using the 0–2V or 0–10V input range, or
- › You are changing your input type or range from a previous setup


### 5.2 - How to shift the input header

**A** If the meter is already installed, remove it from the panel, and unplug all plugs from the back of the unit.

**B** Using a small screwdriver or similar implement, press downward into one of the slots at the rear of the case.


This will disengage the tab which holds the back plate on, allowing it to be gently levered away at one corner.

**C** Holding the loosened corner open with one hand, disengage the lever on the opposite slot.

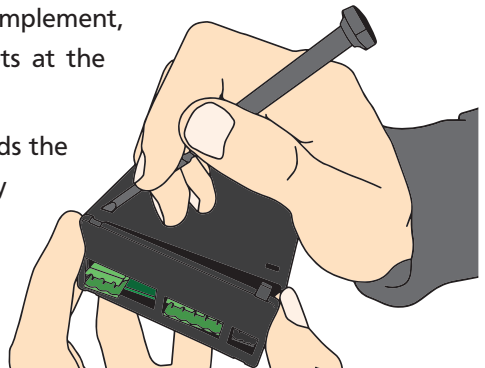


**D** You should now be able to remove the back plate. If it does not unclip easily, you may need to disengage the two remaining tabs by repeating steps 5.2B–C on the other side of the meter.

**E** Slide the analog input module out of the meter case. (See 3.1A to identify the input module.)

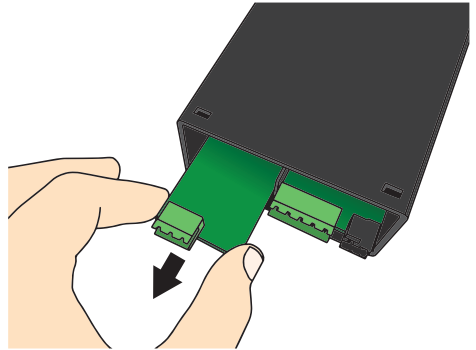

**F** Position the header on the input module as required for your input type and range:

- › **20mA** 0–20mA & 4–20mA
- › **Custom** Not used
- › **2V** 0–2V
- › **10V** 0–10V

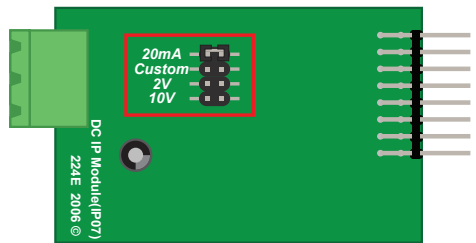

Note that you will also need to change the *Input Mode* in software from the front panel - see 6.2C.

**G** Slide the input module back into the meter case.

*Make sure that it is sitting in the tracks on the left and right. Press firmly until the input module is fully inserted and sits flush with the other boards that are visible from the back of the meter.*

**H** Replace the back plate.

*Begin by inserting the two lower tabs into the slots, and then position the upper tabs so that they will not catch on the top lip of the meter case. Apply firm pressure until the back plate clicks into place.*

**I** Reconnect the plugs and return the meter to the panel installation.




Don't forget that once the unit is connected and powered up, you will need to enter the **Input Setup** menu (6.2) and confirm that the correct *Input Mode* is also selected (see 6.2C).

## 6

## INPUT SETUP &amp; CALIBRATION

## 6.1 - Enter F1 PIN number




- A Enter the calibration mode by pressing the  button.




\_\_\_ **ENTER CAL PIN NUMBER** scrolls across the display and toggles with 0. Use the  and  buttons to enter your security code (factory default 1). Then press . If the correct PIN is entered, setup is started at 6.2.




If an incorrect PIN number is entered, \_\_\_ **INCORRECT PIN NUMBER – ACCESS DENIED** scrolls across the display and it returns to normal operating mode.

You will have the opportunity to change your PIN number at the end of this section (6.8). If you have forgotten your PIN number, see Section 9.




## 6.2 - Input setup




- A \_\_\_ **INPUT SETUP** scrolls across the display and toggles with **SKIP**. Press  to skip to 6.3, or the  button and then  to **ENTER** input setup.

- B \_\_\_ **MAINS FREQUENCY** scrolls across the display. Use the  and  buttons to select **50HZ** or **60HZ**, and then press .

- C \_\_\_ **INPUT MODE** scrolls across the display and toggles with the current selection. Use the  and  buttons to select: **4–20** (4–20mA), **0–20** (0–20mA), **2V** (0–2V) or **10V** (0–10V). Then press .

*Note that if you change the **INPUT MODE** in this step, then the input header on the analog input module may also need to be changed. See Section 5 for more information.*

- D \_\_\_ **DECIMAL POINT POSITION** scrolls across the display and toggles with the current selection. Use the  and  buttons to select **NO DP**, **0.1**, **0.12**, **0.123**, or **0.1234**, and then press  to accept and continue.

- E \_\_\_ **DISPLAY ROUNDING** scrolls across the display and toggles with the selected rounding. Using the  and  buttons, select: **NONE**, **2**, **5**, or **10**. Press .

Rounding is quoted in display counts and is not influenced by decimal point position. For example, if your input signal is 5.3mA, the display will show: 5.3 (for rounding=NONE), 5.4 (for rounding=2), 5.5 (for rounding=5), or 5.0 (for rounding=10).

## 6.3 - Calibration

**A** **\_\_\_ CALIBRATION TECHNIQUE** scrolls across the display and toggles with **SKIP**. Press **[P]** to skip to 6.4, or use the **[▲]** and **[▼]** buttons to select a calibration method: **AUTO**, **MAN** (manual), or **S.G.** (specific gravity). Then press **[P]**.

- ➔ If you selected **AUTO**, complete steps 6.3B–D now.
- ➔ If you selected **MAN**, complete steps 6.3E–F now.
- ➔ If you selected **S.G.**, complete step 6.3G now.
- ➔ If you selected **SKIP**, skip to 6.4 now.

**AUTO** (key-in) calibration uses zero and span values to calculate the scale and offset. This is the most accurate calibration method, but requires known low and high input signals (or the use of a calibrator).

**MAN** The manual calibration procedure uses low and high display values, and is intended for a pre-calibrated sensor with a known output range. (For example 4mA=0 and 20mA=1000.) It does not require any input signals to be applied to the controller during calibration.

**S.G.** - The specific gravity calibration procedure allows the user to enter a scale factor which is used to compensate for changes in the specific gravity of different substances.

**NOTE THAT THIS DOES NOT CONSTITUTE A FULL CALIBRATION, AND ASSUMES THAT EITHER AN AUTO OR MANUAL CALIBRATION HAS BEEN APPLIED PREVIOUSLY WITH THE S.G. VALUE SET TO 1.0.**

### Auto calibration

**B** **\_\_\_ APPLY LOW INPUT SIGNAL** - - - **-ENTER LOW DISPLAY VALUE** scrolls across and toggles with the current selection. Apply the required low input signal, and wait a moment for the signal to stabilise. Then, using the **[▲]** and **[▼]** buttons, enter your low display value, and press **[P]** to accept and continue.

**C** **\_\_\_ APPLY HIGH INPUT SIGNAL** - - - **-ENTER HIGH DISPLAY VALUE** scrolls across and toggles with the current selection. Apply the required high input signal, and wait a moment for the signal to stabilise. Then, using the **[▲]** and **[▼]** buttons, enter your high display value, and press **[P]**.




- D** If Auto calibration was successful, you will be directed out of the calibration menu to the operational display without viewing any further scrolling messages. (To proceed to step 6.4, you must select **SKIP** at 6.3A.)

If calibration fails, **\_\_\_ CALIBRATION FAILED** will scroll across the display and you will be directed back to the operational display. The most likely cause of this error is that the controller could not detect any change in input signal during calibration. Check your signal and connections, and repeat the procedure.



 
---

### Manual calibration

---

- E** **\_\_\_ ENTER DISPLAY VALUE FOR [LOW MA/V]** scrolls across the display, and toggles with the current low display value. Use the  and  buttons to adjust the display value for the low level input signal. Then press .

*The text string for [LOW MA/V] is determined by your INPUT MODE (selected in 6.2C): 0MA (for 0-20mA), 4MA (for 4-20mA) or 0V (for 0-2V/0-10V).*

- F** **\_\_\_ ENTER DISPLAY VALUE FOR [HIGH MA/V]** scrolls across the display, and toggles with the current high display value. Use the  and  buttons to adjust the display value for the high level input signal. Then press .




*The text string for [HIGH MA/V] is determined by your INPUT MODE (selected in 6.2C): 20MA (for 0/4-20mA), 2V (for 0-2V) or 10V (for 0-10V).*

Manual calibration is now complete. You will be directed back to the operational display. (To proceed to step 6.4, you must select **SKIP** at 6.3A.)

---

### Specific gravity scale factor

---

- G** **\_\_\_ SPECIFIC GRAVITY** scrolls across the display, and toggles with the specific gravity scale factor. Use the  and  buttons to adjust this value as required, and then press .


Specific gravity scaling now complete. You will be directed back to the operational display. (To proceed to step 6.4, you must select **SKIP** at 6.3A.)

**Note that altering the SPECIFIC GRAVITY scale factor does not constitute a full calibration, and assumes that either AUTO or MAN calibration has been applied previously with the S.G. value set to 1.0.**

## 6.4 - Averaging

Your controller has input signal averaging, optimising stable measurement.

If the change in input exceeds the averaging window value it will not average, ensuring fast response when there are large differences between readings.

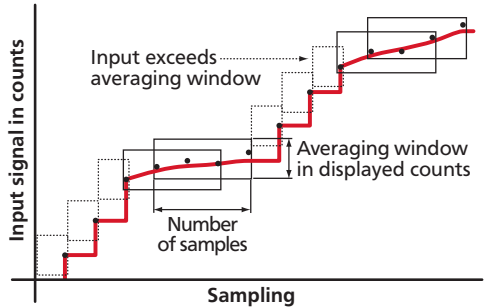

**A** **\_\_\_ AVERAGING PARAMETERS** scrolls across and toggles with **SKIP**. Press **[P]** to skip to 6.5, or the **[▲]** button and then **[P]** to **ENTER** averaging setup.

**B** **\_\_\_ AVE SAMPLES** scrolls across the display and toggles with the currently selected averaging. Using the **[▲]** and **[▼]** buttons, alter the number of input samples that the controller will average, and then press **[P]**.

*Increasing the number of samples will stabilise measurement, but it will also slow down response rates. A typical value is 4.*

**C** **\_\_\_ AVE WINDOW** scrolls across the display and toggles with the currently selected averaging window value. Using the **[▲]** and **[▼]** buttons, alter the signal averaging window. Then press **[P]**.










*If your input signal contains large noise spikes, you can increase the size of the averaging window to ensure that these are still averaged. However, increasing the window size too far will reduce the ability of the controller to respond quickly to real changes in input signal. Setting **AVE WINDOW** to 0 will give continuous averaging as per the selected averaging samples. A typical value is 10% of your system capacity.*

## 6.5 - Analog output setup

*N.B. All new units are calibrated before shipping. Recalibration is **only** necessary if settings are wiped or the unit's accuracy requires verification after a long period of use. e.g. 1 year.*







**A** **\_\_\_ ANALOG OUTPUT SETUP** scrolls across the display and toggles with **SKIP**. If your controller does not have analog output installed, (or you do not wish to configure your analog output now), press **[P]** to skip to 6.6.

Otherwise, press the **[▲]** button and then **[P]** to **ENTER** analog output setup.

- B** \_\_\_ **LOW SCALE VALUE FOR ANALOG OUTPUT** scrolls across the display and toggles with the currently selected low scale display value. Use the  and  buttons to enter your cal low position, and then press .
- C** \_\_\_ **HIGH SCALE VALUE FOR ANALOG OUTPUT** scrolls across the display and toggles with the currently selected high scale display value. Use the  and  buttons to enter your cal high position, and then press .
- D** \_\_\_ **CALIBRATE ANALOG OUTPUT?** scrolls across the display and toggles with **SKIP**. Press  to skip, or the  button and then  to **ENTER** and calibrate your analog output.




**Factory analog output calibration is precisely set before shipping this instrument, and should not be adjusted unless advised by the manufacturer.**

- ➔ If you selected **ENTER**, connect a mA or volt meter across the analog output connector (see 3.4), and then continue to 6.5E.
- ➔ If you selected Skip, skip to 6.6 now.




- E** \_\_\_ **CAL LOW ANALOG OUTPUT** scrolls across the display and toggles with a calibration number shown in internal units (around -16000). Press the  or  buttons until the multimeter displays your target low output (e.g. 4mA), then press .
- F** \_\_\_ **CAL HIGH ANALOG OUTPUT** scrolls across the display and toggles with a calibration number shown in internal units (around 30000). Press the  or  buttons until the multimeter displays your target low output (e.g. 4mA), then press .










---

## 6.6 - Serial setup

- A** \_\_\_ **SERIAL SETUP** scrolls across the display and toggles with **SKIP**. If your controller does not have a serial port installed, (or you do not wish to configure your serial options now), please press  to skip to 6.7. Otherwise, press the  button and then  to **ENTER** serial setup.
- B** \_\_\_ **SERIAL MODE** scrolls across the display and toggles with the current serial









mode. Use the  and  buttons to choose between: **ASCII** (custom), **MDBS** (Modbus RTU), or **RNGRA** (Ranger A), and then press .




- C** \_\_\_ **BAUD RATE** scrolls across the display and toggles with the current selection. Use the  and  buttons to select one of: **300**, **600**, **1200**, **2400**, **4800**, **9600**, **19200** or **38400**. Then press .
- D** \_\_\_ **PARITY** scrolls across the display and toggles with the currently selected parity. Using the  and  buttons, select: **NONE**, **ODD** or **EVEN**, and then press .
- E** \_\_\_ **SERIAL ADDRESS** scrolls across the display and toggles with the currently selected serial address. Use the  and  buttons to alter the serial address, and then press .

*The serial address parameter is used to identify a particular device when it is used with other devices in a system. (It applies particularly to **MODBUS** mode when used on an RS485 serial network.) The serial address of the controller must be set to match the serial address defined in the master device.*

Refer to Appendix A for more information on serial modes and registers.







## 6.7 - Bar graph setup

- A** \_\_\_ **BAR GRAPH SETUP** scrolls across the display and toggles with **SKIP**. Press  to skip to 6.8, or the  button and then  to **ENTER** and configure your bar graph display.
- B** \_\_\_ **LOW SCALE VALUE FOR BAR GRAPH** scrolls across the display and toggles with the current low scale bar graph setting. Use the  and  buttons to enter the low scale value (in display counts), and then press .
- C** \_\_\_ **HIGH SCALE VALUE FOR BAR GRAPH** scrolls across the display and toggles

with the current high scale bar graph setting. Use the  and  buttons to enter the high scale value (in display counts), and then press .

---

## 6.8 - Edit Cal PIN number

- A** **\_\_\_ EDIT CAL PIN NUMBER** scrolls across the display and toggles with **SKIP**. Press  to skip and return to the operational display, or the  button and then  to **ENTER** and change your PIN number.
- B** **\_\_\_ ENTER NEW CAL PIN NUMBER** scrolls across the display and toggles with the current PIN (default 1). Using the  and  buttons, enter your new Cal PIN number. Then press  to exit to the operational display.





## 7

## SETPOINT SETUP

The software in your controller will allow you to configure up to 4 setpoints, however full functionality is only supported when relay output hardware installed.

(Setpoints with no corresponding relay output hardware may be used as simple LED indicators, if desired. In this case, features requiring relay output functionality will continue to appear in the setup menu, but will be ignored by the controller.)











## 7.1 - Enter SP PIN number

- A Enter setpoint setup mode by pressing and holding the  button for 3 seconds. **\_\_\_ ENTER SP PIN NUMBER** scrolls across the display and toggles with **0**. Use the  and  buttons to enter your security code (factory default 1). Then press .




If an incorrect PIN number is entered, **\_\_\_ INCORRECT PIN NUMBER – ACCESS DENIED** scrolls across the display, and it returns to normal operating mode.

You will have the opportunity to change your PIN number at the end of this section (7.3). If you have forgotten your PIN number, see Section 9.


## 7.2 - Setpoint setup

- A **\_\_\_ EDIT SETPOINT** scrolls across the display and toggles with **SKIP**. Press  now to skip to 7.3, or use the  and  buttons to select a setpoint to edit, and then press .
- B **\_\_\_ SP VALUE** scrolls across the display and toggles with the current value for the selected setpoint. Using the  and  buttons, adjust the display value at which the selected setpoint will activate, and then press .
- C **\_\_\_ SP ACTIVATION** scrolls across the display and toggles with the activation for the selected setpoint. Using the  and  buttons, select the relay activation to operate **ABOVE** or **BELW** (below) the setpoint value, and then press .


**ABOVE:** Relay turns on above the setpoint value and off below it. **BELW:** Relay turns on below the setpoint value and off above it.

 
 

- D** **\_\_\_ SETPOINT TYPE** scrolls across the display and toggles with the current selection. Using the  and  buttons, select either **ALRM** (alarm) or **CNTRL** (control), and then press .

**ALRM - SETPOINT VALUE** controls setpoint activation point. **HYSTERESIS VALUE** controls setpoint deactivation point.

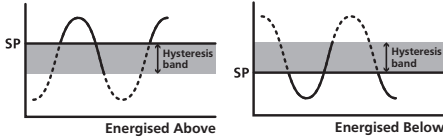




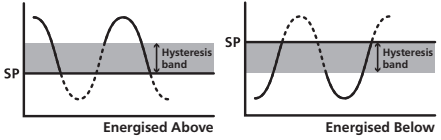


**CNTRL - SETPOINT VALUE** controls setpoint deactivation point. **HYSTERESIS VALUE** controls setpoint reactivation point.




 - E** **\_\_\_ HYSTERESIS VALUE** scrolls across the display and toggles with the hysteresis value for the selected setpoint. Use the  and  buttons to adjust this value if required, and then press .

The **HYSTERESIS VALUE** defines the separation band between setpoint activation and deactivation, and will operate as per the **SETPOINT TYPE** setting selected in 7.2D.



 
- F** **\_\_\_ MAKE DELAY** scrolls across the display and toggles with the current make delay time for the selected setpoint. This is the time delay between setpoint activation, and when the relay turns on. Adjust this value in 0.1 second increments using the  and  buttons, and then press .

- G** **\_\_\_ OPEN ACCESS TO SP VALUE** scrolls across the display and toggles with the open access permission setting for the selected setpoint. Use the  and  to select either **NO** or **YES**, and then press .





 When enabled, this option allows the selected setpoint's value to be edited directly after pressing the  button, without needing to enter a PIN number or go through all of the other options. Each setpoint can individually have this option enabled or disabled. See Section 8.

- H** The step that you proceed to now will depend on which setpoint you are editing (selected in 7.2A):

- ➔ If you are currently editing **SP 1**, skip to 7.2J now.
- ➔ If you are currently editing **SP 2–4**, continue to 7.2I now.

 





- I **\_\_\_ TRAIL SP1** scrolls across the display and toggles with the tracking setting for the selected setpoint. Using the  and  buttons, select **OFF** or **ON**, and then press .

*A setpoint with **TRAIL SP1** enabled will track the setpoint value of **SP 1**, with the setpoint value of the tracking setpoint becoming an offset value.*

- J **\_\_\_ SHOW SP ON BAR** scrolls across the display and toggles with the current setting. If you enable this feature, then the selected setpoint's value will be marked on the graph by a single bar. Multiple setpoints may have this option enabled. Use the  and  buttons to select **NO** or **YES**, and then press .
- K **\_\_\_ EDIT SETPOINT** scrolls across the display and toggles with **SKIP**. You are now back at 7.2A. To edit another setpoint, follow the instructions from 7.2A–K again. If you do not wish to edit another setpoint, press  now to skip to 7.3.


---






## 7.3 - Edit SP PIN number

 - A **\_\_\_ EDIT SP PIN NUMBER** scrolls across the display and toggles with **SKIP**. Press  to skip and return to the operational display, or the  button and then  to **ENTER** and change your PIN number.
- B **\_\_\_ ENTER NEW SP PIN NUMBER** scrolls across the display and toggles with the current PIN (default 1). Using the  and  buttons, enter your new SP PIN number. Then press  to exit to the operational display.

## 8

## SETPOINT OPEN ACCESS

If none of the setpoints have their open access option enabled then this feature will be disabled and the  button will not respond to a short button press. (See 7.2G.)




- A Begin by pressing the  button for less than 3 seconds.
- B The name of the first access-enabled setpoint will appear on the display and toggle with the current value for that setpoint. Using the  and  buttons, adjust the selected value. Then press  to accept and continue.
- C The name of the next access-enabled setpoint will appear on the display, along with its setpoint value. Repeat step 8B. The open access menu will proceed through all access-enabled setpoints in this fashion. Pressing  for the last enabled setpoint will exit and return to the operational display.

## 9

## RESET PIN NUMBERS / VIEW FIRMWARE VERSION

If you have forgotten your PIN number(s), follow the procedure below to reset both the Cal and SP PINs to their factory default of 1.

This procedure will also allow you to view the current software installed on your controller, which may be required for support purposes.

- A Press ,  and  at the same time. (This key combination can be difficult to execute and you may need several tries to get it right.)
- B A message will appear on the display, with details of the unit's current software configuration (Product Name, Firmware Version, and Macro Version). At the end, you will see **\_\_\_ ALL PIN NUMBERS RESET TO 1.**
- C Both the Cal PIN number and the SP PIN number have now been reset to '1'. You can change this, if required, by following the instructions in 6.8 (for the Cal menu) and 7.3 (for the SP menu), using '1' to enter each menu initially.

## A.1 - Custom ASCII mode

Custom ASCII is a simple, custom protocol that allows connection to various PC configuration tools. ('Custom ASCII' differs from the 'Modbus (ASCII)' protocol used by some devices.) Custom ASCII command strings must be constructed in this order:

**<Start> <Controller Address> <Read/Write Command> <Register Address>  
<Separator Character> <Data Value> <Message Terminator>**

**Start** - Use 'S' for the start character of a command string (not case sensitive). This must be the first character in the string.

**Controller Address** - Use an ASCII number from '1' to '255' for the controller address. If the character following the start character is not an ASCII number, then address '0' is assumed. All controllers respond to address '0'.

**Read/Write Command** - Use ASCII 'R' for read, 'U' for unformatted read, or 'W' for write (not case sensitive). Any other character aborts the operation.

*In Custom ASCII mode, data is normally read as formatted data (which includes decimals and any text characters that may be selected to show units). However it is also possible to read unformatted data by using a 'U' in the read command. There is no unformatted write command, as when writing to fixed point registers, any decimal point and text characters are ignored.*

**Register Address** - The register address for the read/write operation will be an ASCII number from '1' to '65535'. This character must be specified for a write command, but may be omitted for a read command, (in which case the controller will respond with the data value currently on the display).

**Separator Character** - The separator character can be either a space or a comma, and is used to separate the register address from the data value.

**Data Value** - Must be an ASCII number. The absolute limits for this number are -1000000 to +1000000, but note that not all registers will accept this range.

**Message Terminator** - This is the last character, and must be either a '\$' (dollar) or an '\*' (asterisk). Neither of these characters should be used elsewhere in the message string. If '\$' is used, a 50ms minimum delay is inserted before a reply is sent. If '\*' is used, a 2ms minimum delay is inserted before a reply is sent.

---

### Custom ASCII Read/Write Examples

Example	Description
<b>SR\$</b>	Read display value from all controllers, 50ms delay.
<b>S15R\$</b>	Read display value from controller address 15, 50ms delay.
<b>S3U40*</b>	Read unformatted data in channel 4 from controller address 3, 2ms delay.
<b>S2W2 -10000\$</b>	Write -10000 to the display register of controller address 2, 50ms delay.
<b>SWT CHAN_1\$</b>	Write ASCII text string Chan_1 to channel 1 text register, 50ms delay.

---

### Custom ASCII Registers

#### 16 Bit Unsigned

Address	Function
<b>1</b>	Alarm status (SP1=Bit 0, SP2=Bit 1, SP3=Bit 2, SP4=Bit 3)
<b>65-68</b>	Hysteresis (SP1=65, SP2=66, SP3 =67, SP4=68)
<b>71-74</b>	Make delay (SP1=71, SP2=72, SP 3=73, SP4=74)

#### 32 Bit Signed

Address	Function
<b>2</b>	Process display
<b>12</b>	Peak
<b>13</b>	Valley
<b>6-9</b>	Setpoint 1-4 (SP1=6, SP2=7, SP3 =8, SP4=9)
<b>34</b>	D/A scale low value
<b>36</b>	D/A scale high value

---

**Controller Response** - After the controller has completed a read or write instruction, it responds by sending a carriage return/line feed (CR/LF) back to the host. If the instruction was a read command, the CR/LF follows the last character in the ASCII string. If it was a write command, CR/LF is the only response sent back. The host must wait for this before sending further commands to the controller. If the controller encounters an error, it will respond with a null (0x00) CR/LF.

---

## A.2 - Modbus (RTU) mode

Modbus (RTU) is an industry standard RTU slave mode that allows connection to a wide range of devices. Modbus registers are all holding registers, and should be accessed via function codes 3 and 6.



Register addresses are displayed in the Modicon™ 5-digit addressing format. I.e. Register 65=40065 (subtract 1 for direct addressing).

### Modbus (RTU) Registers

#### 16 Bit Unsigned

Address	Function
40001	Alarm status (SP1=Bit 0, SP2=Bit 1, SP3=Bit 2, SP4=Bit 3)
40065–40068	Hysteresis (SP1=40065, SP2=40066, SP3=40067, SP4=40068)
40071–40074	Make delay (SP1=40071, SP2=40072, SP3=40073, SP4=40074)

#### 32 Bit Signed (2 x 16 Bit)

LSW	MSW	Function
40513	40514	Process display
40525	40526	Peak
40527	40528	Valley
40535 –541	40536 –542	Setpoint 1–4 (SP1=40535, SP2=40537, SP3=40539, SP4=40541)
40587	40588	D/A scale low value
40591	40592	D/A scale high value

## A.3 - Ranger A mode

Ranger A is a continuous output, used to drive remote displays and other instruments in the Rinstrum™ range. (Ranger is a trade name belonging to Rinstrum Pty Ltd.) Ranger A output strings are constructed as shown:

**<Start> <Sign> <Output Value> <Status> <End>**

**Start** - STX character (ASCII 02)

**Sign** - Output value sign (space for + and dash for -)

**Output Value** - Seven character ASCII string containing the current output value and decimal point. (If there is no decimal point, then the first character is a space. Leading zero blanking applies.)

**Status** - Single character output value status. 'U'=Under, 'O'=Over, 'E'=Error.

**End** - ETX character (ASCII 03)








---

## Define Instruments

### New Zealand (Head Office)

 10B Vega Place, Rosedale,  
Auckland 0632, New Zealand  
PO Box 245 Westpark Village,  
Auckland 0661, New Zealand

Ph: +64 (9) 835 1550

Fax: +64 (9) 835 1250

 [sales@defineinstruments.co.nz](mailto:sales@defineinstruments.co.nz)

[www.defineinstruments.co.nz](http://www.defineinstruments.co.nz)

### United States (Dallas, TX)

Ph: (214) 926 4950

 [sales@defineinstruments.com](mailto:sales@defineinstruments.com)

[www.defineinstruments.com](http://www.defineinstruments.com)

---