


LME71.111AxPKG

Single burner controller with programmable purge time.

LME71.111A1PKG (110V) consists of; LME71.000A1, PME71.111A1, AGG3.710

Wiring schematic

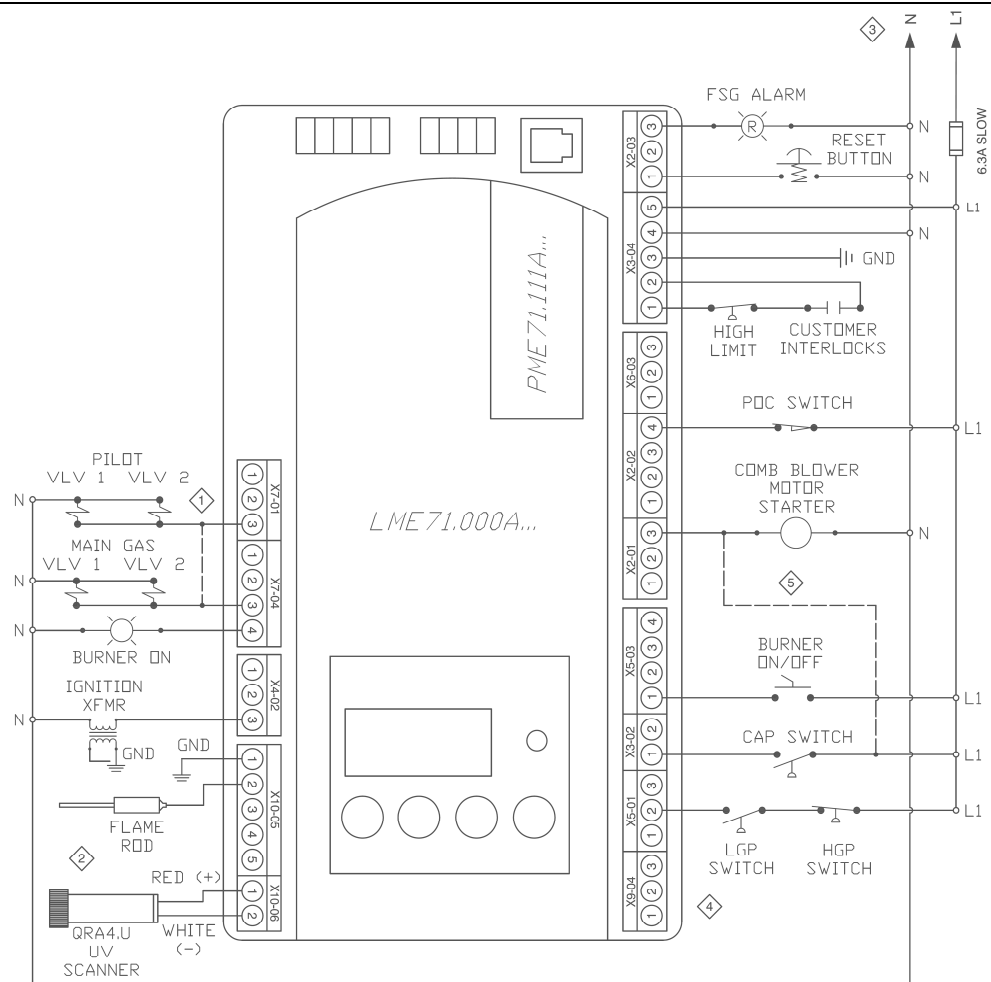

Notes

- ① Jumper between X7-01-3 and X7-04-3 for direct spark ignition.
- ② Wire flame rod or UV scanner (QRA4.U), not both.
- ③ 120V 50/60 (LME71.000A1); 230V 50/60 (LME71.000A2).
- ④ Do not connect wires to any unused terminals.
- ⑤ When LME7 isn't controlling combustion air blower, wire combustion air switch between X2-01-3 & X3-02-1. Be sure to remove X2-01-3 to N, and X3-02-1 to L1.

